



Thank you for your purchase of Premio OSS224-D5 Storage Server System!

1. Check the Content of the box. Please confirm that your package contains the following:


#	Description	Image / Description	Qty
1	OSS224S Enclosure		1
2	Motherboard	Tyan S7100GM2NR	1
3	CPU and memory	Intel Skylake and DDR4	Opt.
4	IO Cards		Opt.
5	Heatsink		2
6	2x 2.5" Drive Bay		Opt.
7	Slide Rail Kit + Screws		1 set
8	Power Cable*		2
9	Serial Cable*		1

* Inside the accessories box. Box may consist of screw sets for rail kit or drives. If any items are missing, please contact your reseller or sales rep.


2. Get Familiar with the Unit.

OSS224-D5 is a storage server supporting dual Intel processor and front tray-less 24x 2.5" HDDs, an optional rear 2x 2.5" OS drive in a 2U space. Tyan S7100GM2NR and internal cabling are preinstalled. Other motherboard model, IO cards, CPU, and memory can be preinstalled upon request.


Front view of the unit

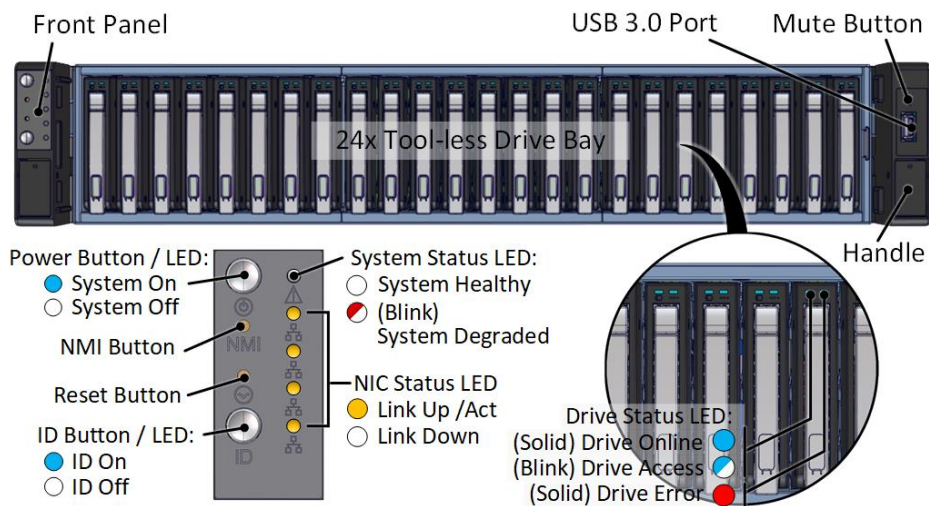

Rear view of the unit

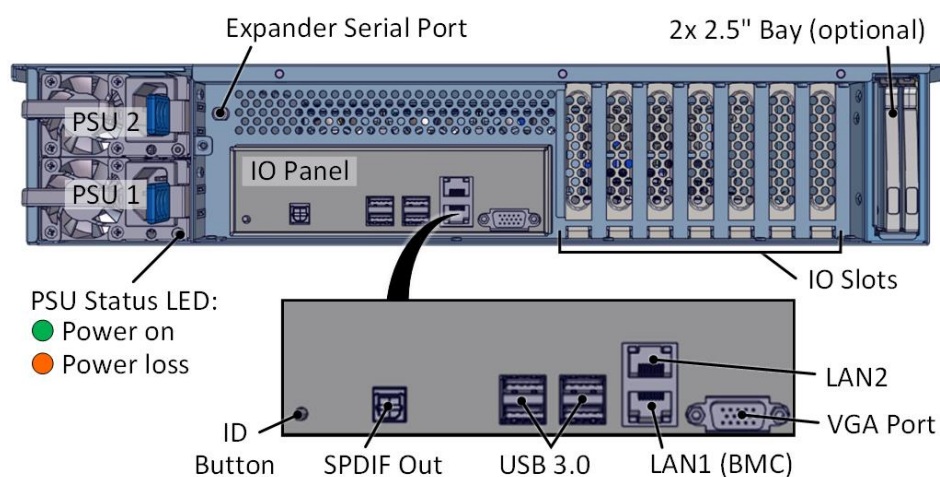


3. Remove the Top Covers of the unit as follows:

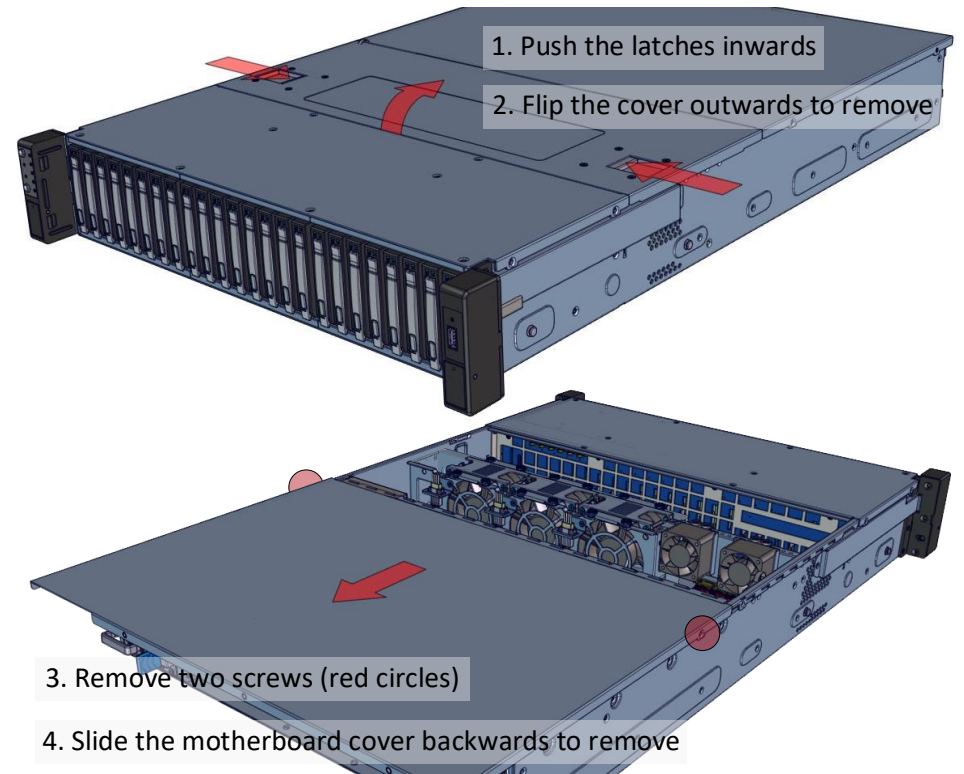


Remove the middle cover to get access to internal fans. The rear cover is for motherboard access.

4. Inspect the Inside of the unit. Internal components comprise of a Tyan motherboard, an expander board, an optional rear 2x 2.5" bay, 3x motherboard fan modules and 2x IO card fan modules (all connected to the motherboard).

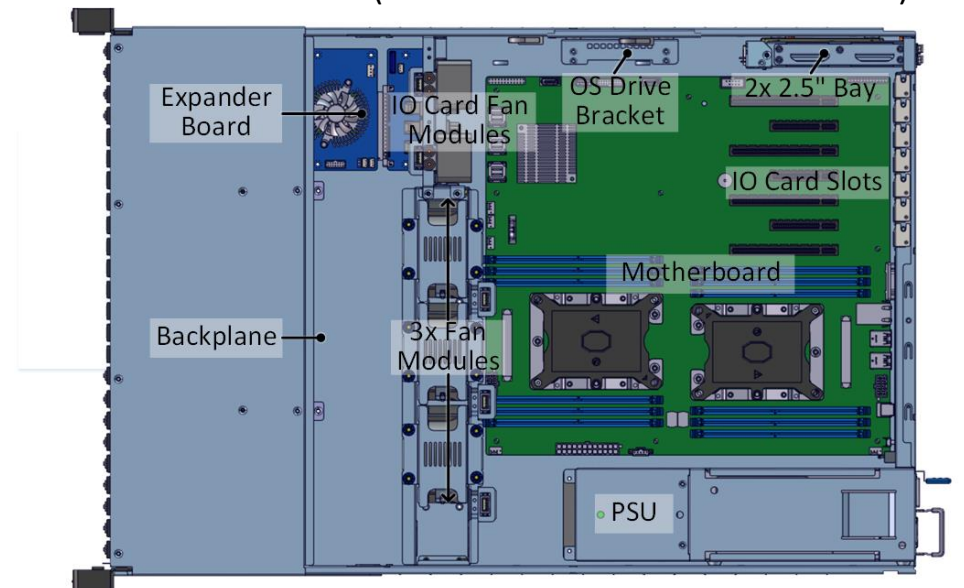

See two options below to install OS disks.

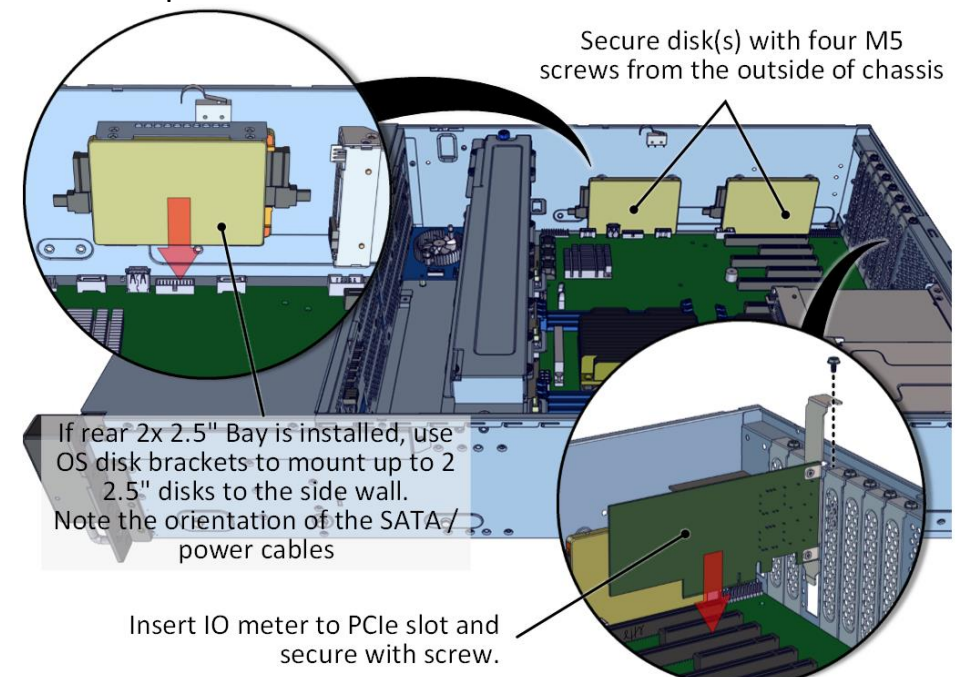

Installation and service of this product should be conducted by a trained personnel to avoid bodily injury from electric shock or heavy object



Observe ESD (Electrostatic Discharge) practices during integration to avoid possible damage to the board and / or other components

5. Install Motherboard Components (CPU, heatsink, memory) using the guidelines below. For further details, refer to the motherboard TPS.

- Support Intel Xeon Skylake Processor Family
- 2x LGA3647 Sockets
- Max up to 205W TDP
- Intel C621 PCH Chipset

- 6+6 DDR4 RDIMM/LRDIMM 2666
- Up to 384GB RDIMM / 768GB LRDIMM / 1536GB RDIMM 3DS
- 6 Channels per CPU, 1.2V
- Populate from A0 → F0

- PCIe1, PCE3 (Gen3x16), PCIe2 (Gen3x8) f/ CPU0
- PCIe5, PCE7 (Gen3x16), PCIe4, PCIe6 (Gen3x8) f/ CPU1

6. Remove the Inner Rail from the slide rail.

- 1-2 Pull the inner rails out. Pull the blue release tab when it hits a stop.
- 3-4 Keep extending inner rail and pull the white detach tab when it hits the second stop
- 5-6 Unretract the mid rail by pulling the latch on the mid rail

7. Install Inner Rails to the enclosure.

Yellow circles are for standoff screws

Secure inner rail with M4x4L screw (red)

To remove Inner rail from unit: Pull the latch outward and remove the keyhole from standoff

8. Install the Outer Rails to the Rack as follows:

Red rectangles are locations for slide rail position (front and rear posts)

Yellow circles are location for enclosure screws (front only)

2U

1U

- 1-2 Snap the rear part of slide rail to rear posts
- 3-4 Snap the front part of slide rail to front posts

Rear Bracket

Front Bracket

To remove slide rails, use the latches to undo the assembly as follows:

Rear Bracket

Front Bracket

8. Install the Unit to the Rack as follows:

- 1 Pull the mid rail fully extended in lock position, ensure ball bearing retainer is located at the front of the mid rail
- 2 Pull the blue release tab when it hits a stop (2 times)
- 3 Push the unit into rack to complete the installation
- 4 Secure the unit with the 6-32 x15L screws

For a complete instruction on how to install unit to the rack, please follow the Slide Rail Installation Guide.




At least two people are recommended for mounting process.

9. Install 2.5" Drives to the enclosure as illustrated:

- 1 Push the button to release the handle
- 2 Pull the drive bay out by the handle
- 3 Insert the drive right side first as illustrated
- 4 Snap the drive to the tray
- 5 Secure HDD to the tray (red circles)

10. Plug in the Power Cords to the AC receptacles on the back of the unit.

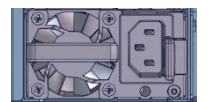

11. Press the Power Button on the front of the unit and for the system to boot up.



12. Access the Serial Console (when necessary) by connecting a serial audio cable to the one of the console ports. Pull out the drawer for serial port access. See picture for detail. Use a terminal console with baud set 38400, 8, N, 1, N.

Type "help -a" for a list of commands.

