

USER'S MANUAL

RCO-3400 Series

Advanced Fanless Embedded System



Table of Contents

Prefaces	04
Revision	04
Disclaimer	04
Copyright Notice	04
Trademarks Acknowledgment	04
Environmental Protection Announcement	04
Safety Precautions	05
Technical Support and Assistance	06
Conventions Used in this Manual	06
Package Contents	07
Ordering Information	07
Optional Accessory	09
Chapter 1 Product Introductions	10
1.1 Overview	11
1.1.1 Key Feature	11
1.2 Hardware Specification	12
1.3 System I/O	13
1.3.1 RCO-3400	13
1.3.2 RCO-3400-4L(P)	15
1.3.3 RCO-3400-4L(P)-M12	17
1.3.4 RCO-3411E(P)	19
1.3.5 RCO-3411E-4L(P) / RCO-3411P-4L(P)	21
1.3.6 RCO-3411E-4L(P)-M12 / RCO-3411P-4L(P)-M12	23
1.3.7 RCO-3422EE(PP)	25
1.3.8 RCO-3422EE-4L(P) / RCO-3422PP-4L(P)	27
1.3.9 RCO-3422EE-4L(P)-M12 / RCO-3422PP-4L(P)-M12	29
1.4 Mechanical Dimensions	31
1.4.1 RCO-3400 / RCO-3400-4L(P) / RCO-3400-4L(P)-M12	31
1.4.2 RCO-3411E(P) / RCO-3411E(P)-4L(P) / RCO-3411E(P)-4L(P)-M12	32
1.4.3 RCO-3422EE(PP) / RCO-3422EE(PP)-4L(P) / RCO-3422EE(PP)-4L(P)-M12	33
Chapter 2 Switches and Connectors	34
2.1 Switch and connector Locations	35
2.1.1 Top View	35
2.1.2 Bottom View	36
2.2 Connector / Switch Definition	37
2.3 Switch Definitions	38
2.4 Connector Definitions	40

Chapter 3	System Setup	50
3.1	Set torque force to 3.5 kgf-cm to execute all the screwing and unscrewing	50
3.2	Removing chassis bottom cover	51
3.3	Removing PCIe/PCI expansion module	52
3.4	Installing SODIMM	53
3.5	Installing HDD on internal SATA HDD bay	55
3.6	Installing HDD on removable SATA HDD bay	57
3.7	Installing mini PCIe / mSATA card	58
3.8	Installing antenna	59
3.9	Installing PCIe/PCI expansion card	61
3.10	Assemble PCIe/PCI expansion module	63
3.11	Assemble chassis bottom cover	64
3.12	Assemble SIM card	65
3.13	Assemble wall mount kit	66
3.14	Assemble DIN rail holder	68
Chapter 4	BIOS Setup	69
4.1	BIOS Introduction	70
4.2	Main Setup	71
4.3	Advanced Setup	72
4.3.1	CPU Configuration	73
4.3.2	PCH-FW Configuration	74
4.3.3	SATA and RST Configuration	74
4.3.4	RST (UEFI RAID) Configuration	75
4.3.5	Trusted Computing	77
4.3.6	ACPI Settings	77
4.3.7	Super IO Configuration	78
4.3.8	Hardware Monitor	81
4.3.9	Serial Port Console Redirection	82
4.3.10	Stack Configuration	82
4.3.11	CSM Configuration	82
4.3.12	USB Configuration	82
4.4	Chipset	88
4.4.1	System Agent (SA) Configuration	85
4.4.2	PCH-IO Configuration	87
4.5	Security	90
4.6	Boot	91
4.7	Save & Exit	92
Appendix	WDT & GPIO	93
	WDT Sample Code	94
	GPIO Sample Code	95

Prefaces

Revision

Revision	Description	Date
1.0	Manual released	2019/08/14

Disclaimer

All specifications and information in this User's Manual are believed to be accurate and up to date. Premio Inc. does not guarantee that the contents herein are complete, true, accurate or non-misleading. The information in this document is subject to change without notice and does not represent a commitment on the part of Premio Inc.

Premio Inc. disclaims all warranties, express or implied, including, without limitation, those of merchantability, fitness for a particular purpose with respect to contents of this User's Manual. Users must take full responsibility for the application of the product.

Copyright Notice

All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, without the prior written permission of Premio Inc. Copyright © Premio Inc.

Trademarks Acknowledgment

Intel®, Celeron® and Pentium® are trademarks of Intel Corporation.

Windows® is registered trademark of Microsoft Corporation.

AMI is trademark of American Megatrend Inc.

IBM, XT, AT, PS/2 and Personal System/2 are trademarks of International Business Machines Corporation

All other products and trademarks mentioned in this manual are trademarks of their respective owners.

Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. Please recycle to minimize pollution and ensure environment protection.



Safety Precautions

Before installing and using the equipment, please read the following precautions:

- Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
- The power outlet shall be installed near the equipment and shall be easily accessible.
- Turn off the system power and disconnect the power cord from its source before making any installation. Be sure both the system and the external devices are turned OFF. Sudden surge of power could ruin sensitive components. Make sure the equipment is properly grounded.
- When the power is connected, never open the equipment. The equipment should be opened only by qualified service personnel.
- Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- Disconnect this equipment from the power before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- Avoid the dusty, humidity and temperature extremes.
- Do not place heavy objects on the equipment.
- If the equipment is not used for long time, disconnect it from the power to avoid being damaged by transient over-voltage.
- The storage temperature shall be above -40°C and below 85°C.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- If one of the following situation arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or it cannot work according the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.

Technical Support and Assistance

1. Visit the Premio Inc. website at www.premioinc.com where you can find the latest information about the product.
2. Contact your distributor, our technical support team or sales representative for technical support if you need additional assistance. Please have following information ready before you call:
 - Model name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Conventions Used in this Manual



WARNING

This indication alerts operators to an operation that, if not strictly observed, may result in severe injury.



CAUTION

This indication alerts operators to an operation that, if not strictly observed, may result in safety hazards to personnel or damage to equipment.



NOTE

This indication provides additional information to complete a task easily.

Package Contents

Before installation, please ensure all the items listed in the following table are included in the package.

Item	Description	Q'ty
1	RCO-3400 Series Embedded System	1
2	Utility DVD Driver	1
3	Wall Mount Kit	1
4	Accessory Kit	1

Ordering Information

Model No.	Product Description
RCO-3400-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN
RCO-3400-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN
RCO-3400-4L-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 6x LAN
RCO-3400-4L-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 6x LAN
RCO-3400-4L-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 LAN
RCO-3400-4L-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 LAN
RCO-3400-4P-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x PoE
RCO-3400-4P-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x PoE
RCO-3400-4P-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 PoE
RCO-3400-4P-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 PoE
RCO-3411E-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 1x PCIe Expansion Slot
RCO-3411E-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 1x PCIe Expansion Slot
RCO-3411E-4L-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 6x LAN, 1x PCIe Expansion Slot
RCO-3411E-4L-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 6x LAN, 1x PCIe Expansion Slot
RCO-3411E-4L-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 LAN, 1x PCIe Expansion Slot
RCO-3411E-4L-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 LAN, 1x PCIe Expansion Slot
RCO-3411E-4P-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x PoE, 1x PCIe Expansion Slot
RCO-3411E-4P-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x PoE, 1x PCIe Expansion Slot

Ordering Information

Model No.	Product Description
RCO-3411E-4P-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 PoE, 1x PCIe Expansion Slot
RCO-3411E-4P-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 PoE, 1x PCIe Expansion Slot
RCO-3411P-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 1x PCI Expansion Slot
RCO-3411P-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 1x PCI Expansion Slot
RCO-3411P-4L-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 6x LAN, 1x PCI Expansion Slot
RCO-3411P-4L-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 6x LAN, 1x PCI Expansion Slot
RCO-3411P-4L-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 LAN, 1x PCI Expansion Slot
RCO-3411P-4L-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 LAN, 1x PCI Expansion Slot
RCO-3411P-4P-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x PoE, 1x PCI Expansion Slot
RCO-3411P-4P-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x PoE, 1x PCI Expansion Slot
RCO-3411P-4P-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 PoE, 1x PCI Expansion Slot
RCO-3411P-4P-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 PoE, 1x PCI Expansion Slot
RCO-3422EE-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 2x PCIe Expansion Slot
RCO-3422EE-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 2x PCIe Expansion Slot
RCO-3422EE-4L-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 6x LAN, 2x PCIe Expansion Slot
RCO-3422EE-4L-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 6x LAN, 2x PCIe Expansion Slot
RCO-3422EE-4L-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 LAN, 2x PCIe Expansion Slot
RCO-3422EE-4L-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 LAN, 2x PCIe Expansion Slot
RCO-3422EE-4P-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x PoE, 2x PCIe Expansion Slot
RCO-3422EE-4P-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x PoE, 2x PCIe Expansion Slot
RCO-3422EE-4P-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 PoE, 2x PCIe Expansion Slot
RCO-3422EE-4P-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 PoE, 2x PCIe Expansion Slot

Ordering Information

Model No.	Product Description
RCO-3422PP-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 2x PCI Expansion Slot
RCO-3422PP-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 2x PCI Expansion Slot
RCO-3422PP-4L-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 6x LAN, 2x PCI Expansion Slot
RCO-3422PP-4L-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 6x LAN, 2x PCI Expansion Slot
RCO-3422PP-4L-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 LAN, 2x PCI Expansion Slot
RCO-3422PP-4L-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 LAN, 2x PCI Expansion Slot
RCO-3422PP-4P-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x PoE, 2x PCI Expansion Slot
RCO-3422PP-4P-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x PoE, 2x PCI Expansion Slot
RCO-3422PP-4P-M12-7300U	Advanced Fanless System with Intel® Core™ i5-7300U Processor, 2x LAN, 4x M12 PoE, 2x PCI Expansion Slot
RCO-3422PP-4P-M12-7100U	Advanced Fanless System with Intel® Core™ i3-7100U Processor, 2x LAN, 4x M12 PoE, 2x PCI Expansion Slot

Optional Accessories

Model No.	Product Description
1-E09A06007	Adapter AC/DC 12V 5A 60W with 3pin Terminal Block Plug 5.0mm Pitch
1-E09A22102	Adapter AC/DC 24V 9.2A 220W with 3pin Terminal Block Plug 5.0mm Pitch
SFICBL022	Power Cord, 3-pin US Type, 180cm
1-TPCD00002	Power Cord, European Type, 180cm
1-TPCD00001	Power Cord, 3-pin UK Type, 180cm

Chapter 1

Product Introductions

1.1 Overview

Based on Intel® Core™ i5-7300U / i3-7100U, Dual Core processor, RCO-3400 series is an extreme features integration, outstanding system performance, versatile I/O connections, and rugged reliability fanless embedded systems. It offers modularize expansion I/O, rich connectivity interfaces, wide range (9~50V) DC power input, and high reliability even operating in temperature extremes (-40°C ~ +70°C).

Featuring with completely cable-less designed, high functional, one-piece housing design, and anti-vibration, RCO-3400 series are ruggedized systems that can operate in harsh environments and easy to install and maintain. A build in over voltage protection (OVP), over current protection (OCP), reserve voltage protection, and wide range DC power input makes RCO-3400 series are safety system for all industrial applications.

RCO-3400 Series



RCO-3411 Series



RCO-3422 Series



1.1.1 Key Features

- Intel® 7th Gen (KabyLake-U) Core™ i5-7300U (up to 3.5GHz) or Core™ i3-7100U (2.4GHz) Dual Core Processor
- 1x DDR4 SODIMM. max up to 16GB
- Triple independent display supported by 1x VGA and 2x DisplayPort
- 2x Intel® GbE Port, Support Wake-on-LAN and PXE
- 4x Intel® GbE [RCO-3400-4L, RCO-3411E(P)-4L, and RCO-3422EE(PP)-4L only]
- 4x Intel® GbE with M12 connector [RCO-3400-4L-M12, RCO-3411E(P)-4L-M12, and RCO-3422EE(PP)-4L-M12 only]
- 4x Intel® GbE with PoE function [RCO-3400-4P, RCO-3411E(P)-4P, and RCO-3422EE(PP)-4P only]
- 4x Intel® GbE with M12 PoE function [RCO-3400-4P-M12, RCO-3411E(P)-4P-M12, and RCO-3422EE(PP)-4P-M12 only]
- 4x USB 3.0, 2x USB 2.0
- 5x RS232/422/485 Port (with 3x internal) [RCO-3400, RCO-3411E(P), and RCO-3422EE(PP) only]
- 3x RS232/422/485 Port (with 1x internal)
- 8x Isolated DI, 8x Isolated DO
- 2x 2.5" SATA HDD Bay (1x internal, 1x removable) with RAID 0, 1, 5 support, 1x mSATA (shared by 1x Mini PCIe), and 1x CFast (shared by 1x mSATA)
- 9 to 50VDC Power Input, support AT/ATX Mode
- -40°C to 70°C extended operating temperature
- 2x Mini-PCIe Socket for Wi-Fi, GSM, or I/O Expansion
- 1x PCIe x4 Expansion (RCO-3411E Series Only)
- 1x PCI Expansion (RCO-3411P Series Only)
- 2x PCIe x4 Expansion (RCO-3422EE Series Only)
- 2x PCI Expansion (RCO-3422PP Series Only)
- Power Ignition Sensing
- Remote Power On/Off Switch/

1.2 Hardware Specification

Processor System

- 7th Gen Intel® Core™ i5 / i3 Processor with AMI 128Mbit SPI BIOS
 - Intel® Core™ i5-7300U Processor, Dual Core, 3MB Cache, up to 3.5 GHz
 - Intel® Core™ i3-7100U Processor, Dual Core, 3MB Cache, 2.4 GHz

Memory

- 1x 260-Pin DDR4 1866/2133MHz SODIMM. Max. up to 16GB

Display

Triple Display

- 1x VGA
- 2x DisplayPort

Expansion

- **RCO-3411E Series:** 1x PCIe x4
- **RCO-3411P Series:** 1x PCI
- **RCO-3422EE Series :** 2x PCIe x4
- **RCO-3422PP Series:** 2x PCI
- 2x Full-size Mini PCIe Socket for Wi-Fi / GSM / Expansion Module

Ethernet

- 1x Intel® i219LM GbE LAN port and 1x Intel® i210-AT GbE LAN port, Support Wake-on-LAN and PXE
- 4x Intel® i210-AT GbE LAN port [RCO-3400-4L, RCO-3400-4L-M12, RCO-3411E(P)-4L, RCO-3411E(P)-4L-M12, RCO-3422EE(PP)-4L, and RCO-3422EE(PP)-4L-M12 Only]
- 4x 802.3at Compliant PoE port, the maximum DC power delivery on Each PoE is 25.5W [RCO-3400-4P, RCO-3400-4P-M12, RCO-3411E(P)-4P, RCO-3411E(P)-4P-M12, RCO-3422EE(PP)-4P, and RCO-3422EE(PP)-4P-M12 Only]

Audio

- Codec: Realtek ALC888S
- 1x Mic-in and 1x Line-out

Watchdog Timer

- Software Programmable Supports 1~255 sec. System Reset

Storage

- 2x 2.5" SATA HDD Bay (1x internal, 1x removable) with RAID 0, 1, 5, 10 support
- 1x mSATA socket (shared by 1x Mini-PCIe)
- 1x CFast socket (shared by 1x mSATA)
- 2x External SIM Card Socket

I/O Ports

- 4x USB 3.0 Port
- 2x USB 2.0 Port
- 8 Isolated DI and 8 Isolated DO Port
- 5x RS232/422/485 Port (with 3x internal) [RCO-3400, RCO-3411E(P), and RCO-3422EE(PP) only]
- 3x RS232/422/485 Port (with 1x internal)
- 4x Antenna Hole
- 1x Power Switch
- 1x AT/ATX Switch
- 1x Remote Power on/off Connector

Digital Input & Output

- 8x Digital Input (Source Type)
 - Input Voltage (Dry Contact):
 - Logic 0: Close to GND
 - Logic 1: Open
 - Input Voltage:
 - Logic 0: 3V max.
 - Logic 1: 5V min. (DI to COM-)
- 8x Digital Output
 - Supply Voltage: 5~30VDC
 - Sink Current: 200 mA Max. Per Channel

Power

- Support AT, ATX Mode
- 1x 3-pin Terminal Block Connector with Power Input 9~50VDC
- Power Ignition Sensing
- 1x Optional AC/DC 12V/5A, 60W Power Adapter
- 1x Optional AC/DC 24V/9.2A, 220W Power Adapter [RCO-3400-4P, RCO-3400-4P-M12, RCO-3411E(P)-4P, RCO-3411E(P)-4P-M12, RCO-3422EE(PP)-4P, and RCO-3422EE(PP)-4P-M12 Series Only]

Environment

- Operating Temperature: Ambient with Air Flow: -40°C to 70°C (with Industrial Grade Peripherals)
- Storage Temperature: -40°C to 85°C
- Relative humidity: 10%~95% (non-condensing)

Physical

- **RCO-3400 Series**
 - ✓ Dimension (WxDxH, mm): 192 x 197 x 57.6 mm
 - ✓ Weight: TBD
- **RCO-3411 Series**
 - ✓ Dimension (WxDxH, mm): 192 x 197 x 85.1 mm
 - ✓ Weight: TBD
- **RCO-3422 Series**
 - ✓ Dimension (WxDxH, mm): 192 x 197 x 105.1 mm
 - ✓ Weight: TBD
- Construction: Extruded Aluminum with Heavy Duty Metal
- Mounting: Wall Mounting, DIN-Rail Mounting (Optional)

Operating System

- Windows® 10
- Linux kernel 4.x

Certifications

- CE / FCC Class A

1.3 System I/O

1.3.1 RCO-3400

Front Panel

Power on/off switch

Press to power-on or power-off the system

Reset switch

Press to reset the system

AT/ATX mode select switch

Used to select AT or ATX power mode

PC/Car mode select switch

Used to select PC or Car mode

Delay time select switch

Used to select car mode PC turn off delay time

CFast socket

Used to insert CFast card

SIM Card socket

Used to insert SIM card

Universal I/O bracket

Used to customized I/O output

HDD port

Removable 2.5" SATA HDD Area

Power LED

Indicates the power status of the system

HDD LED


Indicates the status of the hard drive

Ethernet LEDs

Indicates the status of the LAN active

GPIO LED

Indicates the status of the customer define

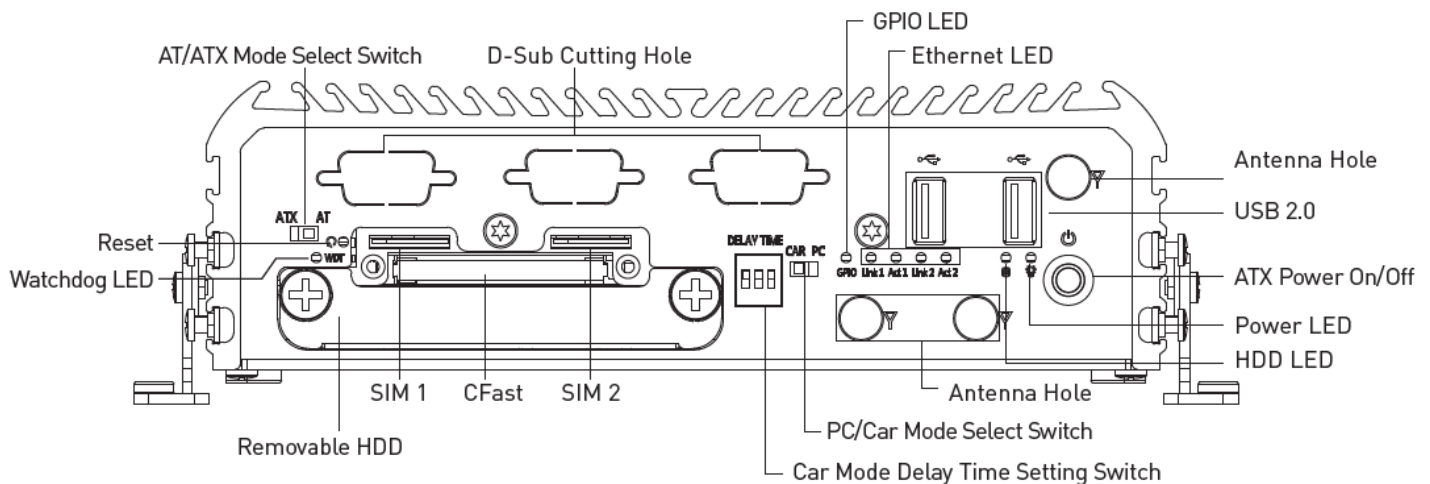

Rear Panel

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect a VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

Line-out

Used to connect a speaker

Mic-in

Used to connect a microphone

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

COM port


COM1 ~ COM2 support RS232/422/485 serial device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output

Antenna hole

Used to connect an antenna for optional Mini-PCIe WiFi module

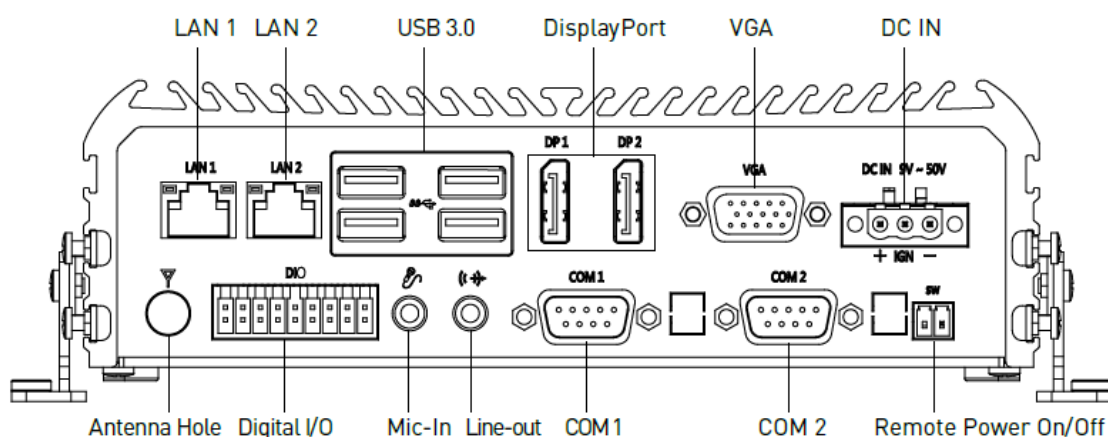

1.3.2 RCO-3400-4L(P)

Front Panel

Power on/off switch

Press to power-on or power-off the system

Reset switch

Press to reset the system

AT/ATX mode select switch

Used to select AT or ATX power mode

PC/Car mode select switch

Used to select PC or Car mode

Delay time select switch

Used to select car mode PC turn off delay time

CFast socket

Used to insert CFast card

SIM Card socket

Used to insert SIM card

LAN port

Used to connect the system to a local area network (RCO-3400-4L only)

PoE Port

Used to connect the system to a local area network with power over Ethernet (RCO-3400-4P only)

HDD port

Removable 2.5" SATA HDD Area

Power LED

Indicates the power status of the system

HDD LED


Indicates the status of the hard drive

Ethernet LEDs

Indicates the status of the LAN active

GPIO LED

Indicates the status of the customer define

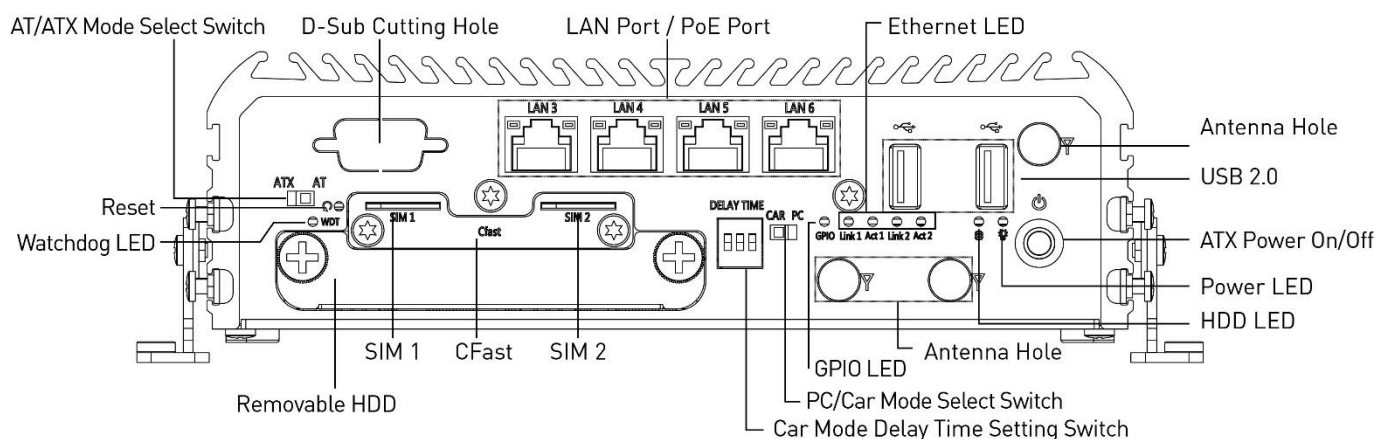

Rear Panel

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect a VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

Line-out

Used to connect a speaker

Mic-in

Used to connect a microphone

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

COM port


COM1 ~ COM2 support RS232/422/485 serial device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output

Antenna hole

Used to connect an antenna for optional Mini-PCIe WiFi module

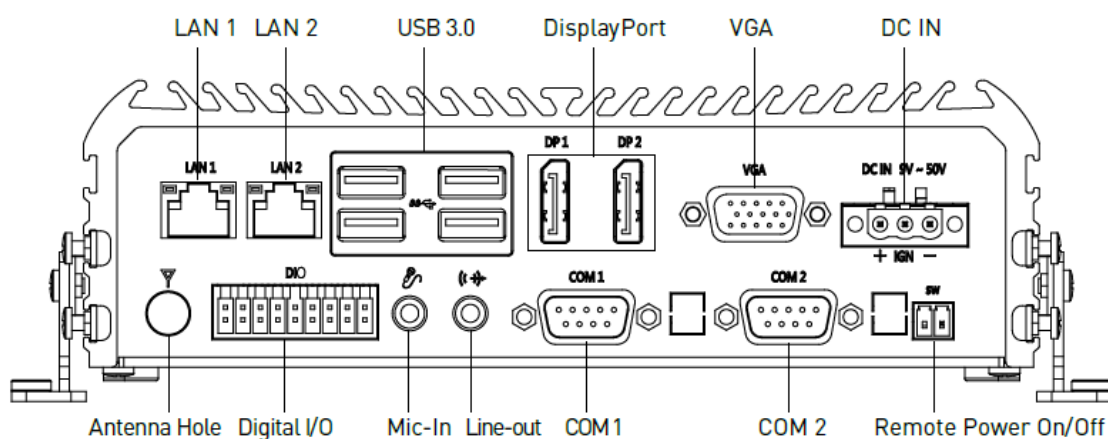

1.3.3 RCO-3400-4L(P)-M12

Front Panel

Power on/off switch

Press to power-on or power-off the system

Reset switch

Press to reset the system

AT/ATX mode select switch

Used to select AT or ATX power mode

PC/Car mode select switch

Used to select PC or Car mode

Delay time select switch

Used to select car mode PC turn off delay time

CFast socket

Used to insert CFast card

SIM Card socket

Used to insert SIM card

M12 LAN port

Used to connect the system to a local area network (RCO-3400-4L-M12 only)

M12 PoE Port

Used to connect the system to a local area network with power over Ethernet (RCO-3400-4P-M12 only)

HDD port

Removable 2.5" SATA HDD Area

Power LED

Indicates the power status of the system

HDD LED


Indicates the status of the hard drive

Ethernet LEDs

Indicates the status of the LAN active

GPIO LED

Indicates the status of the customer define

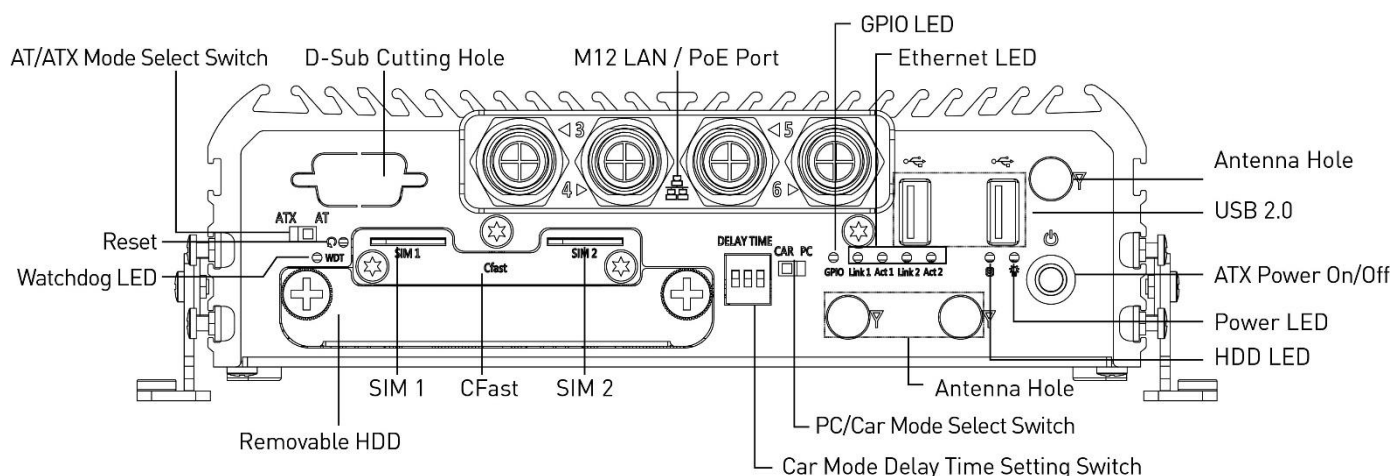

Rear Panel

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect a VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

Line-out

Used to connect a speaker

Mic-in

Used to connect a microphone

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

COM port


COM1 ~ COM2 support RS232/422/485 serial device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output

Antenna hole

Used to connect an antenna for optional Mini-PCIe WiFi module

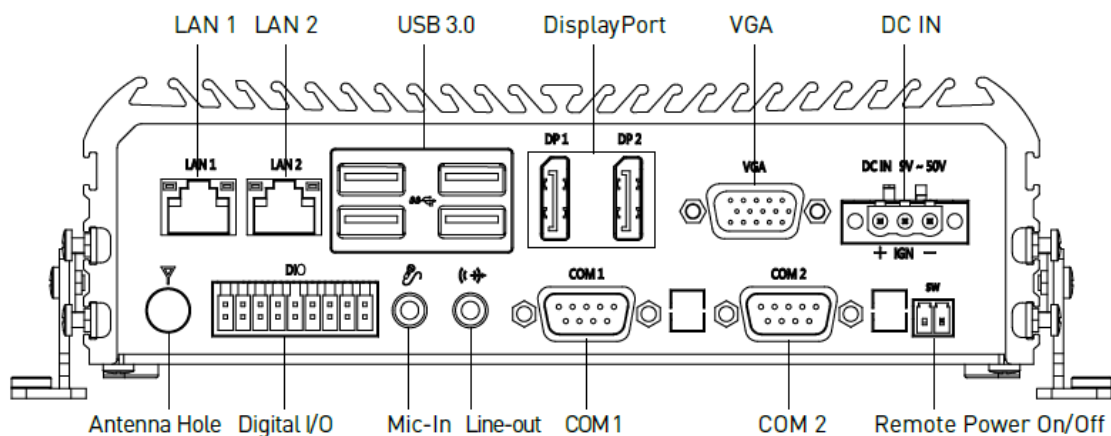

1.3.4 RCO-3411E(P)

Front Panel

Power on/off switch

Press to power-on or power-off the system

Reset switch

Press to reset the system

AT/ATX mode select switch

Used to select AT or ATX power mode

PC/Car mode select switch

Used to select PC or Car mode

Delay time select switch

Used to select car mode PC turn off delay time

CFast socket

Used to insert CFast card

SIM Card socket

Used to insert SIM card

Universal I/O bracket

Used to customized I/O output

HDD port

Removable 2.5" SATA HDD Area

Power LED

Indicates the power status of the system

HDD LED


Indicates the status of the hard drive

Ethernet LEDs

Indicates the status of the LAN active

GPIO LED

Indicates the status of the customer define

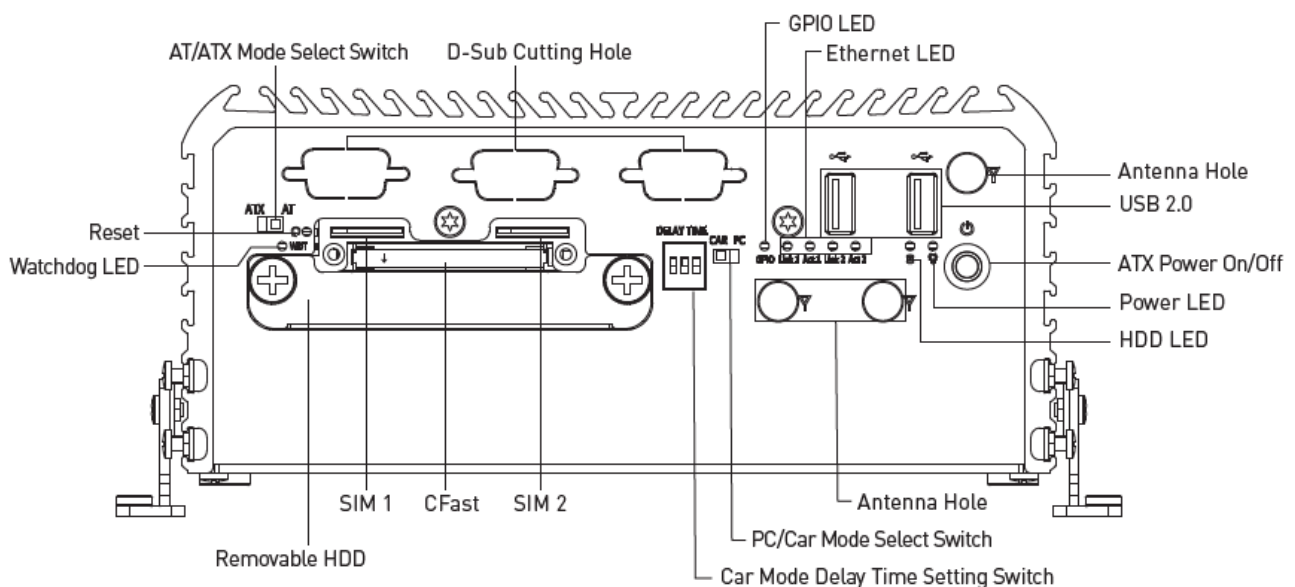

Rear Panel

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect a VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

Line-out

Used to connect a speaker

Mic-in

Used to connect a microphone

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

COM port

COM1 ~ COM2 support RS232/422/485 serial device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output


Expansion Area

Used to plug PCIe Card (RCO-3411E only)

Used to plug PCI Card (RCO-3411P only)

Antenna hole

Used to connect an antenna for optional Mini-PCIe WiFi module

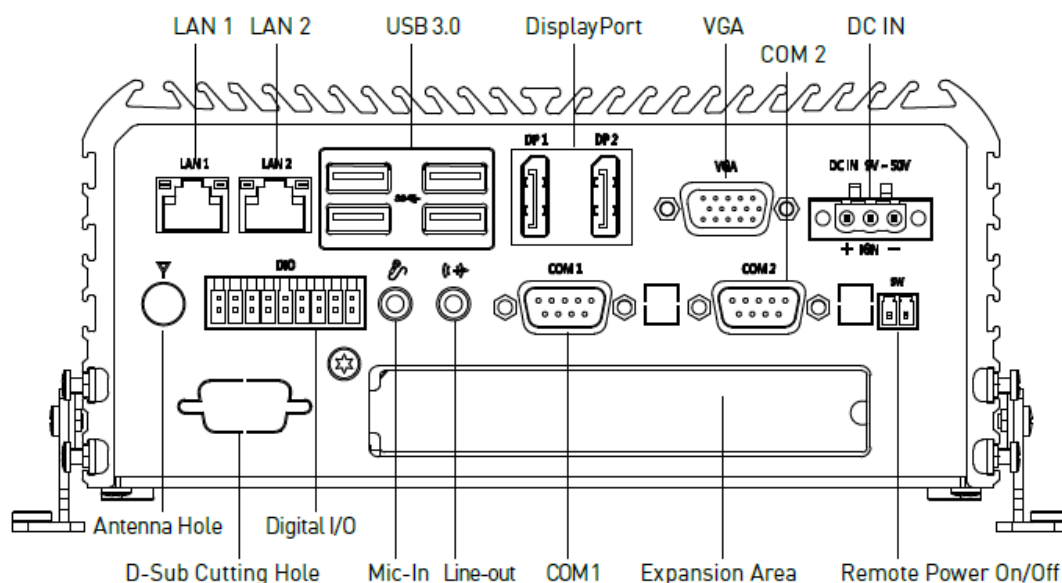

1.3.5 RCO-3411E-4L(P) / RCO-3411P-4L(P)

Front Panel

Power on/off switch

Press to power-on or power-off the system

Reset switch

Press to reset the system

AT/ATX mode select switch

Used to select AT or ATX power mode

PC/Car mode select switch

Used to select PC or Car mode

Delay time select switch

Used to select car mode PC turn off delay time

CFast socket

Used to insert CFast card

SIM Card socket

Used to insert SIM card

LAN port

Used to connect the system to a local area network (RCO-3411x-4L only)

PoE Port

Used to connect the system to a local area network with power over Ethernet (RCO-3411x-4P only)

HDD port

Removable 2.5" SATA HDD Area

Power LED

Indicates the power status of the system

HDD LED


Indicates the status of the hard drive

Ethernet LEDs

Indicates the status of the LAN active

GPIO LED

Indicates the status of the customer define

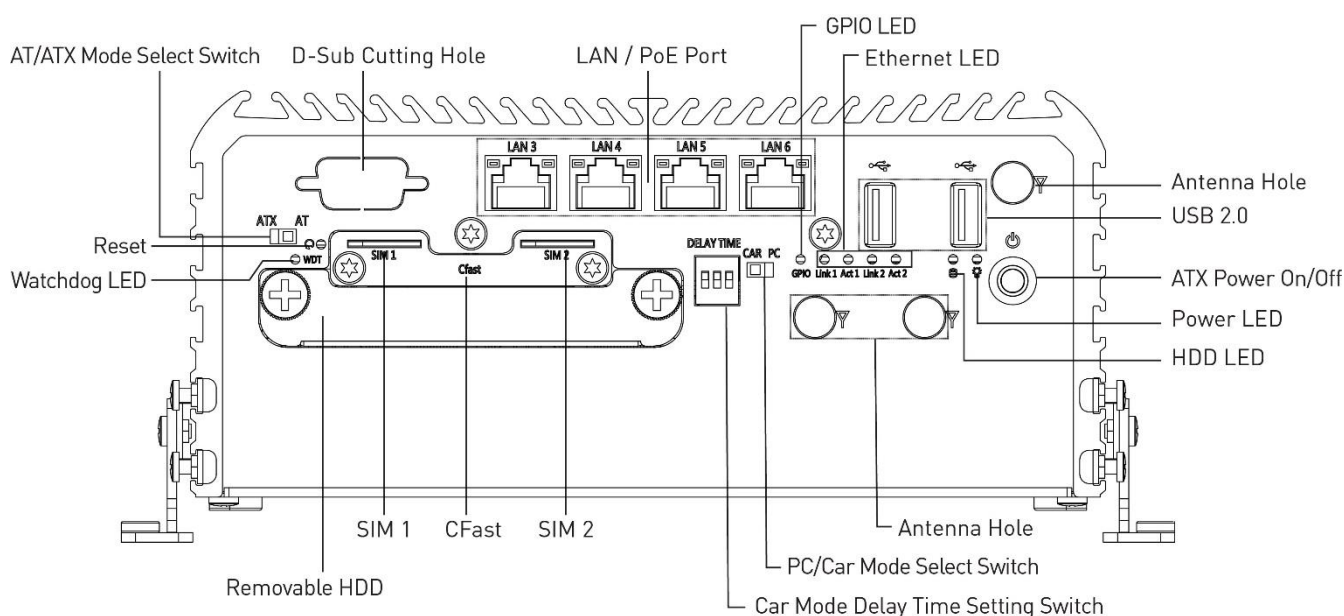

Rear Panel

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect a VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

Line-out

Used to connect a speaker

Mic-in

Used to connect a microphone

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

COM port

COM1 ~ COM2 support RS232/422/485 serial device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output


Expansion Area

Used to plug PCIe Card (RCO-3411E-xx only)

Used to plug PCI Card (RCO-3411P-xx only)

Antenna hole

Used to connect an antenna for optional Mini-PCIe WiFi module

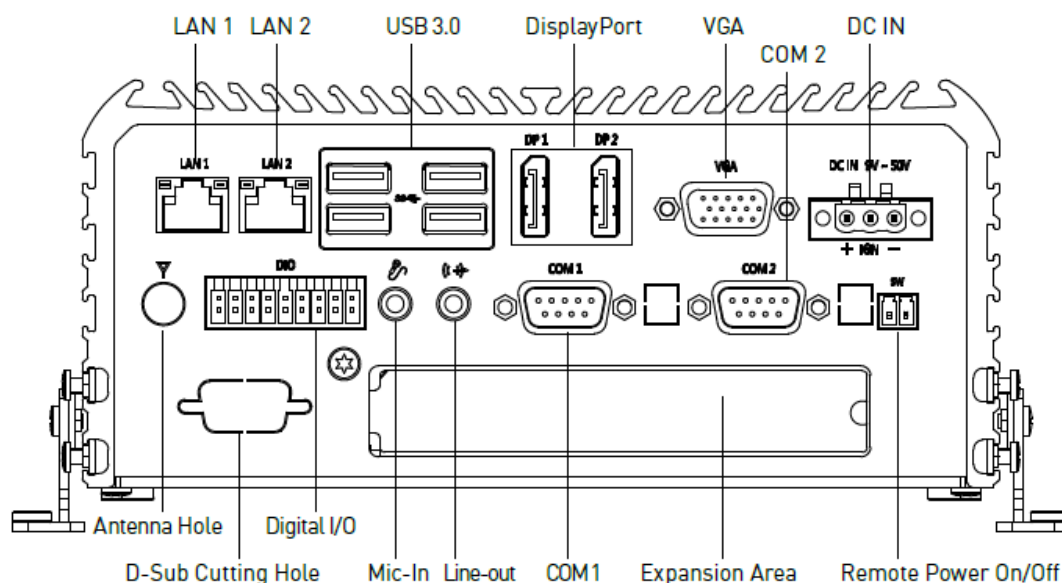

1.3.6 RCO-3411E-4L(P)-M12 / RCO-3411P-4L(P)-M12

Front Panel

Power on/off switch

Press to power-on or power-off the system

Reset switch

Press to reset the system

AT/ATX mode select switch

Used to select AT or ATX power mode

PC/Car mode select switch

Used to select PC or Car mode

Delay time select switch

Used to select car mode PC turn off delay time

CFast socket

Used to insert CFast card

SIM Card socket

Used to insert SIM card

M12 LAN Port

Used to connect the system to a local area network

(RCO-3411x-4L-M12 only)

M12 PoE Port

Used to connect the system to a local area network with power over Ethernet

(RCO-3411x-4P-M12 only)

HDD port

Removable 2.5" SATA HDD Area

Power LED

Indicates the power status of the system

HDD LED


Indicates the status of the hard drive

Ethernet LEDs

Indicates the status of the LAN active

GPIO LED

Indicates the status of the customer define

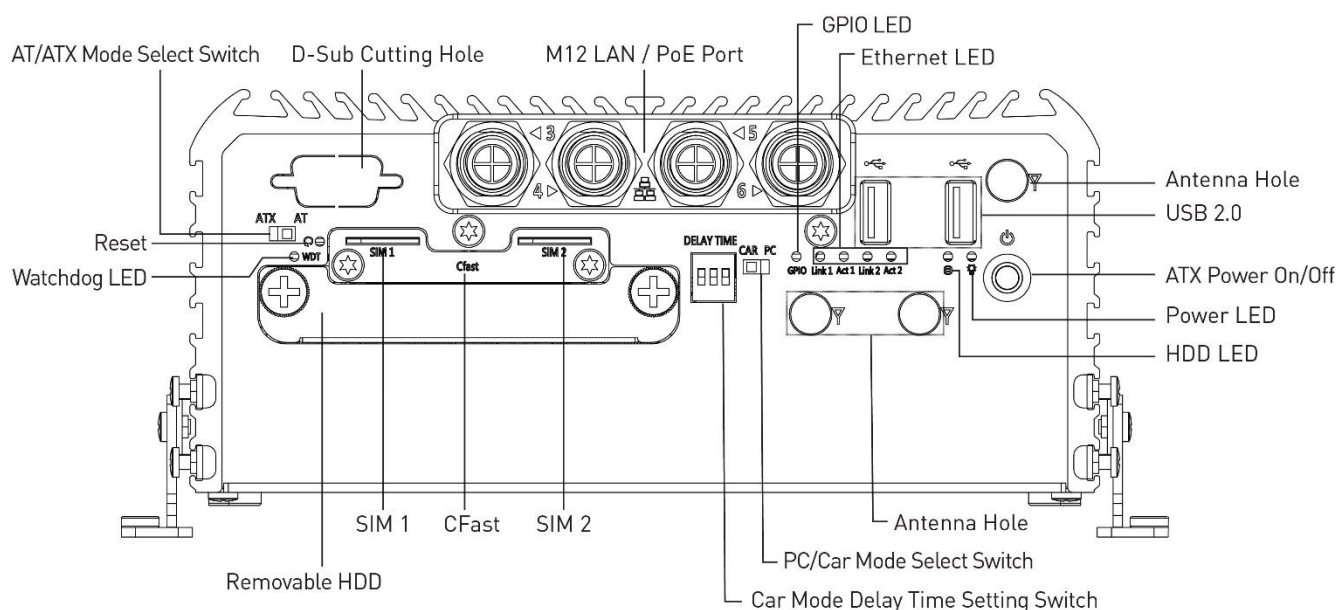

Rear Panel

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect a VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

Line-out

Used to connect a speaker

Mic-in

Used to connect a microphone

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

COM port

COM1 ~ COM2 support RS232/422/485 serial device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output


Expansion Area

Used to plug PCIe Card (RCO-3411E-xx only)

Used to plug PCI Card (RCO-3411P-xx only)

Antenna hole

Used to connect an antenna for optional Mini-PCIe WiFi module

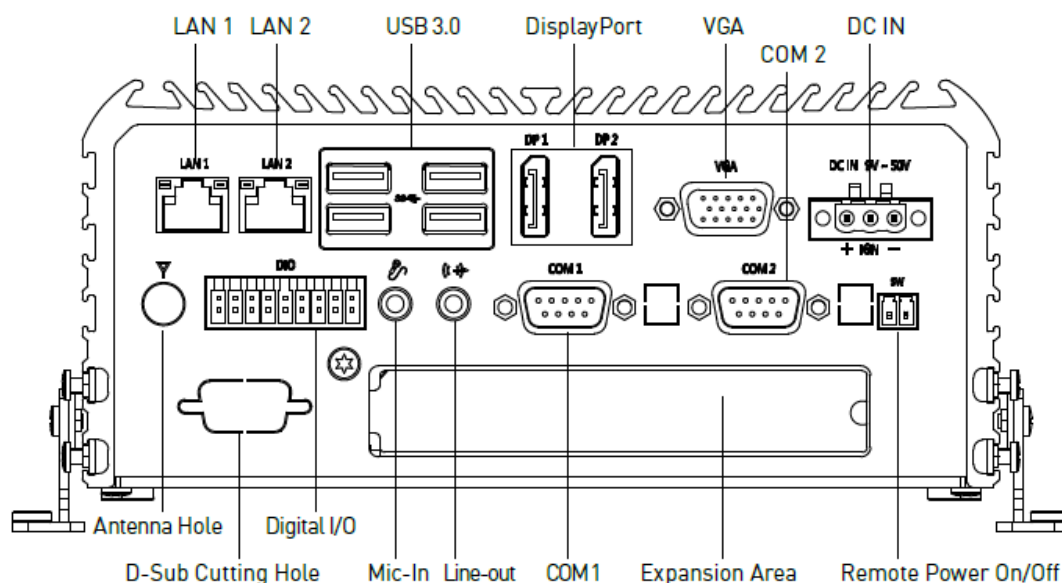

1.3.7 RCO-3422EE(PP)

Front Panel

Power on/off switch

Press to power-on or power-off the system

Reset switch

Press to reset the system

AT/ATX mode select switch

Used to select AT or ATX power mode

PC/Car mode select switch

Used to select PC or Car mode

Delay time select switch

Used to select car mode PC turn off delay time

CFast socket

Used to insert CFast card

SIM Card socket

Used to insert SIM card

Universal I/O bracket

Used to customized I/O output

HDD port

Removable 2.5" SATA HDD Area

Power LED

Indicates the power status of the system

HDD LED


Indicates the status of the hard drive

Ethernet LEDs

Indicates the status of the LAN active

GPIO LED

Indicates the status of the customer define

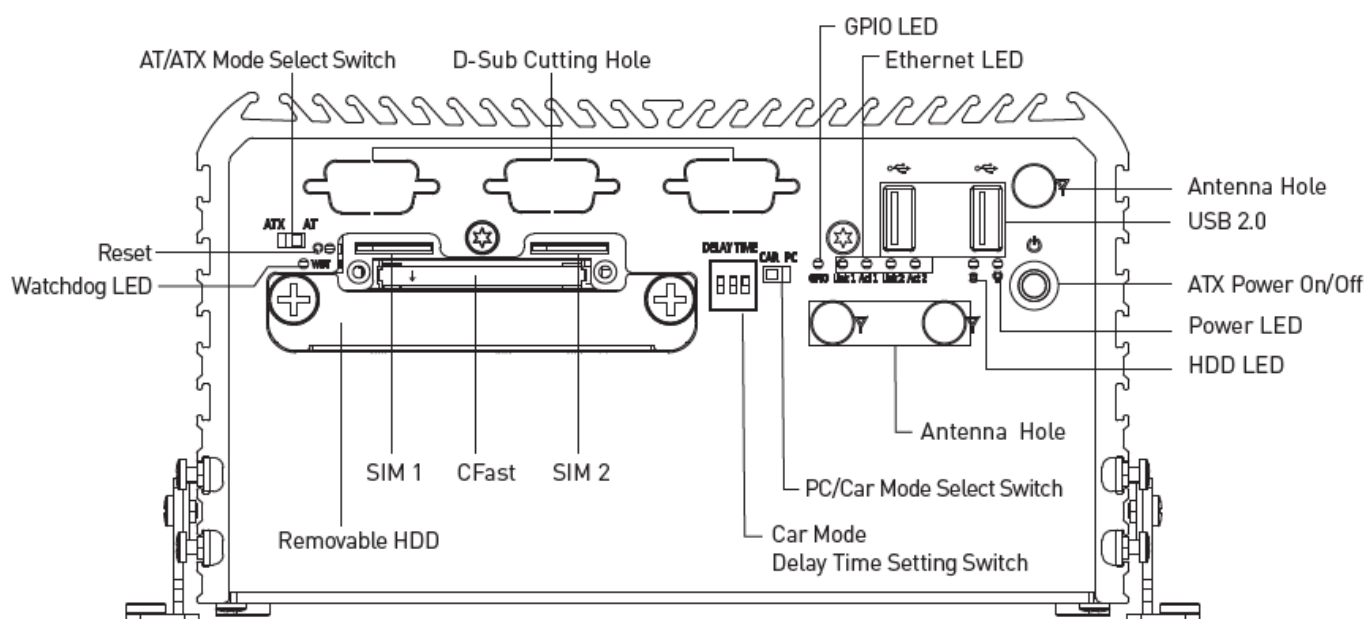

Rear Panel

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect a VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

Line-out

Used to connect a speaker

Mic-in

Used to connect a microphone

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

COM port

COM1 ~ COM2 support RS232/422/485 serial device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output


Expansion Area

Used to plug PCIe Card (RCO-3422EE only)

Used to plug PCI Card (RCO-3422PP only)

Antenna hole

Used to connect an antenna for optional Mini-PCIe WiFi module

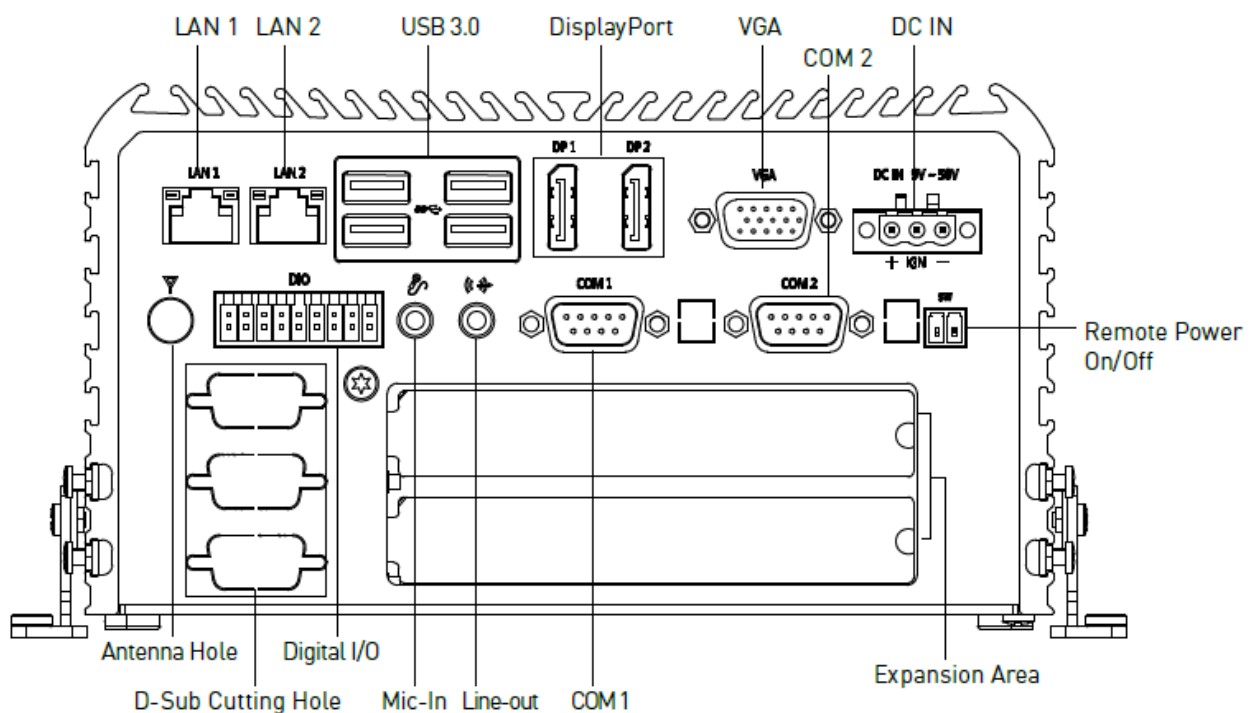

1.3.8 RCO-3422EE-4L(P) / RCO-3422PP-4L(P)

Front Panel

Power on/off switch

Press to power-on or power-off the system

Reset switch

Press to reset the system

AT/ATX mode select switch

Used to select AT or ATX power mode

PC/Car mode select switch

Used to select PC or Car mode

Delay time select switch

Used to select car mode PC turn off delay time

CFast socket

Used to insert CFast card

SIM Card socket

Used to insert SIM card

LAN port

Used to connect the system to a local area network (RCO-3422xx-4L only)

PoE Port

Used to connect the system to a local area network with power over Ethernet (RCO-3422xx-4P only)

HDD port

Removable 2.5" SATA HDD Area

Power LED

Indicates the power status of the system

HDD LED


Indicates the status of the hard drive

Ethernet LEDs

Indicates the status of the LAN active

GPIO LED

Indicates the status of the customer define

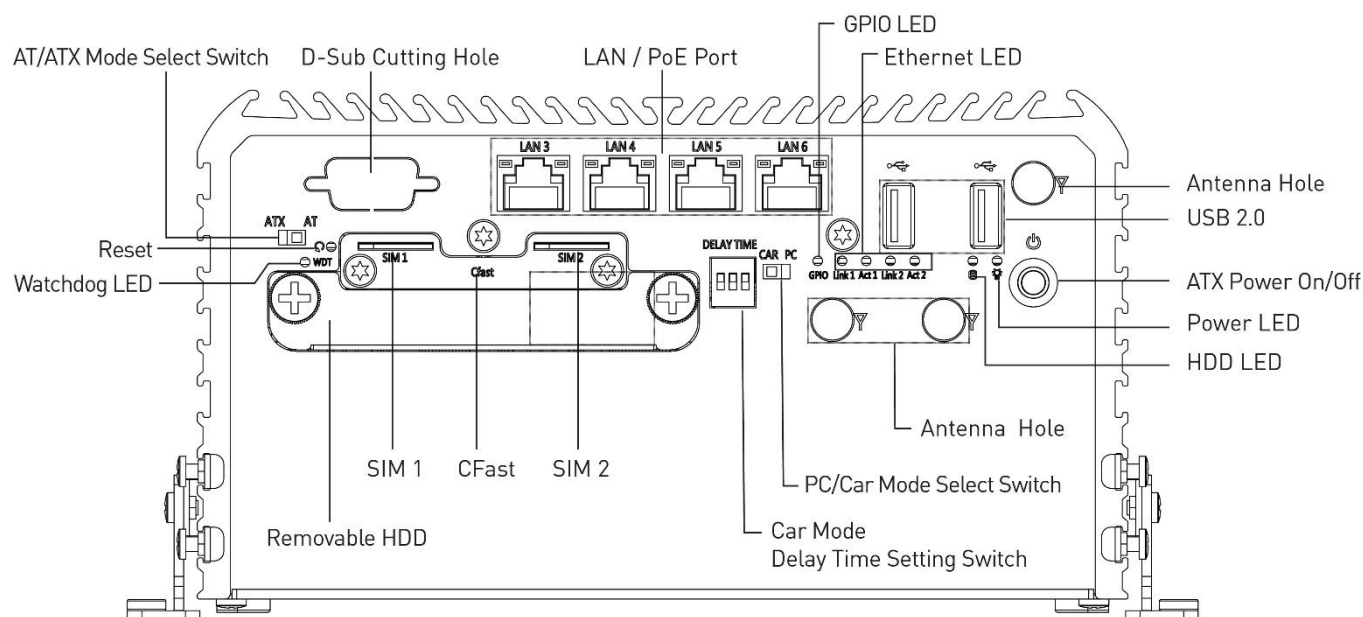

Rear Panel

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect a VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

Line-out

Used to connect a speaker

Mic-in

Used to connect a microphone

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

COM port

COM1 ~ COM2 support RS232/422/485 serial device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output


Expansion Area

Used to plug PCIe Card (RCO-3422EE-xx only)

Used to plug PCI Card (RCO-3422PP-xx only)

Antenna hole

Used to connect an antenna for optional Mini-PCIe WiFi module

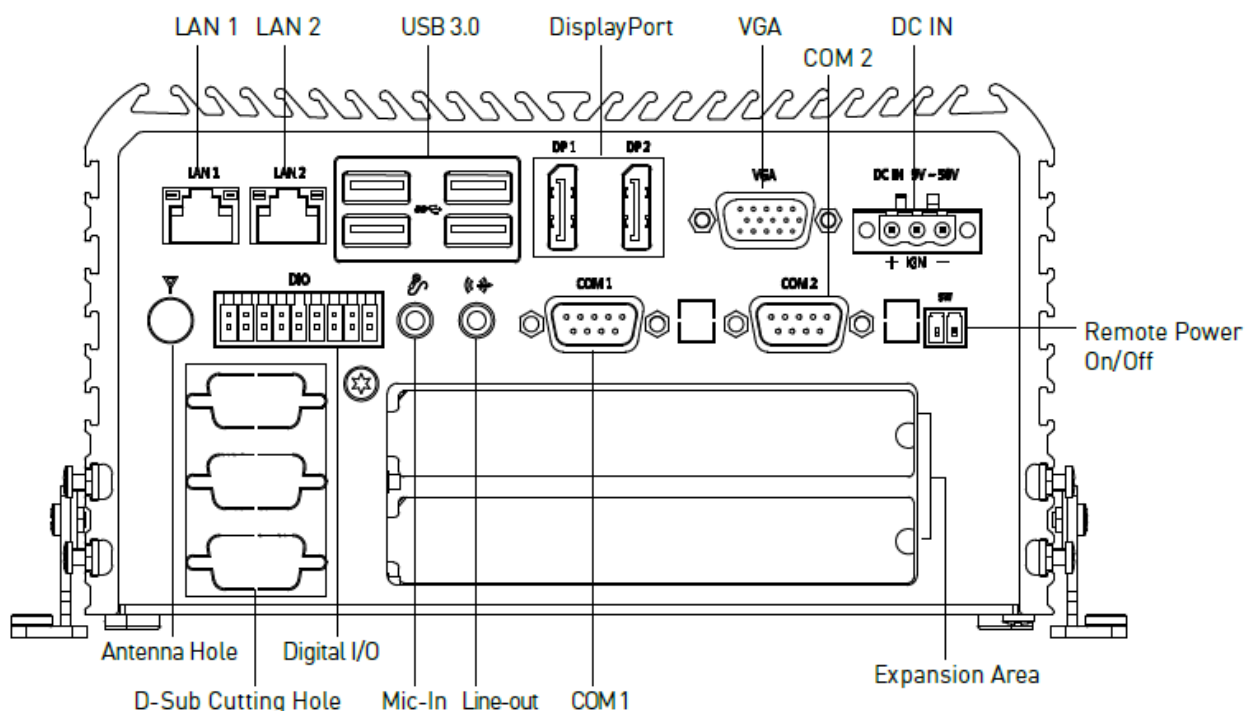

1.3.9 RCO-3422EE-4L(P)-M12 / RCO-3422PP-4L(P)-M12

Front Panel

Power on/off switch

Press to power-on or power-off the system

Reset switch

Press to reset the system

AT/ATX mode select switch

Used to select AT or ATX power mode

PC/Car mode select switch

Used to select PC or Car mode

Delay time select switch

Used to select car mode PC turn off delay time

CFast socket

Used to insert CFast card

SIM Card socket

Used to insert SIM card

M12 LAN Port

Used to connect the system to a local area network

(RCO-3422xx-4L-M12 only)

M12 PoE Port

Used to connect the system to a local area network with power over Ethernet

(RCO-3422xx-4P-M12 only)

HDD port

Removable 2.5" SATA HDD Area

Power LED

Indicates the power status of the system

HDD LED


Indicates the status of the hard drive

Ethernet LEDs

Indicates the status of the LAN active

GPIO LED

Indicates the status of the customer define

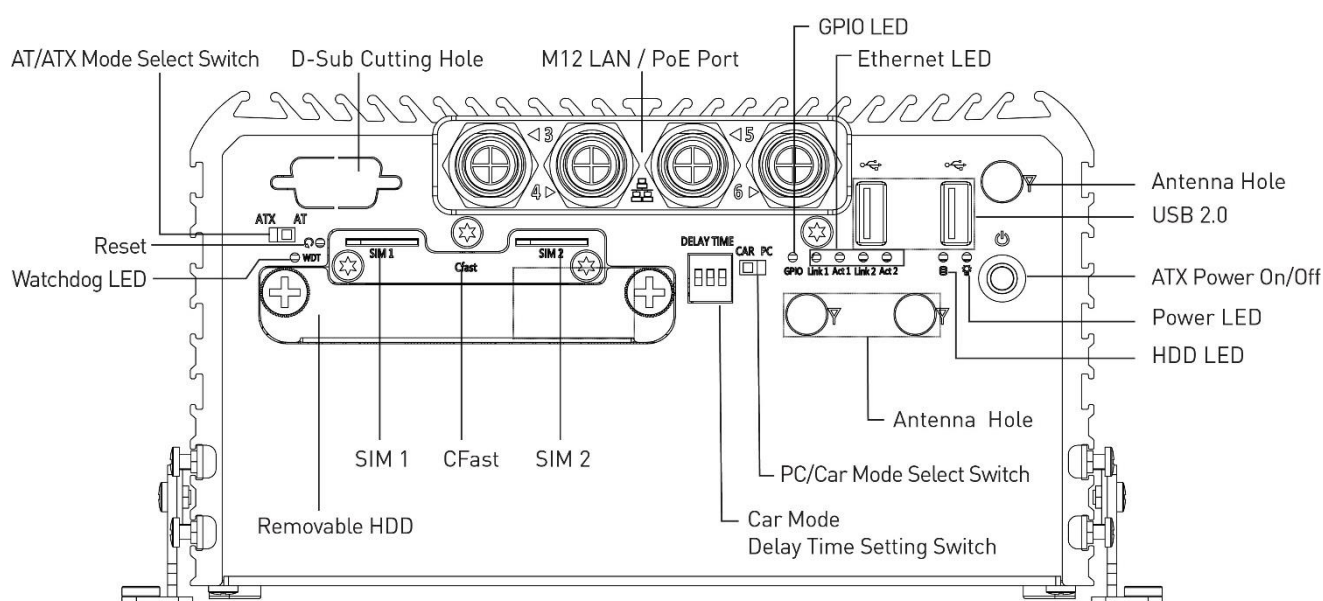

Rear Panel

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect a VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

Line-out

Used to connect a speaker

Mic-in

Used to connect a microphone

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

COM port

COM1 ~ COM2 support RS232/422/485 serial device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output


Expansion Area

Used to plug PCIe Card (RCO-3422EE-xx only)

Used to plug PCI Card (RCO-3422PP-xx only)


Antenna hole

Used to connect an antenna for optional Mini-PCIe WiFi module

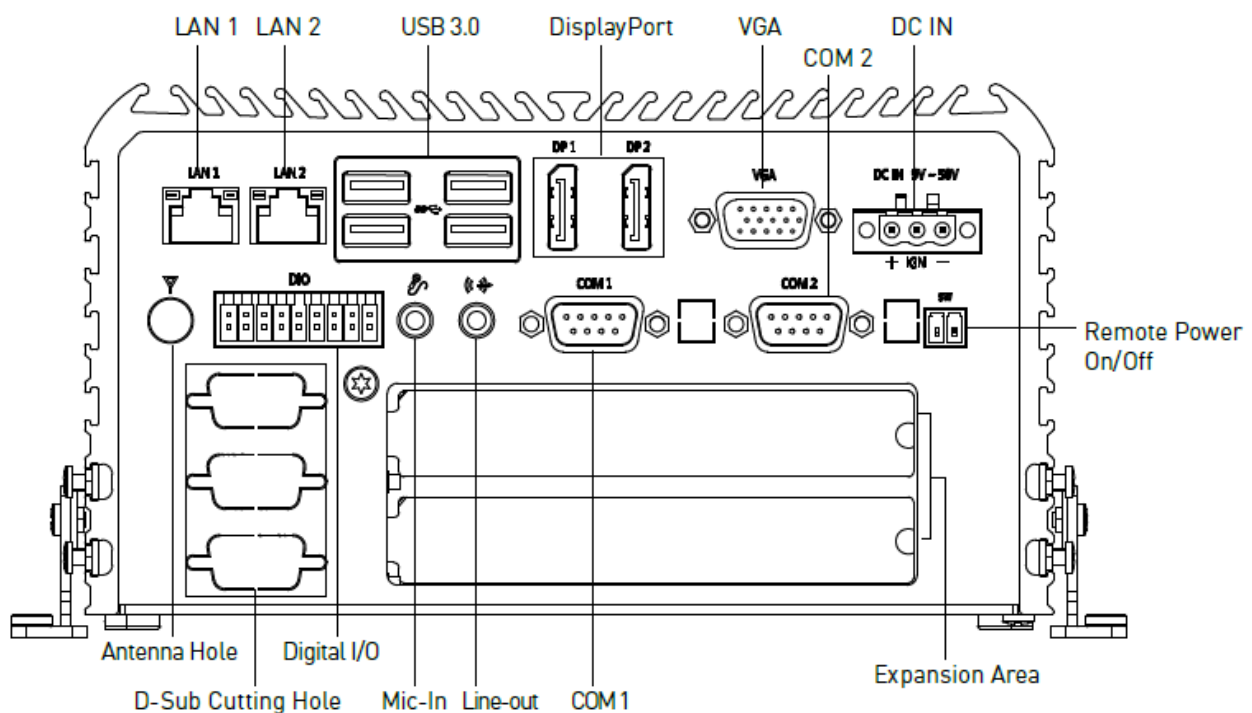




1.4.2 RCO-3411E(P) / RCO-3411E(P)-4L(P) / RCO-3411E(P)-4L(P)-M12

Unit: mm

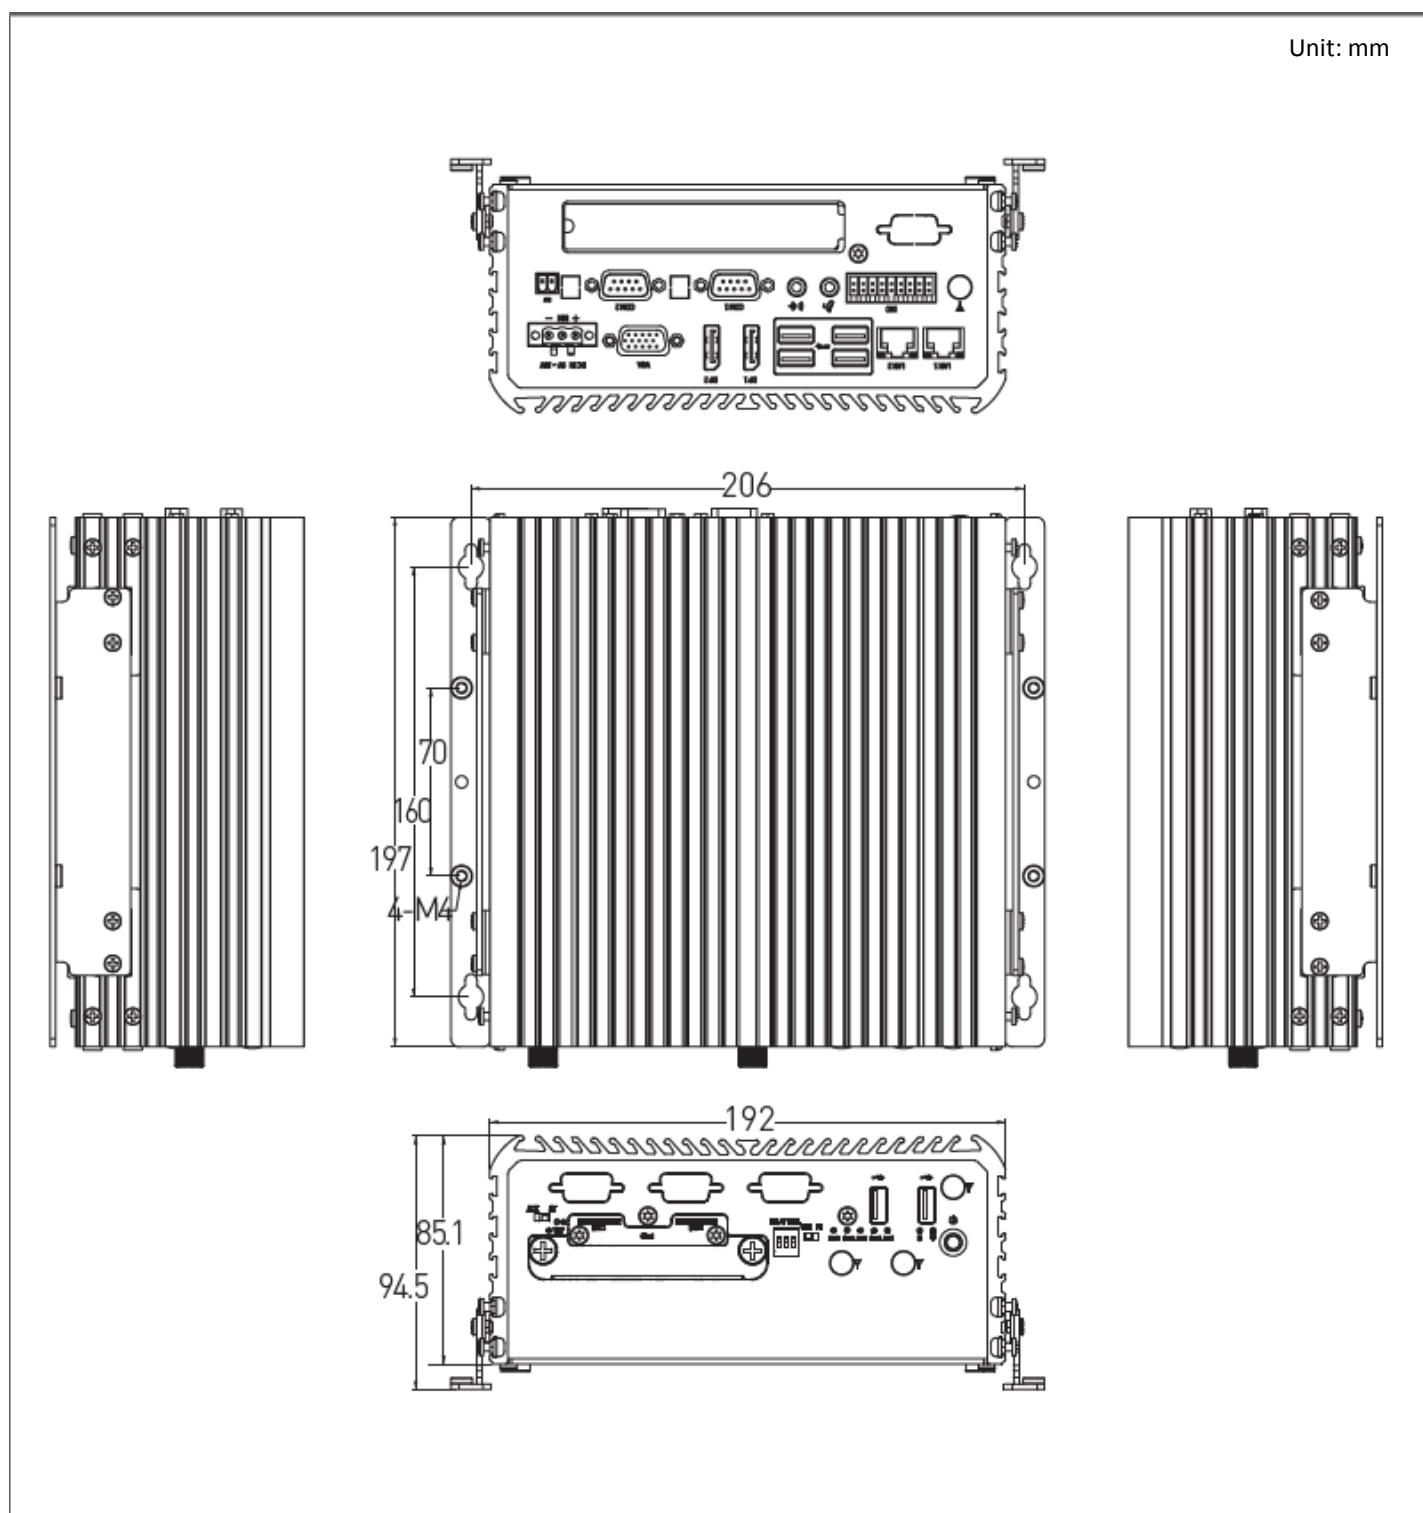

1.4.3 RCO-3422EE(PP) / RCO-3422EE(PP)-4L(P) / RCO-3422EE(PP)-4L(P)-M12

Unit: mm

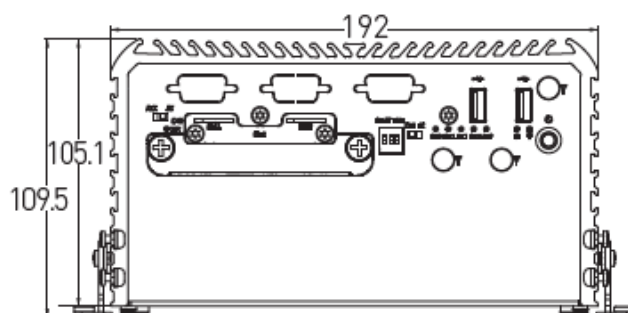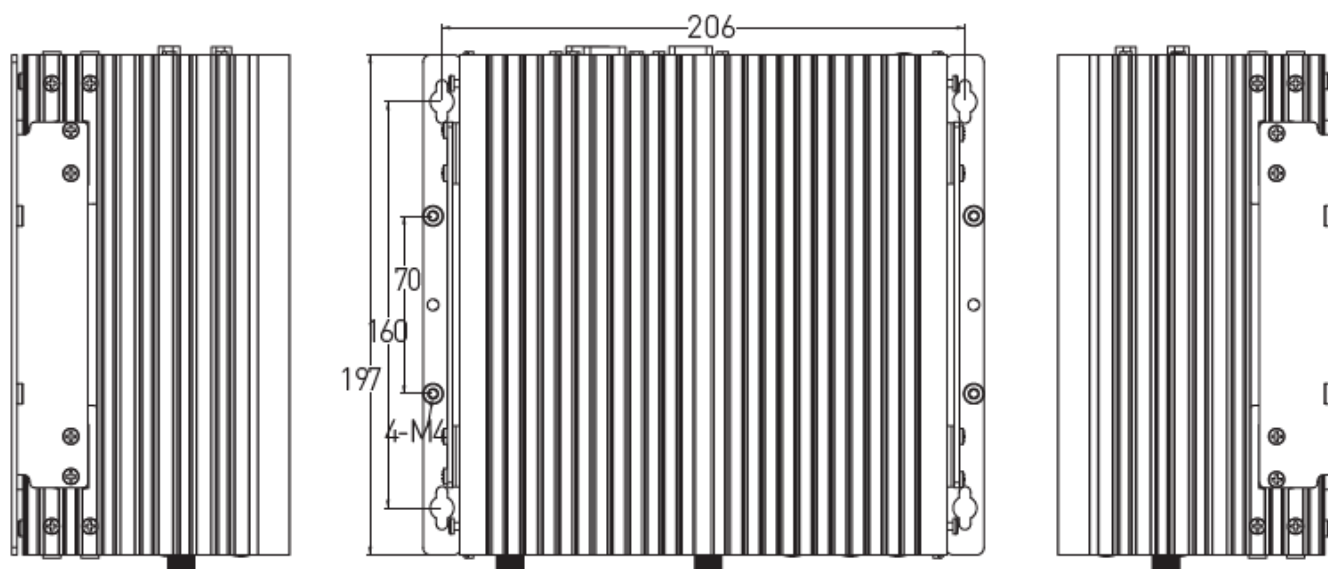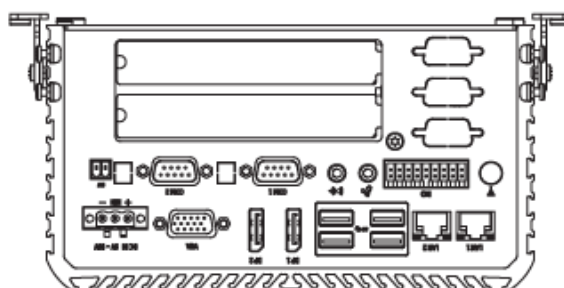


Chapter 2


Switches and Connectors

2.1 Switch and Connector Locations

2.1.1 Top View

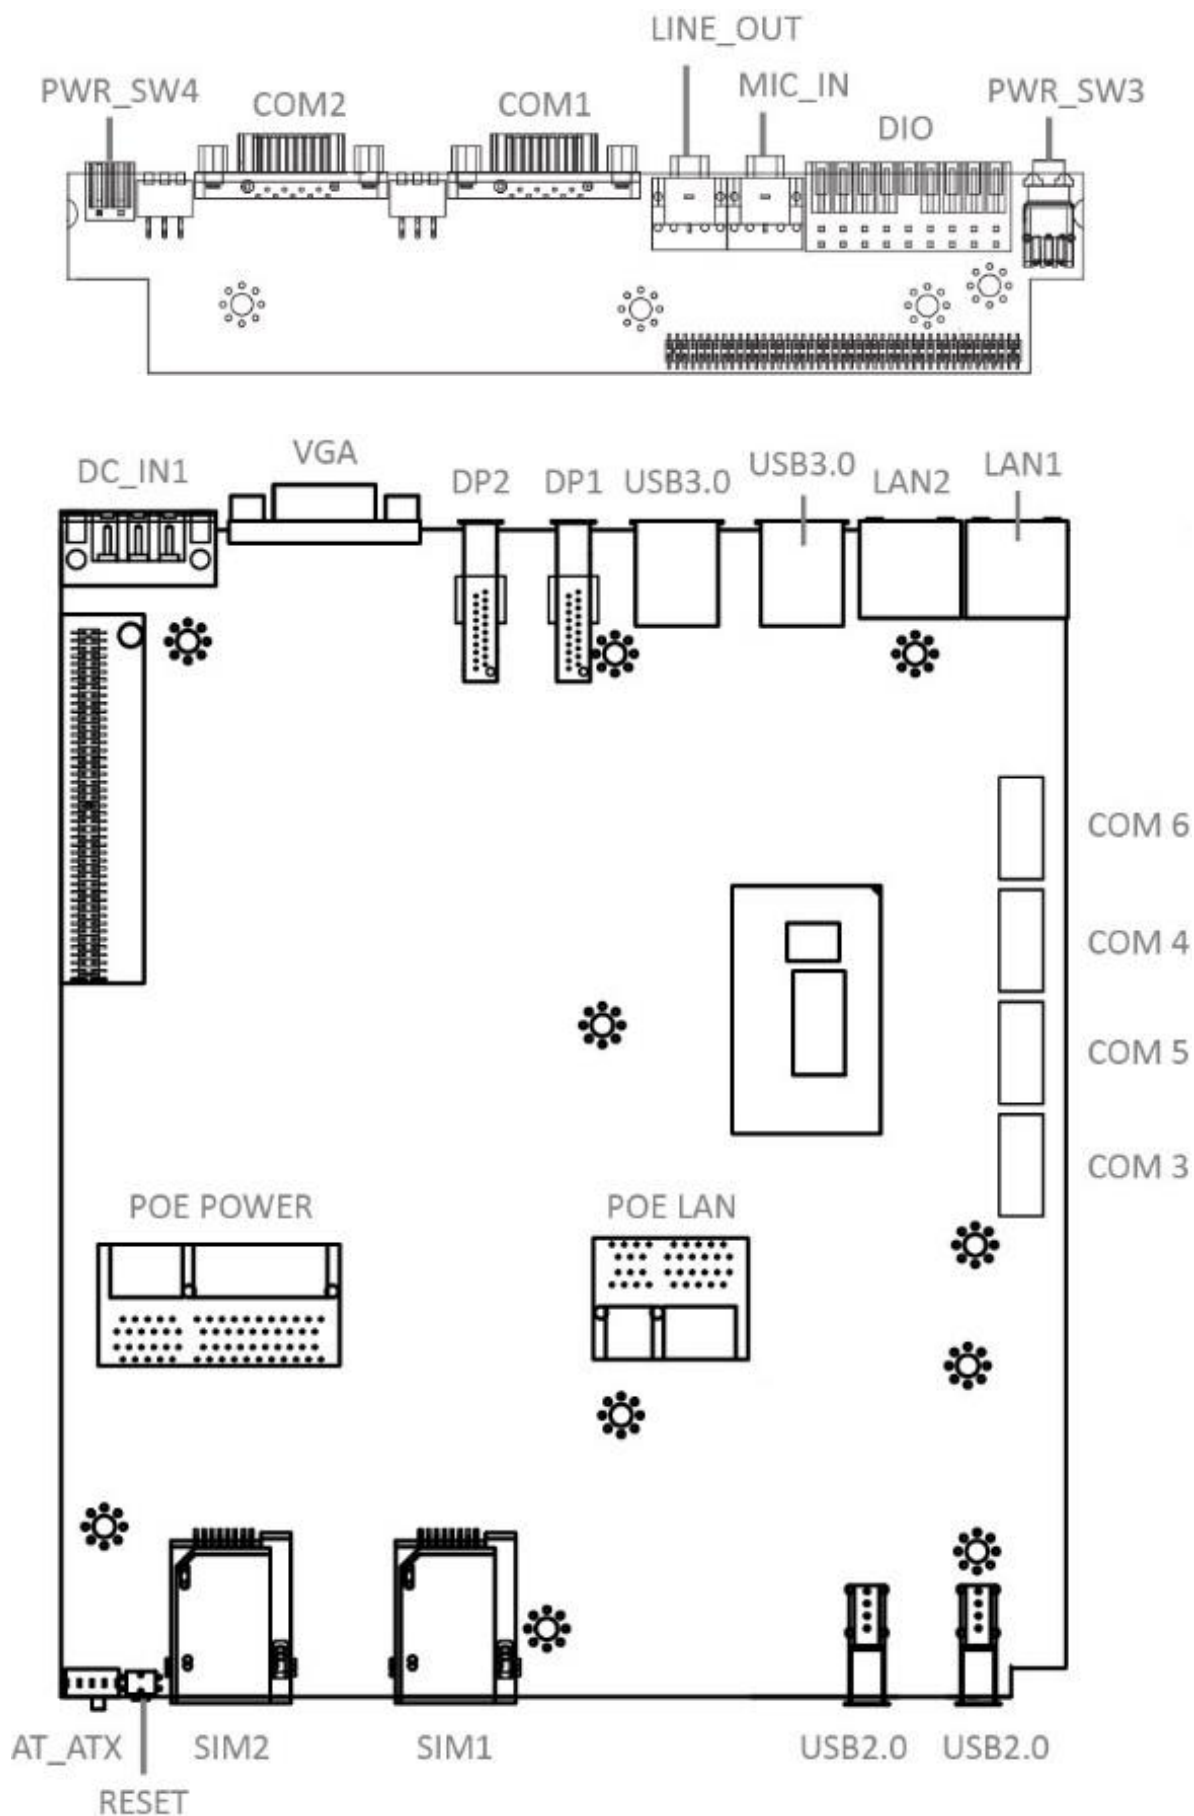

2.1.2 Bottom View

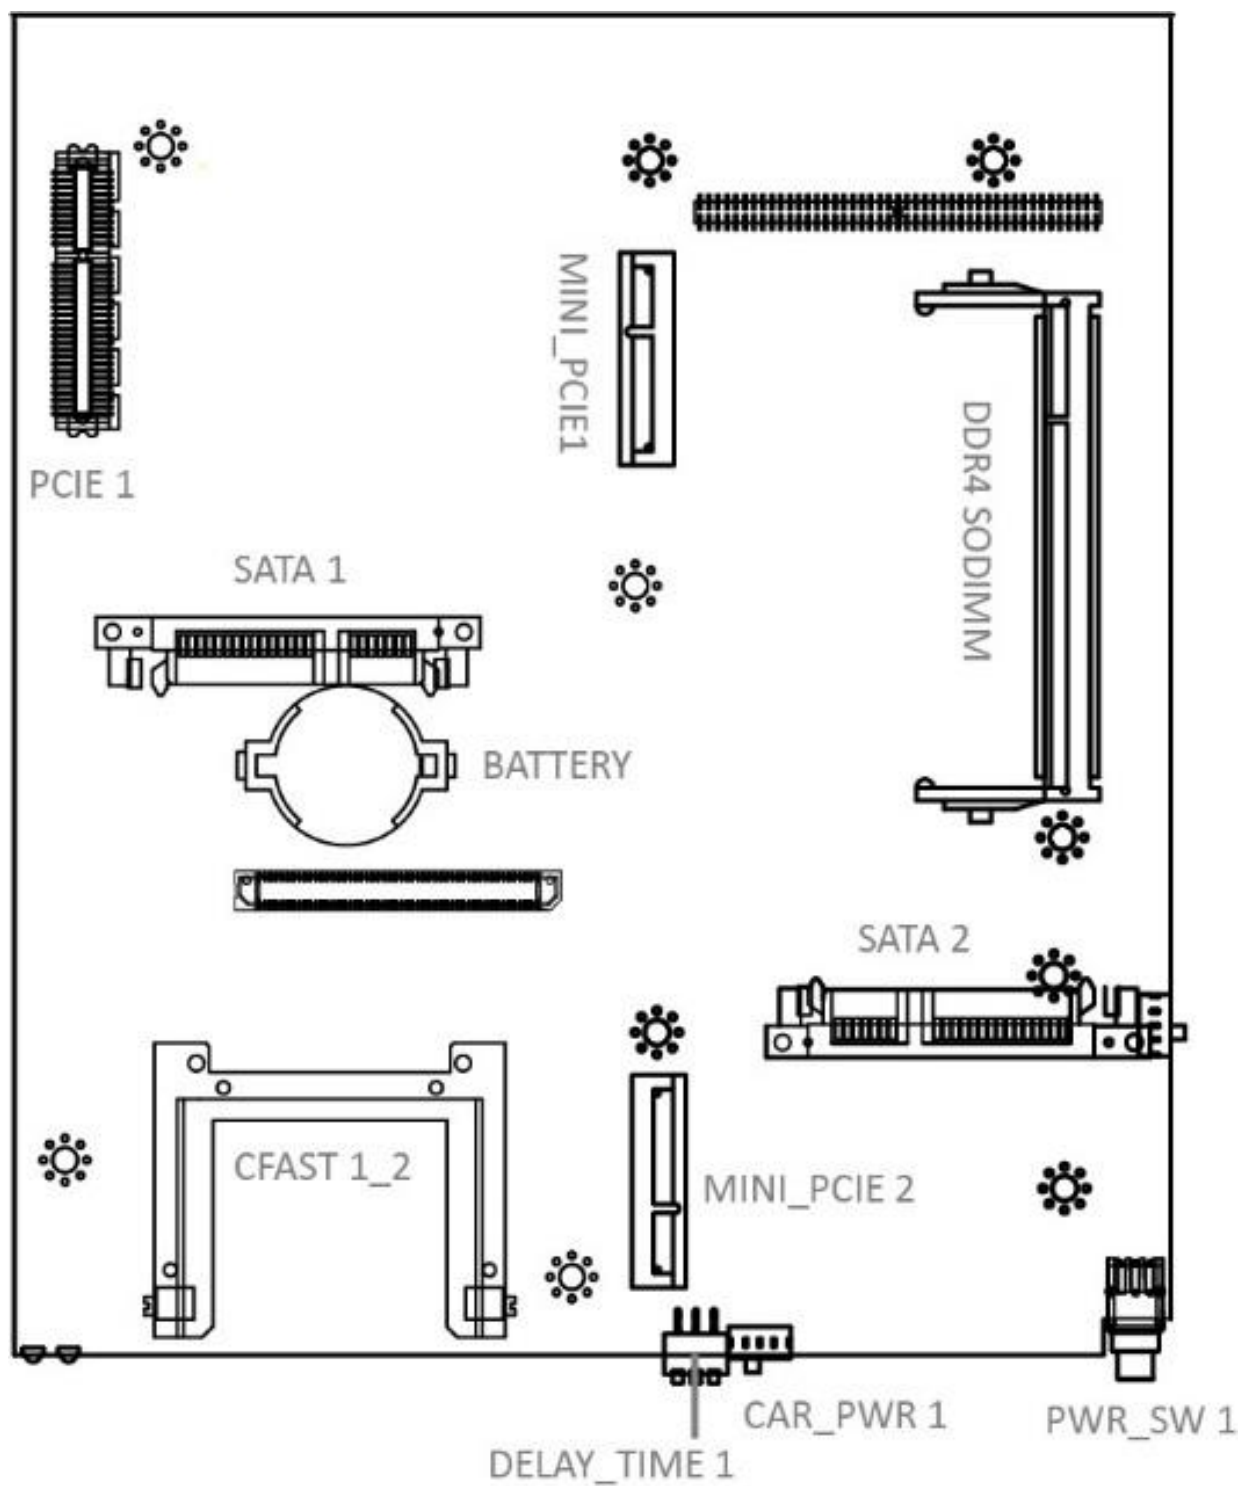

2.2 Connector / Switch Definition


List of Connector / Switch

Connector Location	Definition
AT_ATX1	AT / ATX Power Mode Switch
CLR_CMOS1	Clear BIOS Switch
CAR_PWR1	PC / Car Mode Switch
DELAY_TIME1	Car mode PC turn off delay time
CFAST1_2	CFast Socket
PWR_SW1	Power Switch
RESET1	Reset Switch
USB1_2_1, USB1_2_2	USB 3.0 Port
USB5_1, USB5_4	USB 2.0 Port
SIM1_1, SIM2_1	SIM Card Socket
COM1_1, COM2_1	RS232 / RS422 / RS485 Connector
COM3_2, COM4_2, COM5_1, COM6_1	RS232 / RS422 / RS485 Connector
LAN1, LAN2	LAN Port
LAN3, LAN4, LAN5, LAN6	LAN Port / M12 LAN Port
DC_IN1	3-pin DC 9~50V Power Input Connector
DP1, DP2	DisplayPort Connector
LINE_OUT1	Line-out Jack
MIC_IN1	Mic-in Jack
DIO1	8DI / 8DO Connector
PWR_SW4	Remote Power Switch
MINI-PCIE1	Mini PCI-Express / mSATA Socket
MINI-PCIE2	Mini PCI-Express Socket
SATA1, SATA2	SATA with Power Connector
PCIE1	PCI-Express x4 Slot
PWR_LED1	Power LED Status
HDD_LED1	HDD Access LED Status
LAN1_LINK1, LAN2_LINK1	LAN Link LED
LAN1_ACT1, LAN2_ACT1	LAN Active LED
GPIO_LED1	GPIO LED Status
WDT_LED1	Watchdog LED Status

2.3 Switches Definitions


AT_ATX1: AT / ATX Power Mode Switch

Switch	Definition
1-2 (Left)	ATX Power Mode (Default)
2-3 (Right)	AT Power Mode




CLR_CMOS1: Clear BIOS Switch

Switch	Definition
Off	Normal Status (Default)
ON	Clear BIOS



CAR_PWR1: PC / Car Mode Switch

Switch	Definition
1-2 (Right)	PC Power Mode (Default)
2-3 (Left)	Power Ignition Mode



DELAY_TIME1: Power off delay time setup Switch

Switch 1 / 2 / 3	Definition
ON / ON / ON	3 sec. (Default Shutdown Timer by O.S)
ON / ON / OFF	1 min.
ON / OFF / ON	5 min.
ON / OFF / OFF	10 min.
OFF / ON / ON	30 min.
OFF / ON / OFF	1 hour
OFF / OFF / ON	2 hour



Step of Setting Power Ignition

Step 1:

To select power ignition by PC/CAR switch.

Step 2:

To configure the power off delay time, please check the Delay Time Setting Options in advance.

Step 3:

To connect the power and ignition power


Step 3

Switch 1 / 2 / 3	Power off delay time
ON / ON / ON	3 second
ON / ON / OFF	1 minute
ON / OFF / ON	5 minutes
ON / OFF / OFF	10 minutes
OFF / ON / ON	30 minutes
OFF / ON / OFF	1 hour
OFF / OFF / ON	2 hours

Step 1

Pin 1-2 (Right): PC Mode

Pin 2-3 (Left): Power Ignition Mode

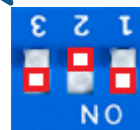

Step 3

To connect the battery power and ignition signal



Example: Delay Time Setting for 5 minutes

1. If delay time set as "5 minutes"




2. The system will shut down 5 minutes later after turning off the vehicle.



2.4 Connectors Definitions


CFAST1_2: CFast Socket

Pin	Definition	Pin	Definition	Pin	Definition
S1	GND	PC1	NC	PC10	NC
S2	SATA_TXP1	PC2	GND	PC11	NC
S3	SATA_TXN1	PC3	NC	PC12	NC
S4	GND	PC4	NC	PC13	+3.3V
S5	SATA_RXN1	PC5	NC	PC14	+3.3V
S6	SATA_RXP1	PC6	NC	PC15	GND
S7	GND	PC7	GND	PC16	GND
		PC8	NC	PC17	NC
		PC9	NC		

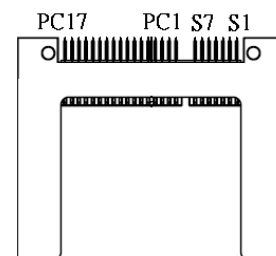

PWR_SW1: Power Button

Pin	Definition	Pin	Definition
1	NC	4	GND
2	Power Button	5	NC
3	NC	6	GND




RESET1 : Reset Button

Pin	Definition
1	RESET
2	GND




USB3.0 Connector, Type A

Pin	Definition	Pin	Definition
1	+5V	6	USB3_RX+
2	USB2_D-	7	GND
3	USB2_D+	8	USB3_TX-
4	GND	9	USB3_TX+
5	USB3_RX-		

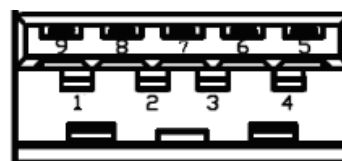


USB2.0 Connector, Type A

Pin	Definition
1	+5V
2	USB2_D-
3	USB2_D+
4	GND


**SIM1, SIM2: SIM Card Socket**

Pin	Definition	Pin	Definition
C1	UIM_PWR	C6	UIM_VPP
C2	UIM_RESET	C7	UIM_DATA
C3	UIM_CLK	CD	NC
C5	GND	COM	GND

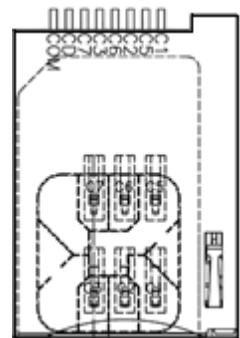**COM: RS232 / RS422 / RS485 Connector**

Connector Type: 9-pin D-Sub


Pin	RS232 Definition	RS422 / 485 Full Duplex Definition	RS485 Half Duplex Definition
1	DCD	TX-	DATA-
2	RxD	TX+	DATA+
3	TxD	RX+	
4	DTR	RX-	
5	GND	GND	GND
6	DSR		
7	RTS		
8	CTS		
9	RI		



COM: RS232 / RS422 / RS485 Connector


Connector Type: 2X5 10-pin box header, 2.54mm pitch

Pin	RS232 Definition	RS422 / 485 Full Duplex Definition	RS485 Half Duplex Definition
1	DCD	TX-	DATA-
2	DSR		
3	RxD	TX+	DATA+
4	RTS		
5	TxD	RX+	
6	CTS		
7	DTR	RX-	
8	RI		
9	GND	GND	GND
10	NC	NC	NC

**DC_IN1: DC Power Input Connector (+9~50V)**


Connector Type: Terminal Block 1X3 3-pin, 5.0mm pitch

Pin	Definition
1	+9~50VIN
2	Car power detect (ACC in)
3	GND

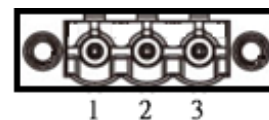**VGA: Standard VGA Connector**


Connector Type: 15-pin D-Sub

Pin	Definition	Pin	Definition
1	RED	9	+5V
2	GREEN	10	S_GND
3	BLUE	11	NC
4	NC	12	SDA
5	GND	13	HSYNC
6	R_GND	14	VSYNC
7	G_GND	15	SCL
8	B_GND		

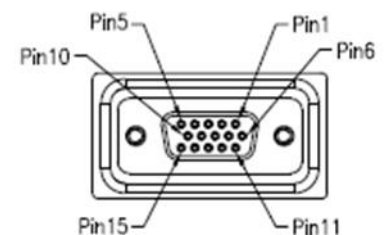

DP: DisplayPort Connector

Pin	Definition	Pin	Definition
1	DP_LANE0_P	11	GND
2	GND	12	DP_LANE3_N
3	DP_LANE0_N	13	GND
4	DP_LANE1_P	14	GND
5	GND	15	DP_AUX_P
6	DP_LANE1_N	16	GND
7	DP_LANE2_P	17	DP_AUX_N
8	GND	18	DP_HPD
9	DP_LANE2_N	19	GND
10	DP_LANE3_P	20	+3.3V

**LINE_OUT1 : Line-out Jack (Green)**

Connector Type: 5-pin Phone Jack

Pin	Definition
1	GND
2	OUT_R
3	NC
4	GND
5	OUT_L

**MIC_IN1: Microphone Jack (Pink)**

Connector Type: 5-pin Phone Jack




Pin	Definition
1	GND
2	MIC_R
3	NC
4	GND
5	MIC_L





DIO1: Digital Input / Output Connector

Connector Type: Terminal Block 2X9 18-pin, 3.5mm pitch

Pin	Definition	Pin	Definition
1	DIN1	2	DOUT1
3	DIN2	4	DOUT2
5	DIN3	6	DOUT3
7	DIN4	8	DOUT4
9	DIN5	10	DOUT5
11	DIN6	12	DOUT6
13	DIN7	14	DOUT7
15	DIN8	16	DOUT8
17	DC power input (+5V~+30V)	18	GND

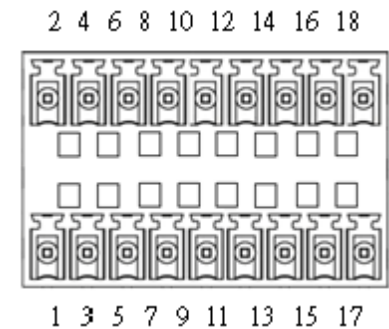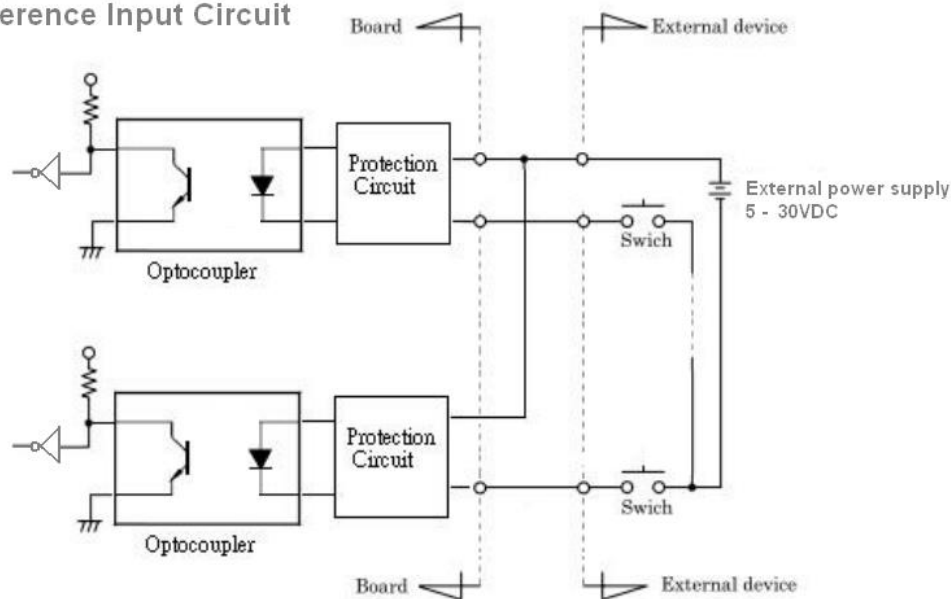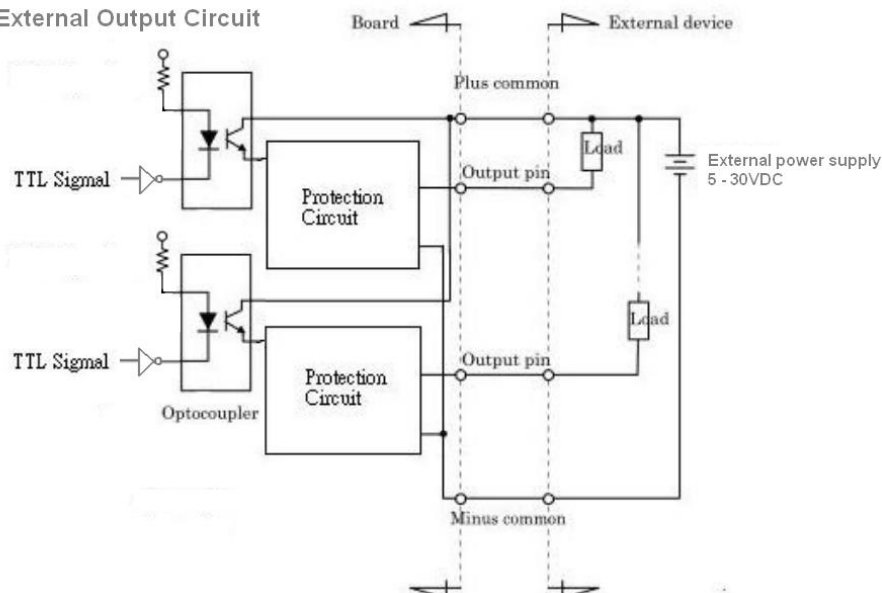**Reference Input Circuit****External Output Circuit**

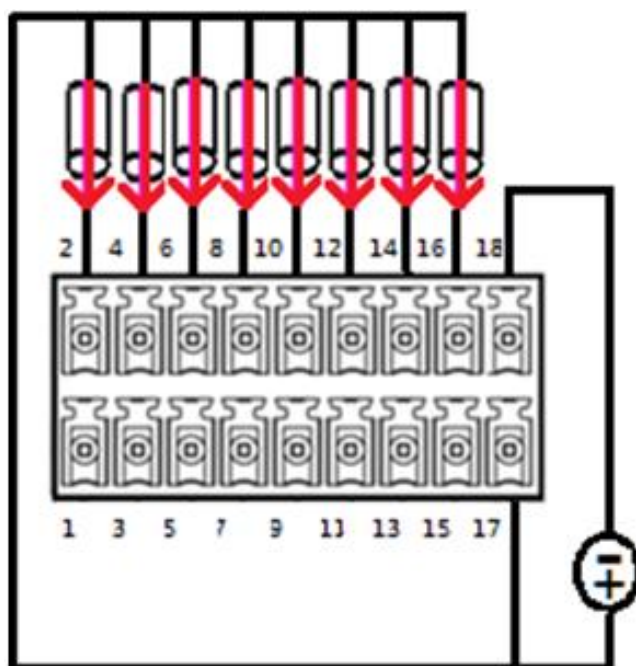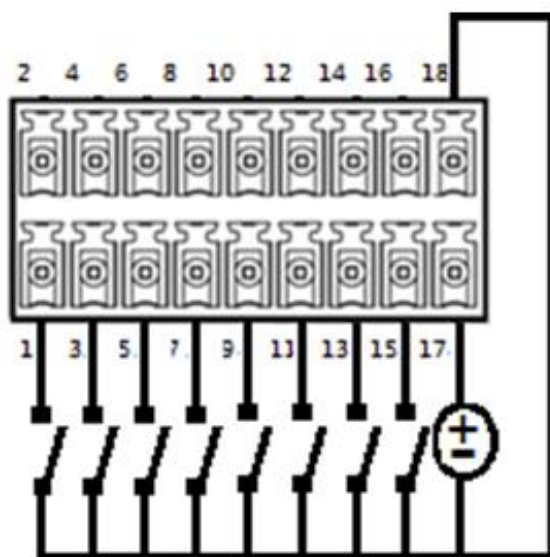**PWR_SW1 : Remote Power Switch**

Connector Type: Terminal Block 1X2 2-pin, 3.5mm pitch


Pin	Definition
1	Power Button
2	GND



LAN1, LAN2: RJ45 with LEDs Port

Connector Type: RJ45 Connector

Pin	Definition	Pin	Definition
1	LAN_MDI0P	5	LAN_MDI2N
2	LAN_MDI0N	6	LAN_MDI1N
3	LAN_MDI1P	7	LAN_MDI3P
4	LAN_MDI2P	8	LAN_MDI3N

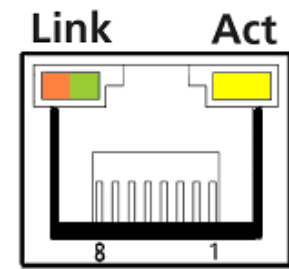

Act LED Status	Definition
Blinking Yellow	Data Activity
Off	No Activity

Link LED Status	Definition
Steady Orange	1Gbps Network Link
Steady Green	100Mbps Network Link
Off	10Mbps Network Link


SATA with Power Connector

Pin	SATA1_1 Definition	Pin	SATA1_1 Definition
1	GND	12	GND
2	TxP	13	GND
3	TxN	14	+5V
4	GND	15	+5V
5	RxN	16	+5V
6	RxP	17	GND
7	GND	18	GND
8	NC	19	GND
9	NC	20	+12V
10	DEVSLP	21	+12V
11	GND	22	+12V




MINIPCI1: Mini PCI-Express / mSATA Socket

Pin	Definition	Pin	Definition	Pin	Definition
1	WAKE#	19	NC	37	GND
2	+3.3V	20	NC	38	USB2_D+
3	NC	21	GND	39	+3.3V
4	GND	22	RESET#	40	GND
5	NC	23	RxN	41	+3.3V
6	+1.5V	24	+3.3VAUX	42	NC
7	CLKREQ#	25	RxP	43	GND
8	UIM_PWR	26	GND	44	DEVSLP
9	GND	27	GND	45	NC
10	USIM_DATA	28	+1.5V	46	NC
11	REFCLK-	29	GND	47	NC
12	UIM_CLK	30	SMB_CLK	48	+1.5V
13	REFCLK+	31	TxN	49	NC
14	UIM_RST	32	SMB_DATA	50	GND
15	GND	33	TxP	51	PCIE_MSATA_SEL
16	USIM_VPP	34	GND	52	+3.3V
17	NC	35	GND		
18	GND	36	USB2_D-		

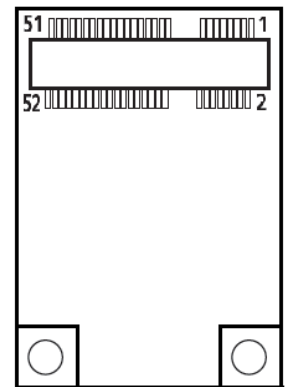**MINIPCI2: Mini PCI-Express Socket**


Pin	Definition	Pin	Definition	Pin	Definition
1	WAKE#	19	NC	37	GND
2	+3.3V	20	NC	38	USB2_D+
3	NC	21	GND	39	+3.3V
4	GND	22	RESET#	40	GND
5	NC	23	RxN	41	+3.3V
6	+1.5V	24	+3.3VAUX	42	NC
7	CLKREQ#	25	RxP	43	GND
8	UIM_PWR	26	GND	44	NC
9	GND	27	GND	45	NC
10	UIM_DATA	28	+1.5V	46	NC
11	REFCLK-	29	GND	47	NC
12	UIM_CLK	30	SMB_CLK	48	+1.5V
13	REFCLK+	31	TxN	49	NC
14	UIM_RST	32	SMB_DATA	50	GND
15	GND	33	TxP	51	NC
16	UIM_VPP	34	GND	52	+3.3V
17	NC	35	GND		
18	GND	36	USB2_D-		

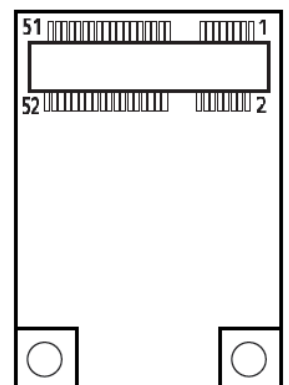

PCIE1: PCI-Express x4 Socket

Connector Type: PCI-Express x4 Slot

Pin	Definition	Pin	Definition
A1	FAN_P4	B1	+12V
A2	+12V	B2	+12V
A3	+12V	B3	+12V
A4	GND	B4	GND
A5	NC	B5	SMB_CLK
A6	NC	B6	SMB_DATA
A7	NC	B7	GND
A8	NC	B8	+3.3V
A9	+3.3V	B9	NC
A10	+3.3V	B10	+3.3VAUX
A11	RESET#	B11	WAKE#
A12	GND	B12	FAN_P3
A13	REFCLK+	B13	GND
A14	REFCLK-	B14	TxP0
A15	GND	B15	TxN0
A16	RxP0	B16	GND
A17	RxN0	B17	FAN_P2
A18	GND	B18	GND
A19	NC	B19	TxP1
A20	GND	B20	TxN1
A21	RxP1	B21	GND
A22	RxN1	B22	GND
A23	GND	B23	TxP2
A24	GND	B24	TxN2
A25	RxP2	B25	GND
A26	RxN2	B26	GND
A27	GND	B27	TxP3
A28	GND	B28	TxN3
A29	RxP3	B29	GND
A30	RxN3	B30	NC
A31	GND	B31	NC
A32	NC	B32	GND



PWR_LED1: Power LED Status

Pin	Definition
1	POWER LED+
2	POWER LED-

**HDD_LED1: HDD Access LED Status**

Pin	Definition
1	HDD LED+
2	HDD LED-

**LAN1_LINK1, LAN2_LINK1 : LAN Link LED Status**

Pin	Definition
1	LINK LED+
2	LINK LED-100Mbps-
3	LINK LED 100Mbps-

**LAN1_ACT1, LAN2_ACT1 : LAN Active LED Status**

Pin	Definition
1	ACTIVE LED+
2	ACTIVE LED-

**GPIO_LED1: GPIO LED Status**

Pin	Definition
1	GPIO LED+
2	GPIO LED-

**WDT_LED1: Watchdog LED Status**

Pin	Definition
1	WATCHDOG LED+
2	WATCHDOG LED-



Chapter 3

System Setup

3.1 Set torque force to 3.5 kgf-cm to execute all the screwing and unscrewing.

**WARNING**

In order to prevent electric shock or system damage, before removing the chassis cover, must turn off power and disconnect the unit from power source.

3.2 Removing chassis bottom cover

1. Turn the system upside down. Unscrew the six screws (M3x5L) on the bottom cover.



2. Now you can remove the bottom cover.




3.3 Removing PCIe/PCI expansion module

1. This step only applies to RCO-3411 and RCO-3422 series, which is equipped with PCIe/PCI expansion module. The following steps use RCO-3422 as example.
2. Unscrew four screws (M3x5L) circled below.



3. Now you can remove the PCIe/PCI expansion module.

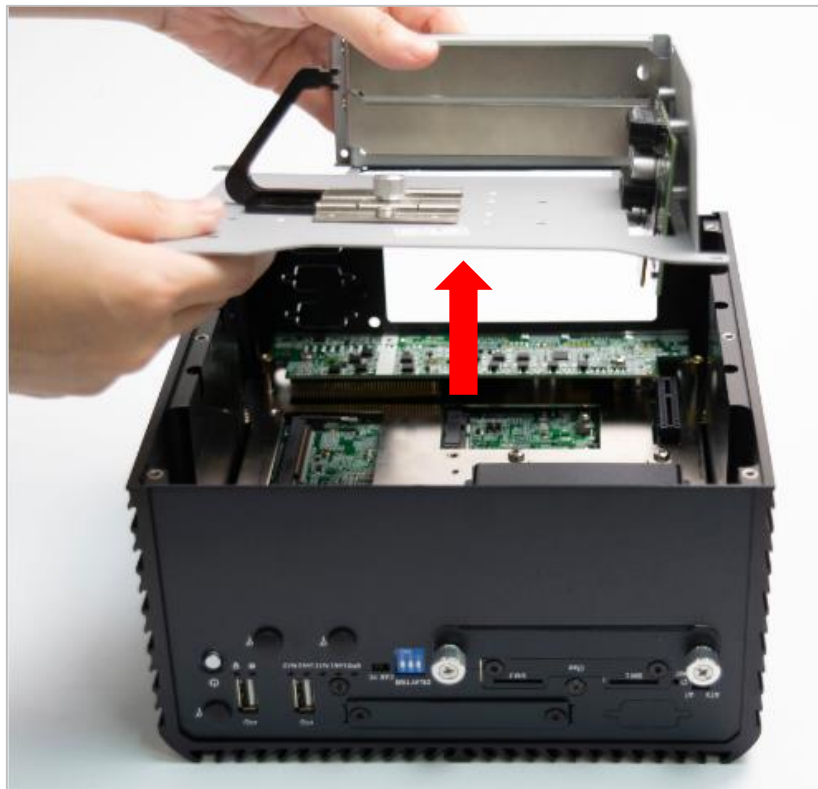


3.4 Installing SODIMM

1. Unscrew the below four screws to remove the HDD bracket.




2. After removing internal SATA HDD bracket, you will be able to access the memory slot.

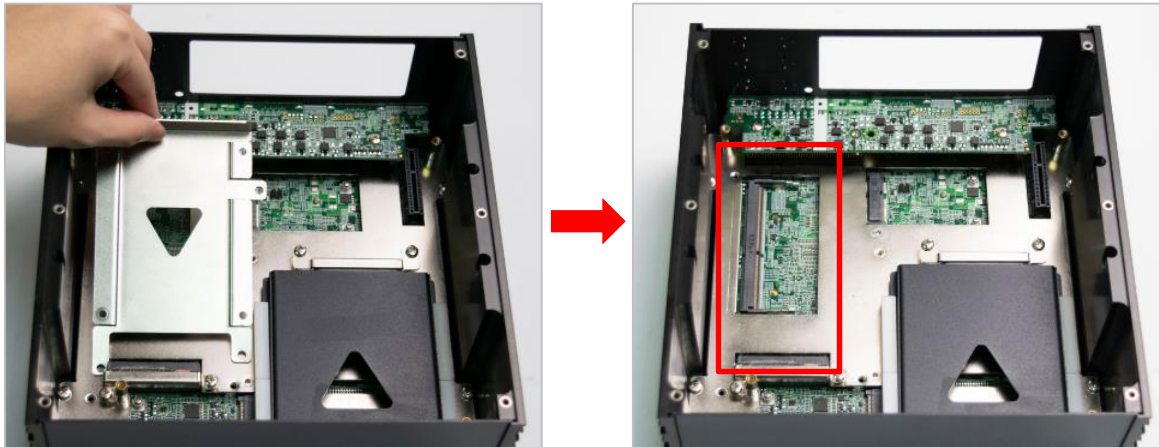

3. Insert memory module from 45 degree direction.




4. Press the memory module vertically downward until you hear the “click” sound. Make sure the memory module is firmly in place.

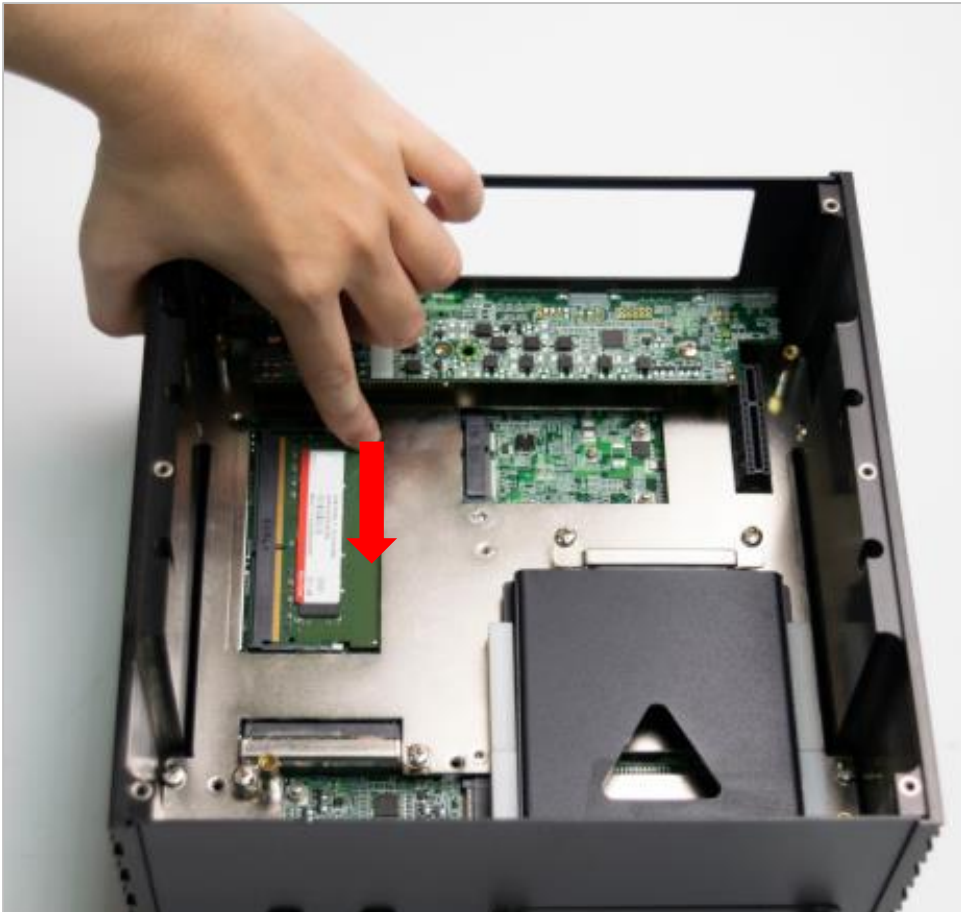


3.5 Installing HDD on internal SATA HDD bay

1. Unscrew the below four screws (M3x5L) to remove the internal SATA HDD bay.

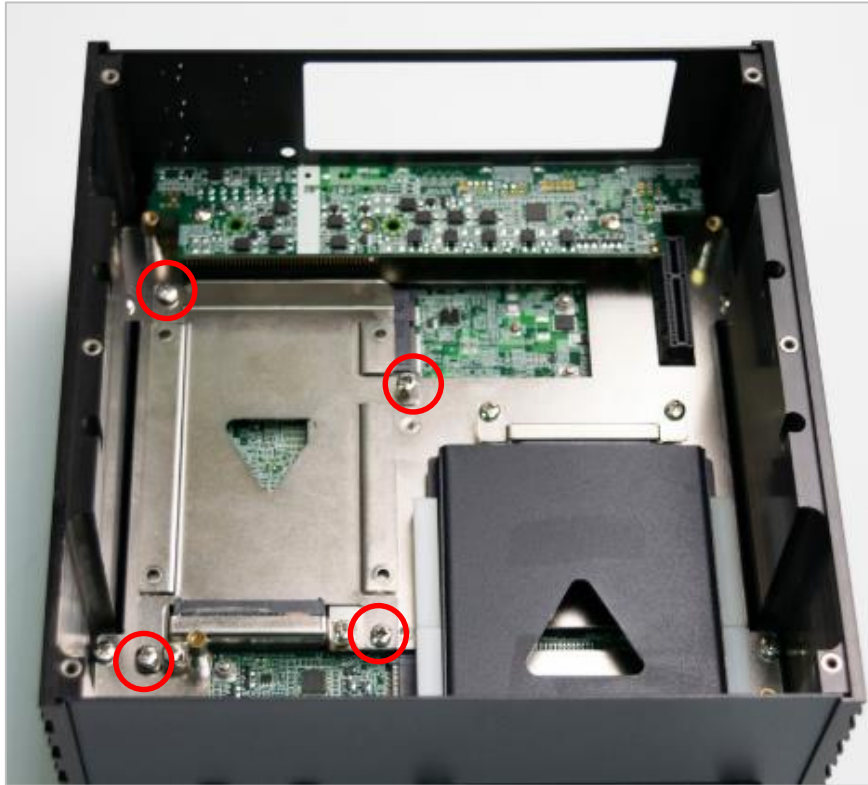

2. Lock the 2.5" HDD with HDD bracket using four screws (M3x4L).

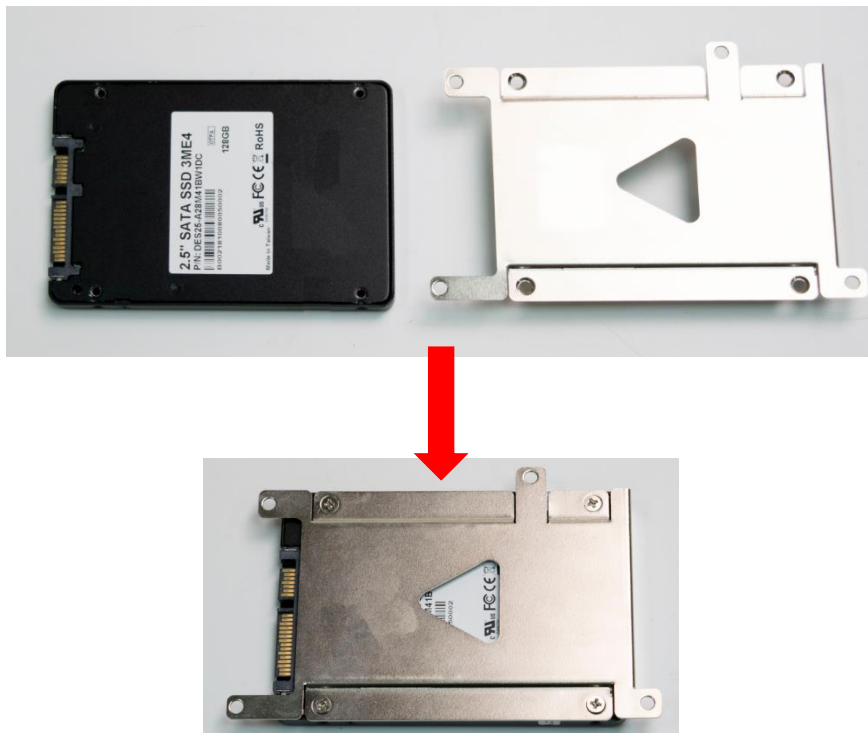

3. Install the HDD bracket following the direction below.



4. Fasten the four screws to lock the internal HDD bracket.



3.6 Installing HDD on removable SATA HDD bay

1. Unscrew the two sun screws circled below to take out the removable SATA HDD bay.



2. Lock the 2.5" HDD with HDD bracket using four screws (M3x4L).




3. Slide the HDD bracket back and then fasten the sun screws.




3.7 Installing mini PCIe / mSATA card

1. Two mini PCIe slots are available for RCO-3400 series. MiniPCIE1 supports mSATA.

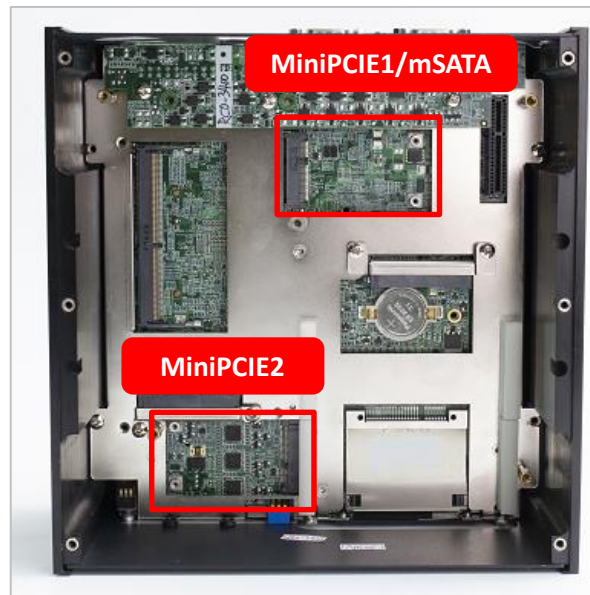

2. Insert mini PCIe card or mSATA module from 45 degree direction.

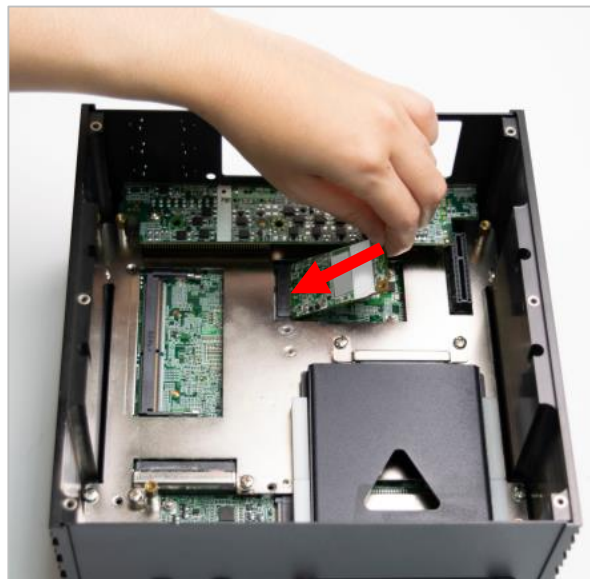

3. Press the mini PCIe card or mSATA module down and lock it with two screws (M2x3.7L).



3.8 Installing antenna

1. Three antenna holes are available for RCO-3400 series on the rear panel.



2. Remove antenna hole cover on the system panel.



3. Have antenna jack penetrate through the hole.



4. Put on washer and fasten the nut with antenna jack.



5. Assemble the antenna and antenna jack together.




6. Attach the RF connector at the cable-end onto the communication module.




3.9 Installing PCIe / PCI expansion card


1. PCIe or PCI card with FHHL dimension is supported by RCO-3400 series.
2. Unscrew the screw (M3x5L) to remove the plane bracket.

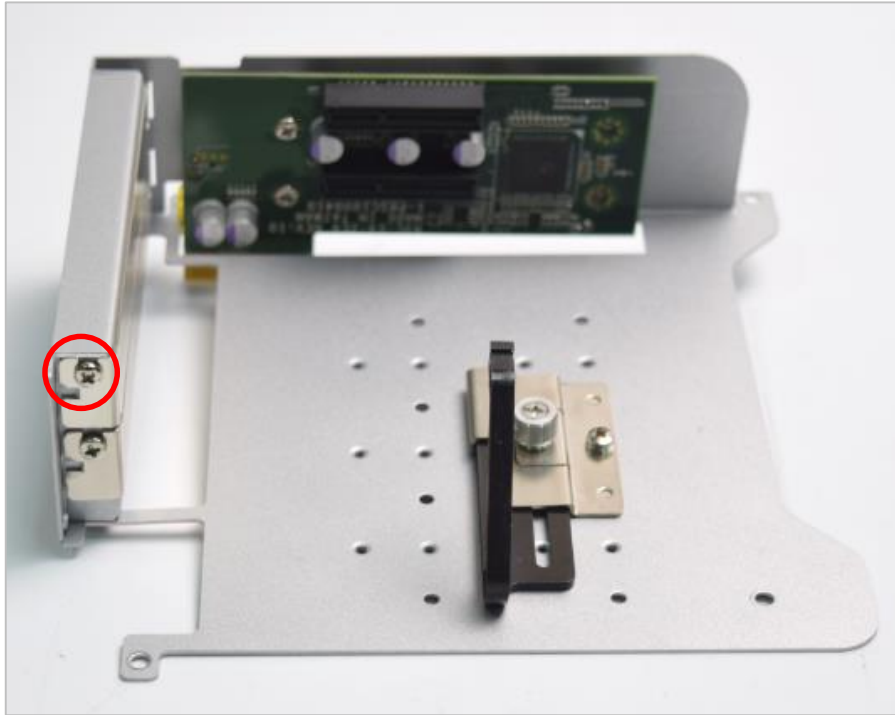


3. Loose the sun screw (circled below) on the holder so the pairing arm can be adjustable.

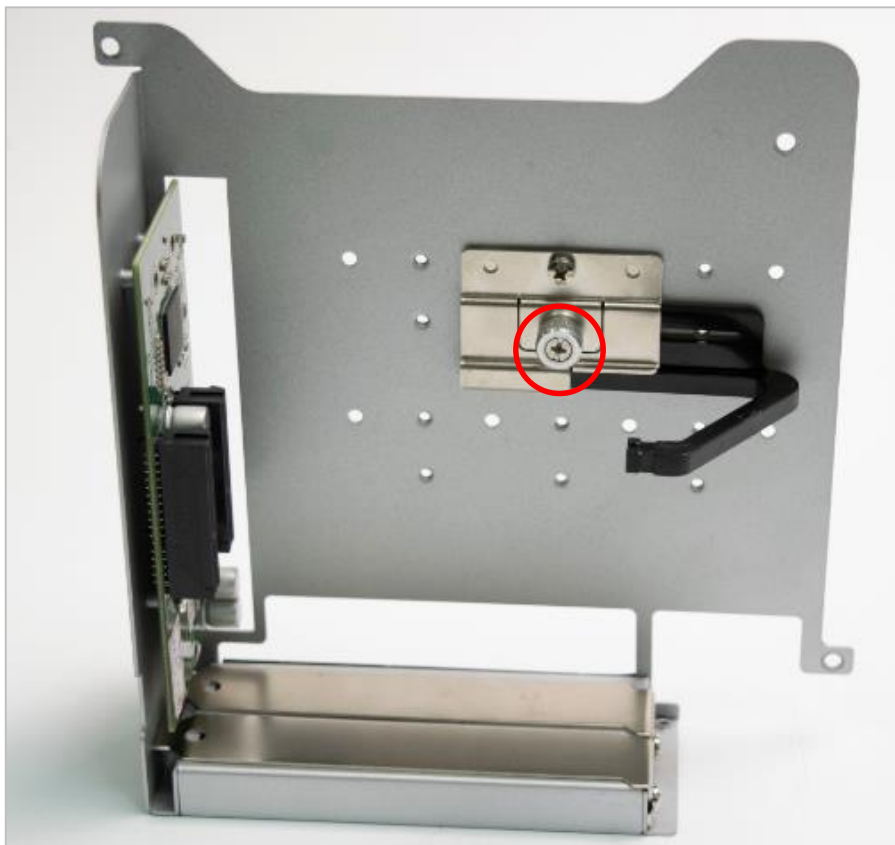


4. Install the PCIe/PCI card according to the below direction and ensure the gold finger is inserted into the slot. Then fasten the screw in the circle.

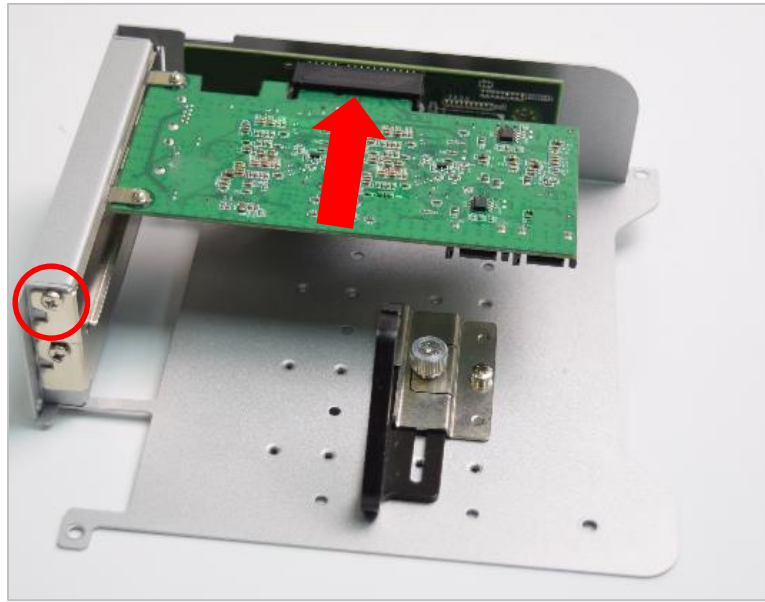

5. Adjust the arm until it holds the card firmly in place. Then fasten the sun screw on the holder.

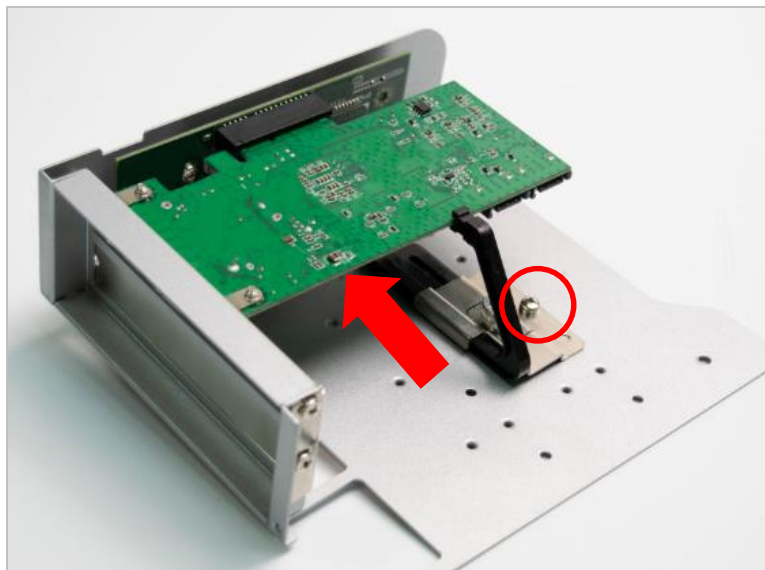

6. For RCO-3422 series, install the upper card (Card 1) first and then install the lower card (Card 2).

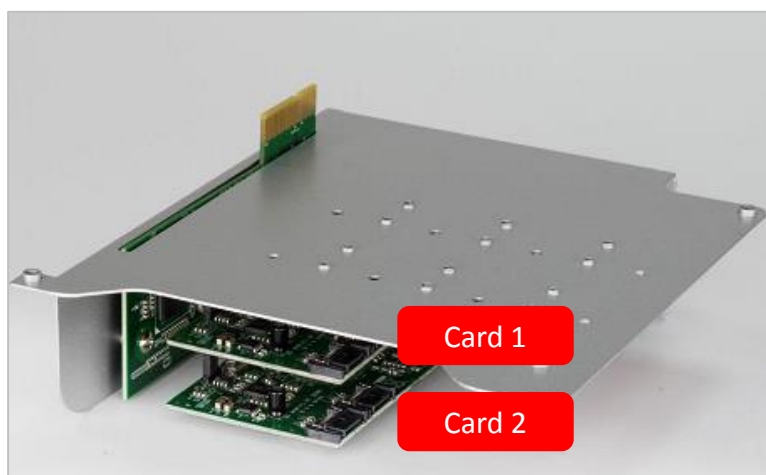

3.10 Assemble PCIe/PCI expansion module

1. Install the expansion module back in place and ensure the golden finger is inserted into the expansion slot.



2. Fasten the four screws (M3x5L) below.



3.11 Assemble chassis bottom cover

1. Place the bottom cover according to the below direction and make sure the rail is facing inside the system.



2. Lock the bottom cover with the six screws (M3x5L).



3.12 Assemble SIM card

1. Take out the removable SATA HDD bay in order to locate the SIM card slot.



2. Now you can insert SIM card into the socket.



3. Please note that the installation of SIM 1 and SIM 2 has to match the installation of mini PCIe slots.

SIM Card Socket Number	Matching Mini PCIe Slot
SIM 1	Mini PCIe 1 / mSATA (CN1)
SIM 2	Mini PCIe 2 (CN2)

4. To uninstall SIM card, simply press the installed SIM card and then the card will be pushed out.

3.13 Installing wall mount kit

1. Wall mount kit is available for RCO-3400 series included in the standard package.



2. Turns the system to the side. Slide the side kit in via the top cover fin and secure them with four screws.



3. Lock the wall mount on side kits with four screws. Apply the same procedure to the other side.



4. Completion.



3.14 Installing DIN rail holder

1. Din rail holder is available for RCO-3400 series as optional accessories.



2. Place the system upside down so you can see the bottom cover with two screw holes for din rail holder.



3. Place the din rail holder on top of the bottom cover and lock it with two screws (M4x5L, Nylok).



Chapter 4

BIOS Setup

4.1 BIOS Introduction

The system BIOS software is stored on EEPROM. The BIOS provides an interface to modify the configuration. When the battery is removed, all the parameters will be reset.

BIOS Setup

Power on the embedded system and by pressing immediately allows you to enter the setup screens. If the message disappears before you respond and you still wish to enter the Setup, restart the system by turning it OFF and ON or pressing the RESET button.

You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

Control Keys	
<→> <←>	Select Screen
<↑> <↓>	Select Item
<Enter>	Select
<Page Up/+>	Increases the numeric value or makes changes
<Page Down/->	Decreases the numeric value or makes changes
<F1>	General Help
<F2>	Previous Value
<F3>	Load Optimized Defaults
<F4>	Save Configuration and Exit
<Tab>	Select Setup Fields
<Esc>	Exit BIOS Setup

Main Setup


The main menu lists the setup functions you can make changes to. You can use the arrow keys (↑↓) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

4.2 Main Setup

Press to enter BIOS CMOS Setup Utility. The Main setup screen is showed as following when the setup utility is entered. System Date/Time is set up in the Main Menu.

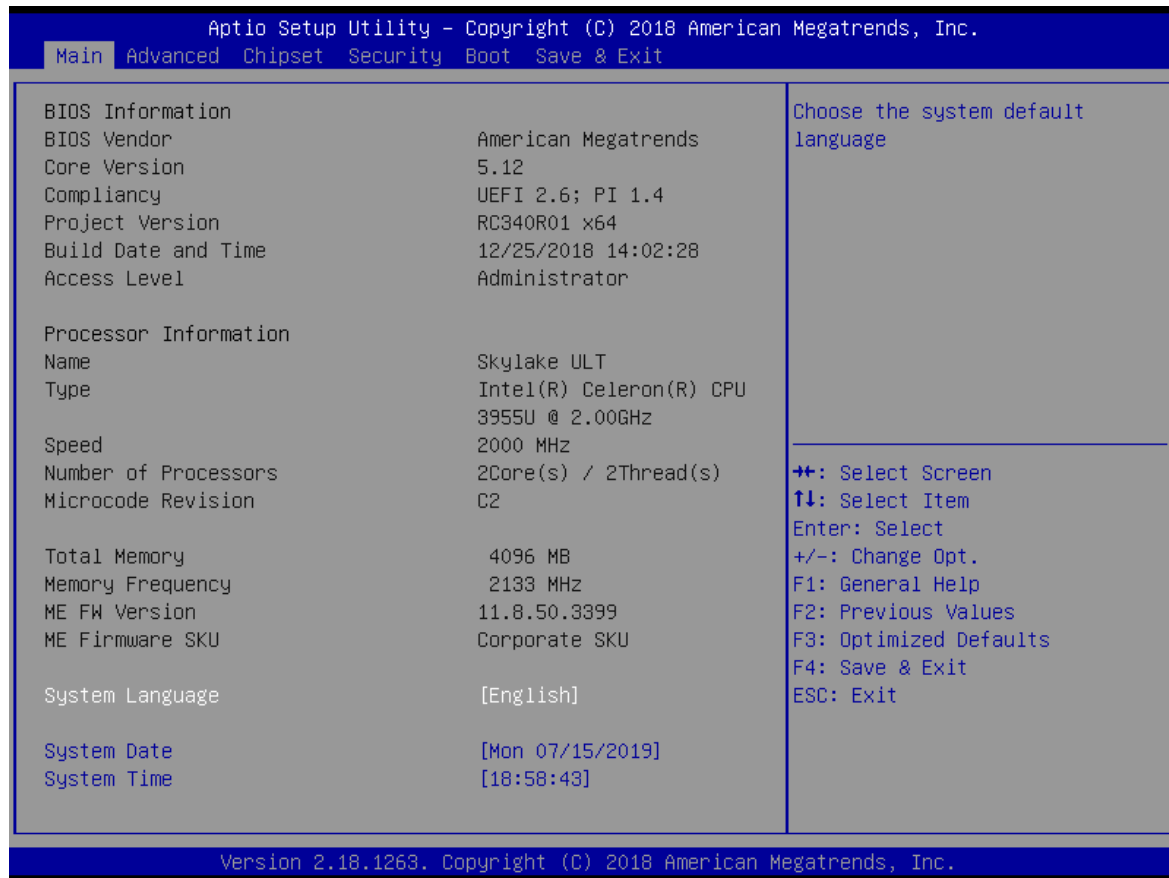


System Date

Set the system date. Please use <Tab> to switch between data elements.

System Time

Set the system time. Please use <Tab> to switch between time elements.

4.3 Advanced Setup

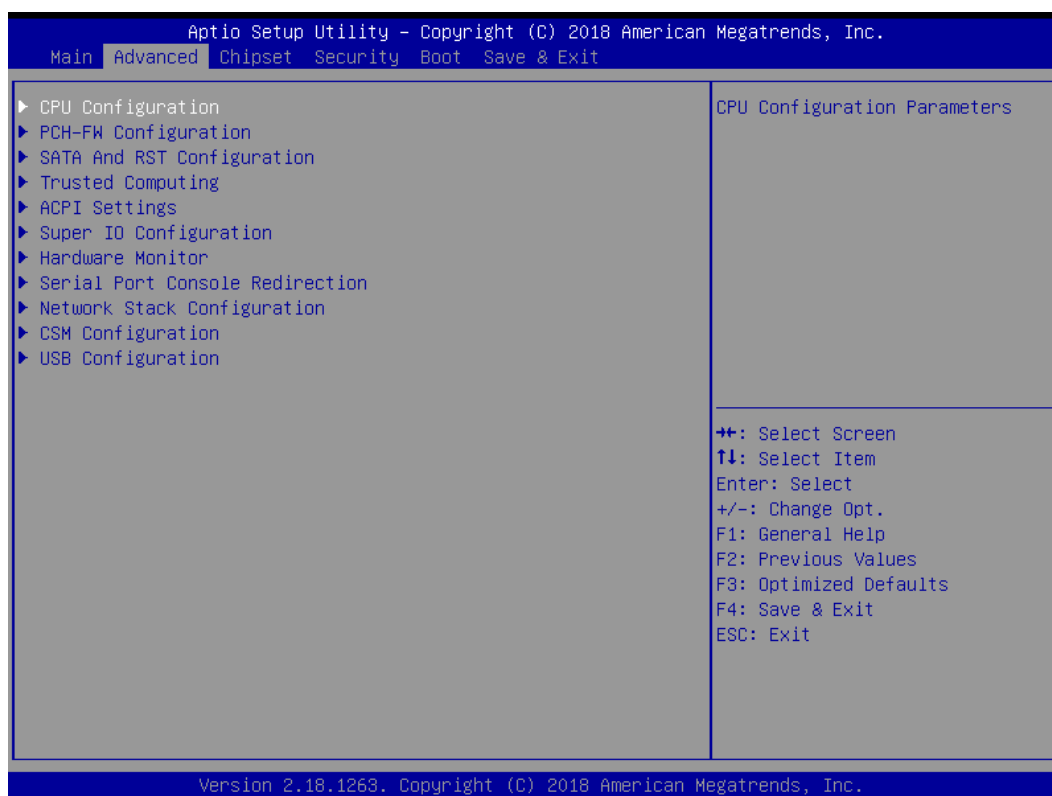

4.3.1 CPU Configuration



■ Intel Virtualization Technology

Virtualization enhanced by Intel Virtualization Technology will allow a platform to run multiple operating systems and applications in independent partitions. With virtualization, one computer system can function as multiple Virtual systems.

■ Active Processor Cores

Set number of cores to be enabled. Select <All>, <1>, <2>, <3>, <4>, <5>, <6>, <7>, or <8> mode.

■ Intel SpeedStep

This item allows you to enable or disable the Intel SpeedStep.

● Turbo Mode

This item allows you to enable or disable the Turbo Mode.

■ CPU C states

This item allows you to set the power saving of the CPU states.


● Enhanced C States

This item allows your CPU reduce power consumption.


■ Package C State limit

Select Auto for the AMI BIOS to automatically set the limit on the C-State package register. The options are C0/ C1, C2, C3, C6, C7, C7s, C8 and No Limit.

4.3.2 PCH-FW Configuration

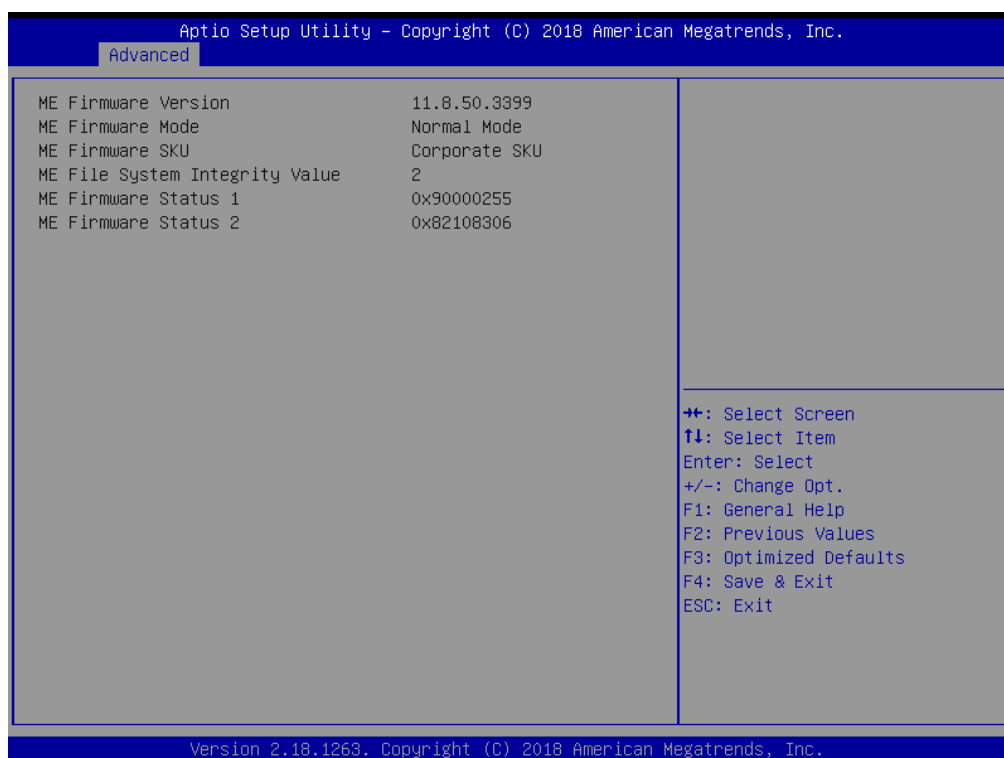

4.3.3 SATA and RST Configuration

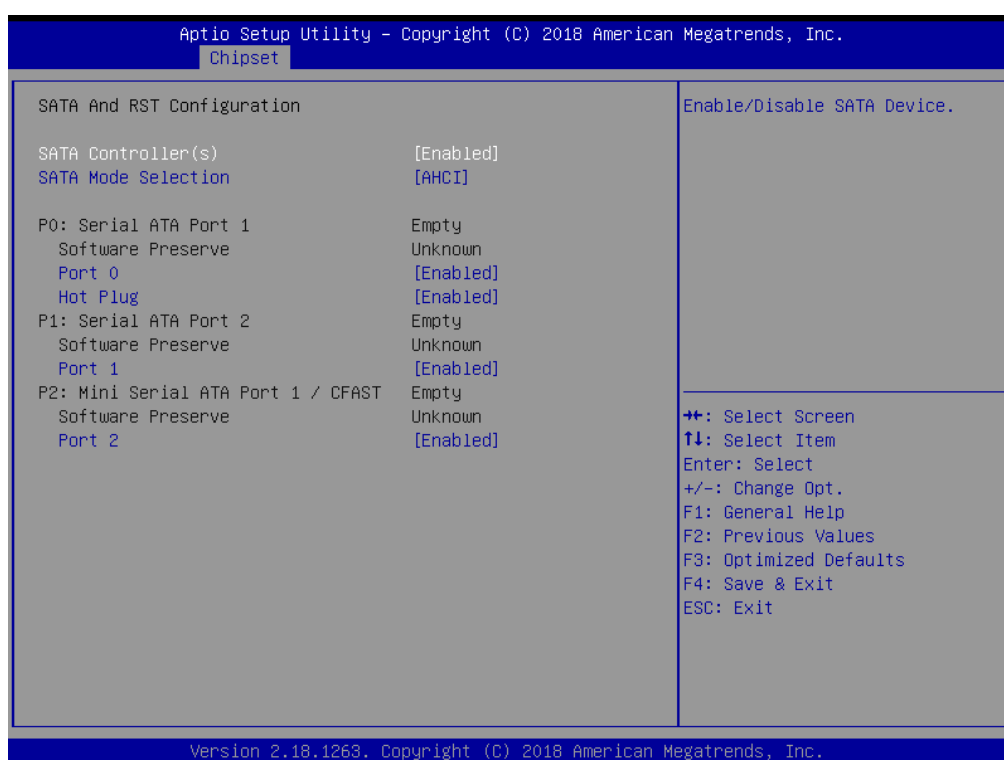

■ SATA Controller(s)

Enable or disable Serial ATA controller.

■ SATA Mode Selection

This item allows users to select mode of SATA controller.


■ Serial ATA Port 0 / 1 / 2

This item allows users to enable or disable Serial ATA Port 0 / 1 / 2.


4.3.4 RST (UEFI RAID) Configuration

How to set the UEFI RAID:


1. When set to RAID, please save change reset system.

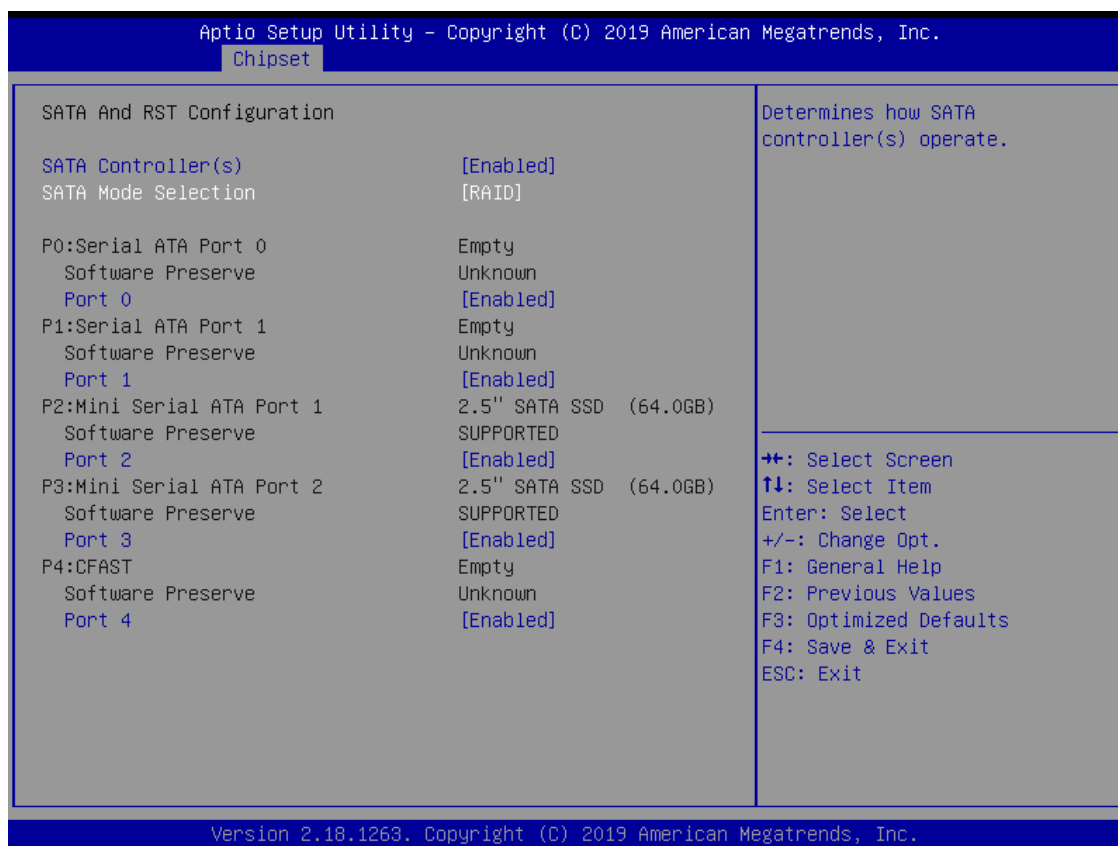


2. After reboot the system, please into BIOS utility and then will see "Intel (R) Rapid Storage Technology"

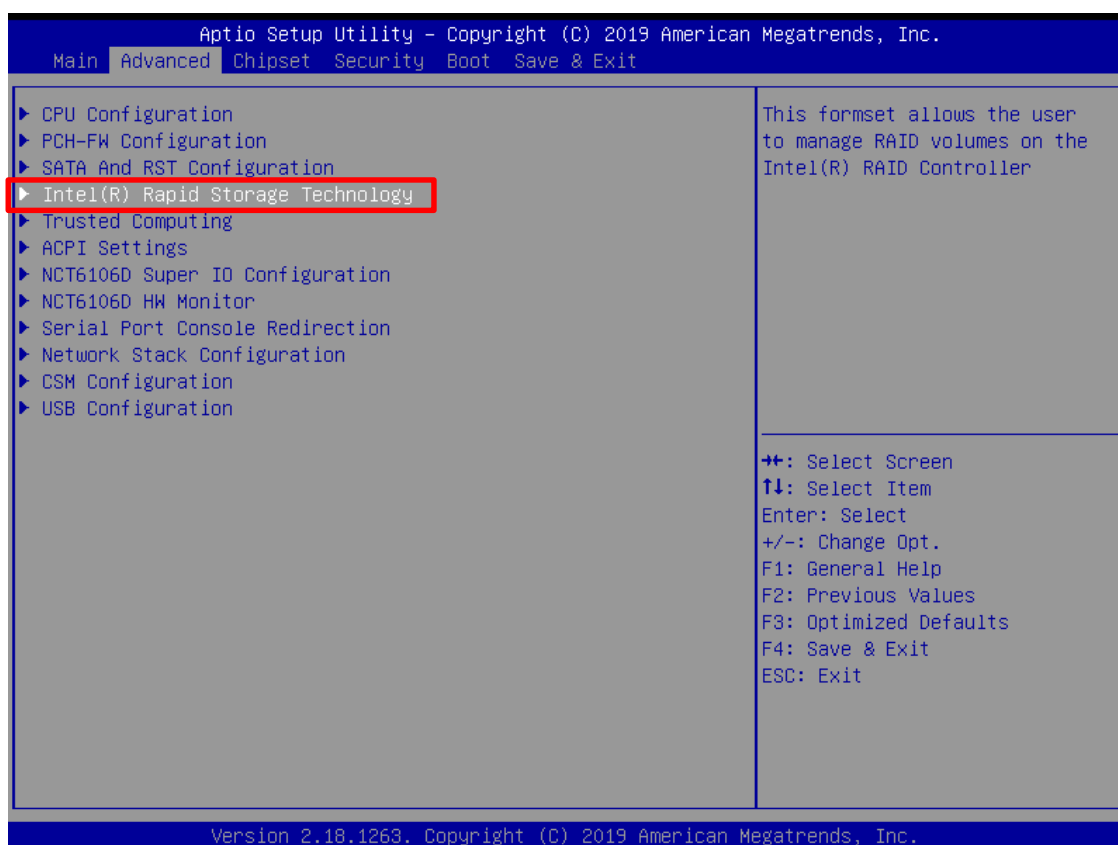

3. Into Intel(R) Rapid Storage Technology, and start create RAID volume.

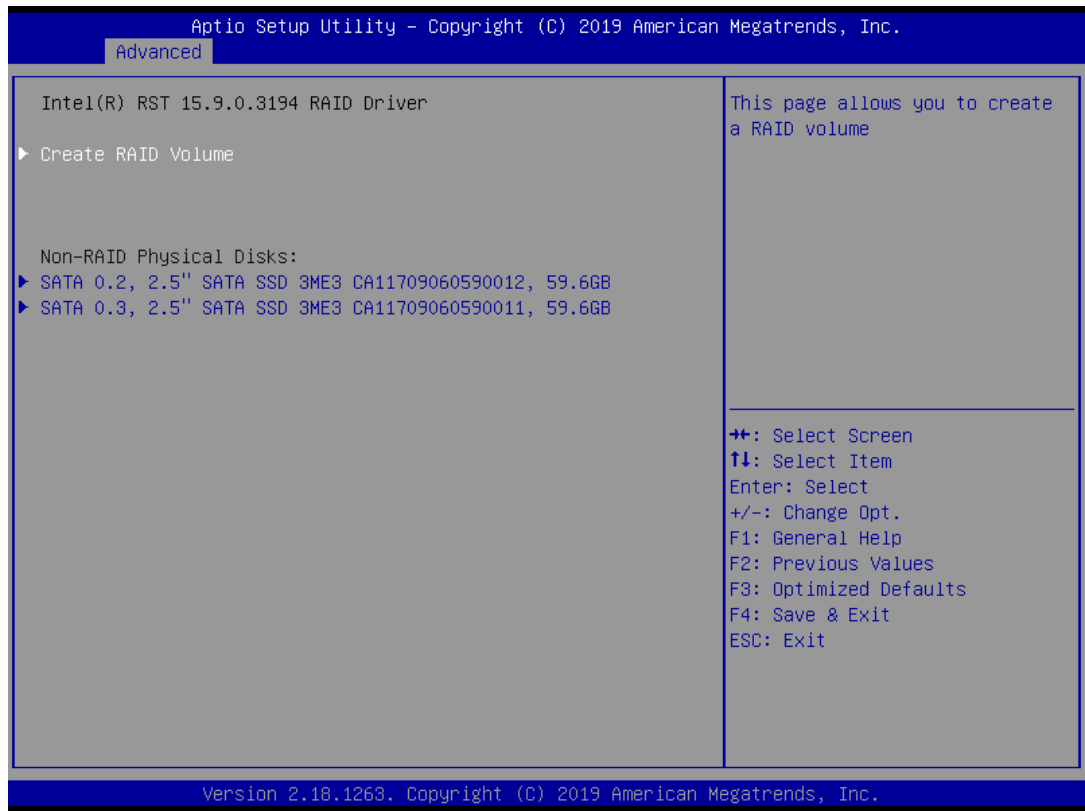


4. Start Create the RAID

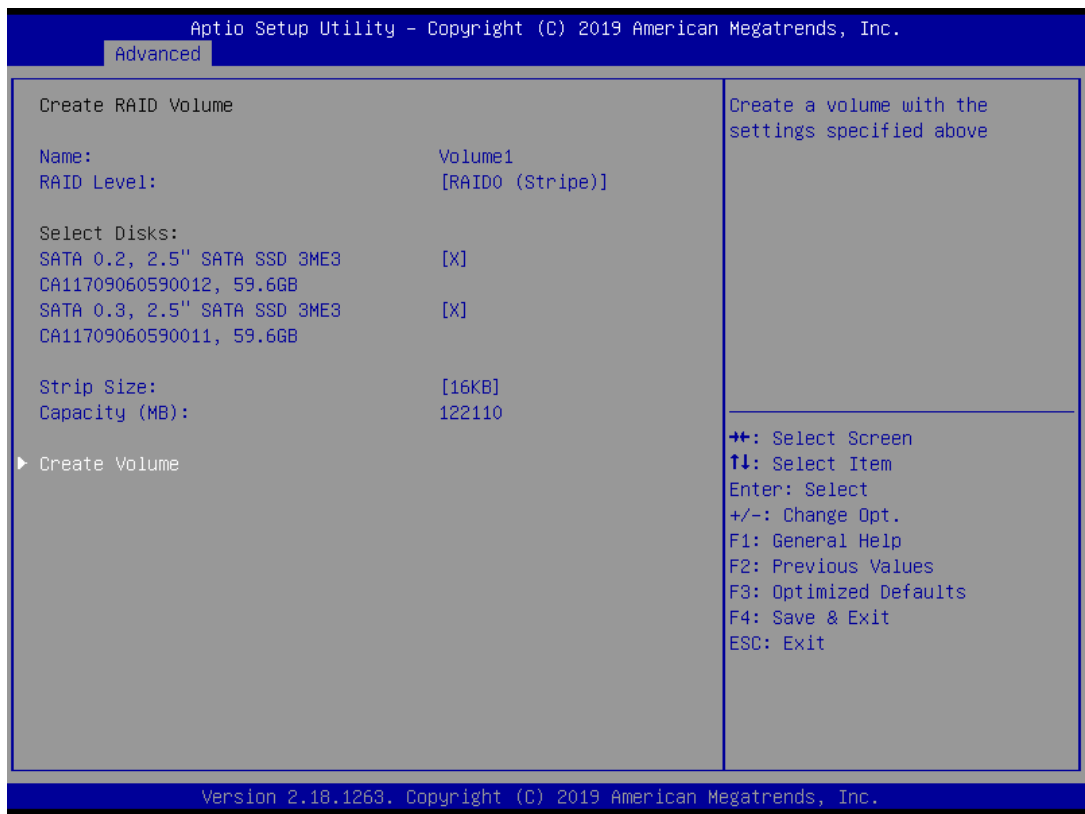


- Select Disk that you want to do the RAID
- Select [x]; No-Select []

4.3.5 Trusted Computing

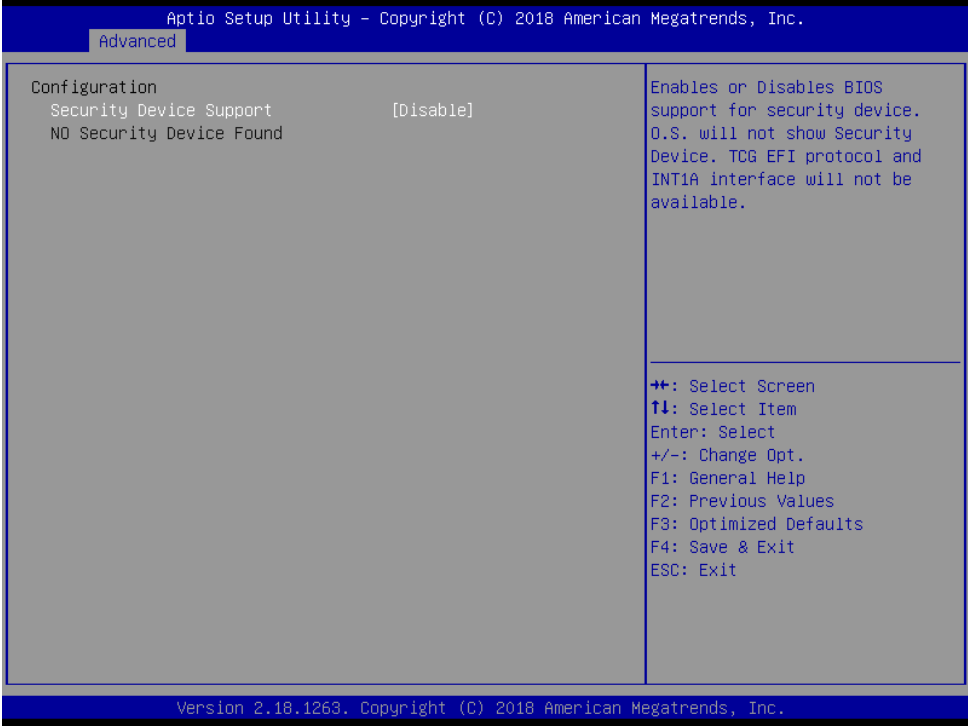

- **Security Device Support**
Enable or disable Security Device Support.


4.3.6 ACPI Settings

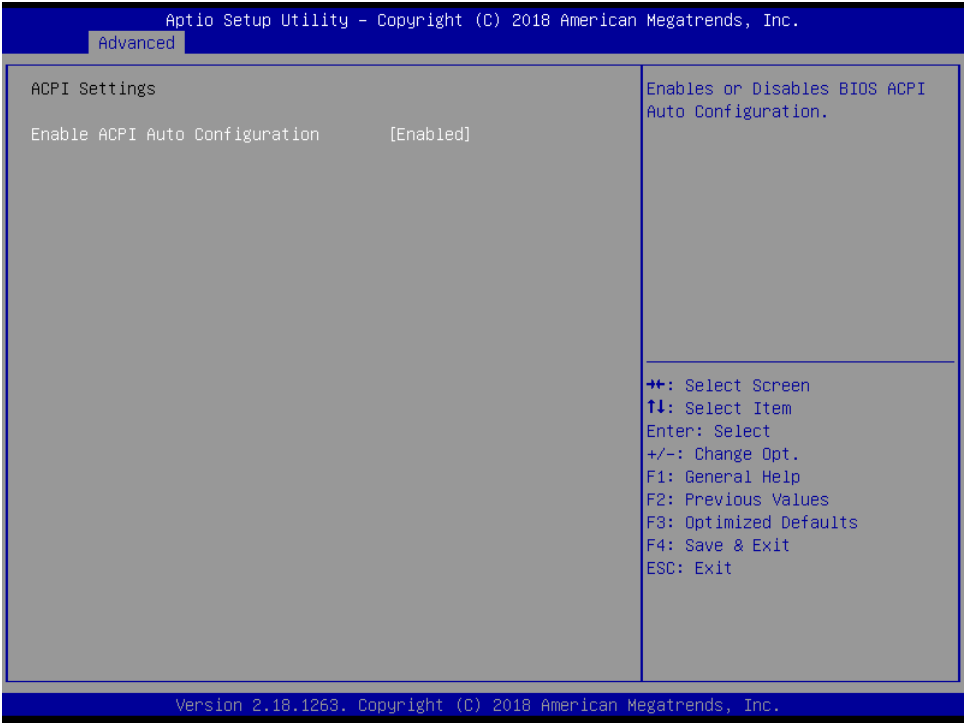


- **Enable ACPI Auto Configuration**
Enable or disable ACPI Auto Configuration.

4.3.7 Super IO Configuration

This setting allows you to select options for the Super IO Configuration, and change the value of the selected option.

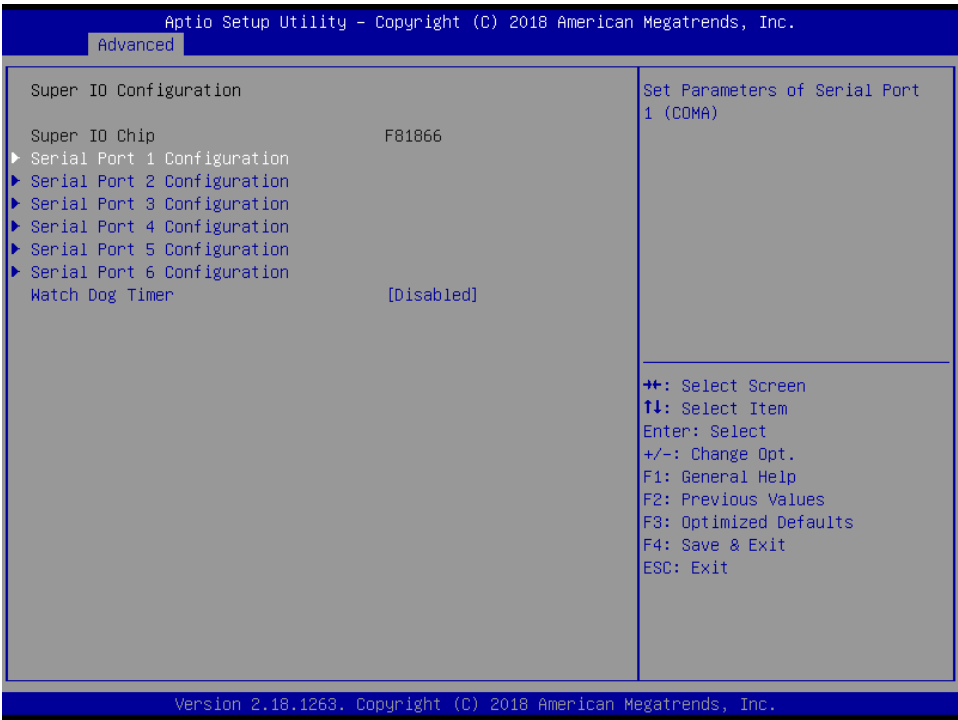


Serial Port 1 Configuration

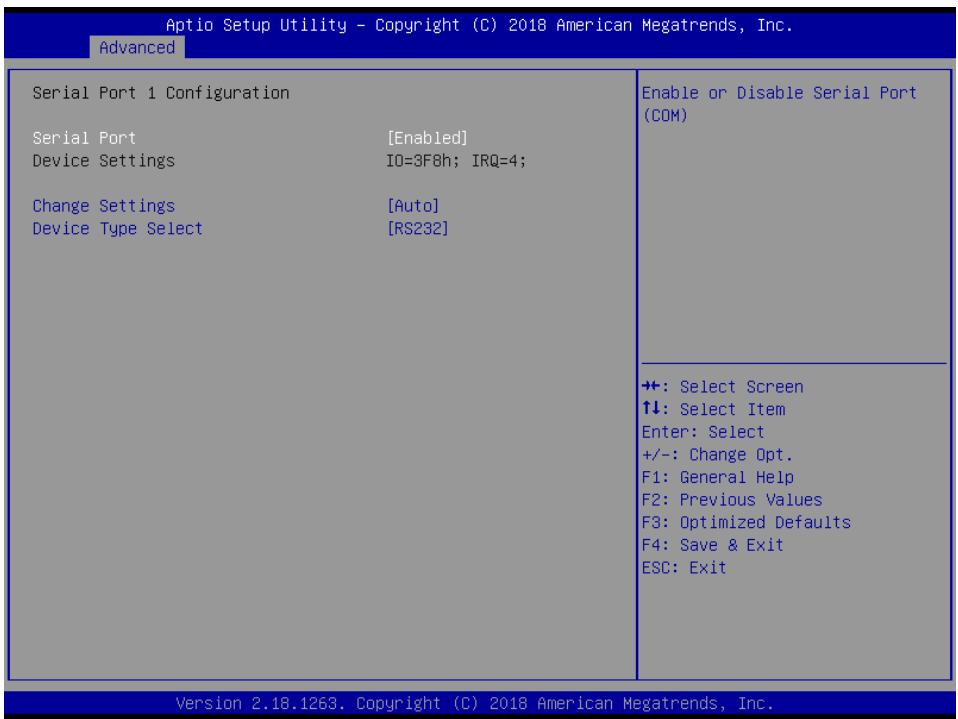


- **Serial Port**
This item allows you to enable or disable serial port.
- **Change Settings**
This item allows you to change the address & IRQ settings of the specified serial port.
- **Device Type Select**
Change the Serial interface. Select <RS232>, <RS422> or <RS485> interface.

Serial Port 2 Configuration

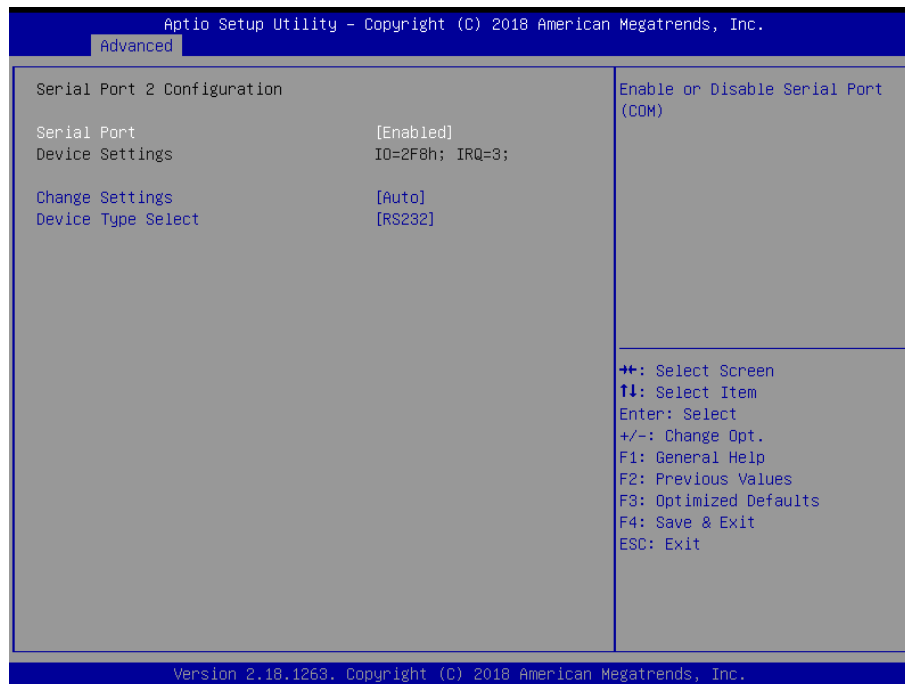


- **Serial Port**
This item allows you to enable or disable serial port.
- **Change Settings**
This item allows you to change the address & IRQ settings of the specified serial port.
- **Device Type Select**
Change the Serial interface. Select <RS232>, <RS422> or <RS485> interface.

Serial Port 3 Configuration

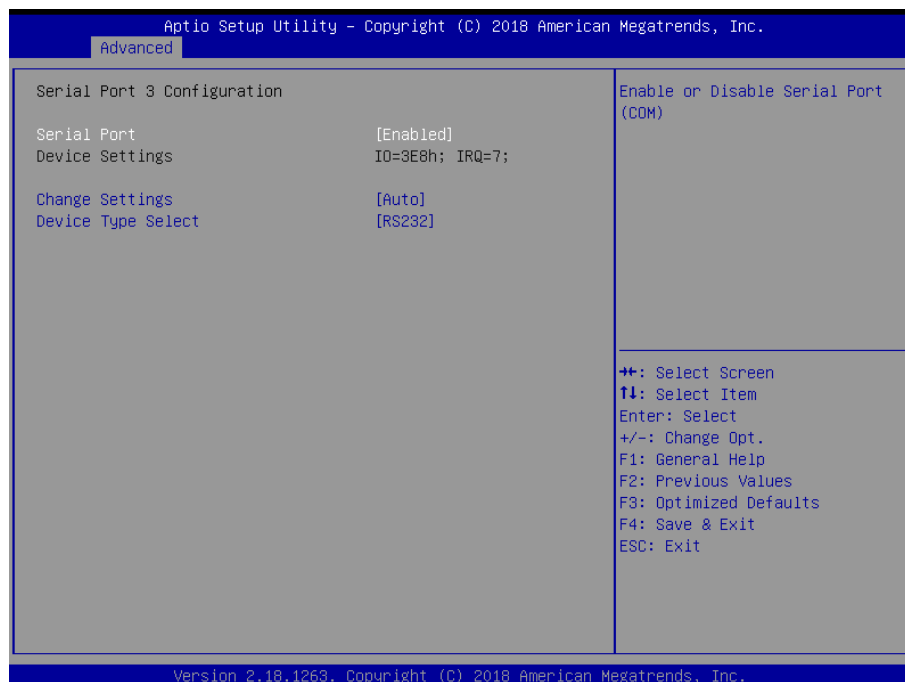


- **Serial Port**
This item allows you to enable or disable serial port.
- **Change Settings**
This item allows you to change the address & IRQ settings of the specified serial port.
- **Device Type Select**
Change the Serial interface. Select <RS232>, <RS422> or <RS485> interface.

Serial Port 4 Configuration

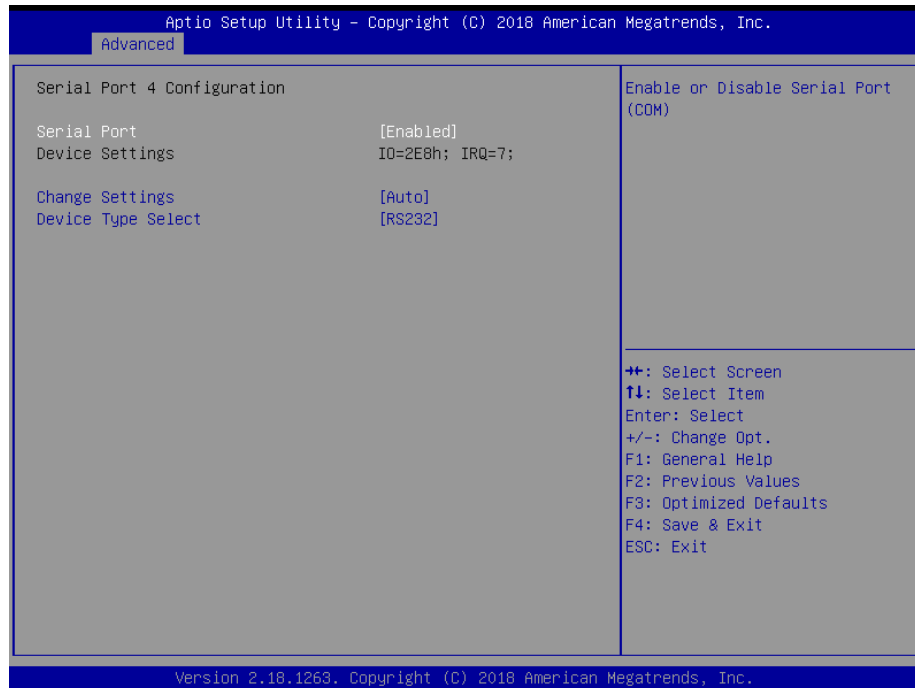


- **Serial Port**
This item allows you to enable or disable serial port.
- **Change Settings**
This item allows you to change the address & IRQ settings of the specified serial port.
- **Device Type Select**
Change the Serial interface. Select <RS232>, <RS422> or <RS485> interface.

Serial Port 5 Configuration

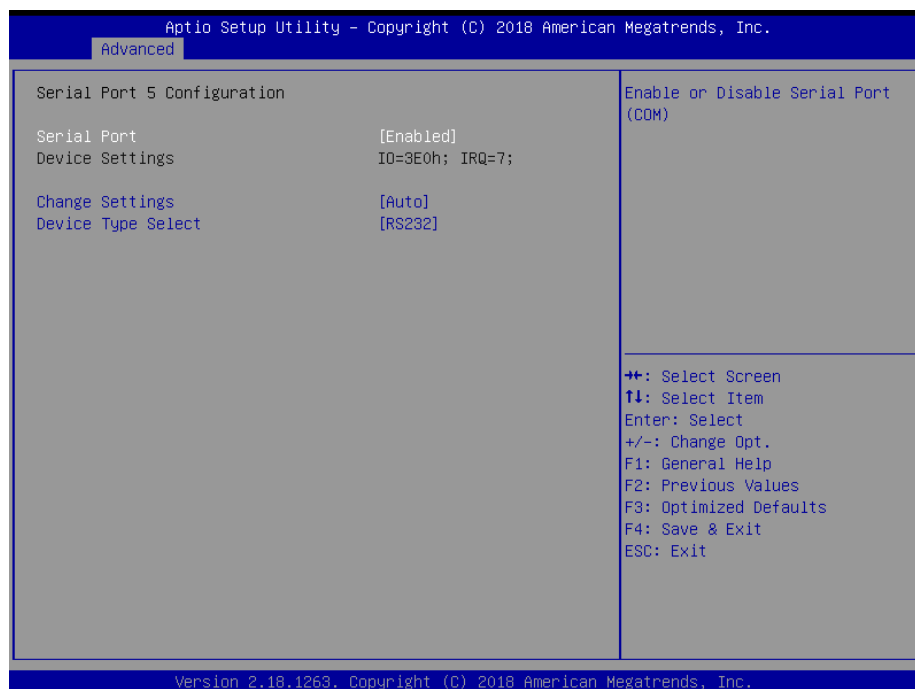

- **Serial Port**
This item allows you to enable or disable serial port.
- **Change Settings**
This item allows you to change the address & IRQ settings of the specified serial port.
- **Device Type Select**
Change the Serial interface. Select <RS232>, <RS422> or <RS485> interface.


Serial Port 6 Configuration

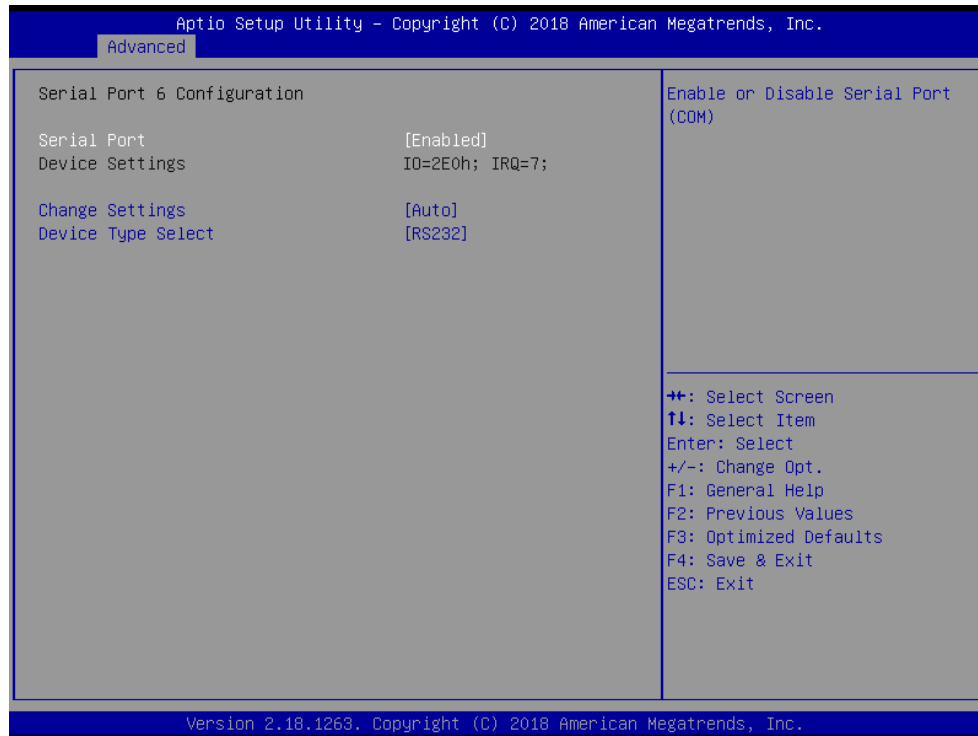


- **Serial Port**
This item allows you to enable or disable serial port.
- **Change Settings**
This item allows you to change the address & IRQ settings of the specified serial port.
- **Device Type Select**
Change the Serial interface. Select <RS232>, <RS422> or <RS485> interface.

4.3.8 Hardware Monitor

These items display the current status of all monitored hardware devices/ components such as voltages and temperatures.

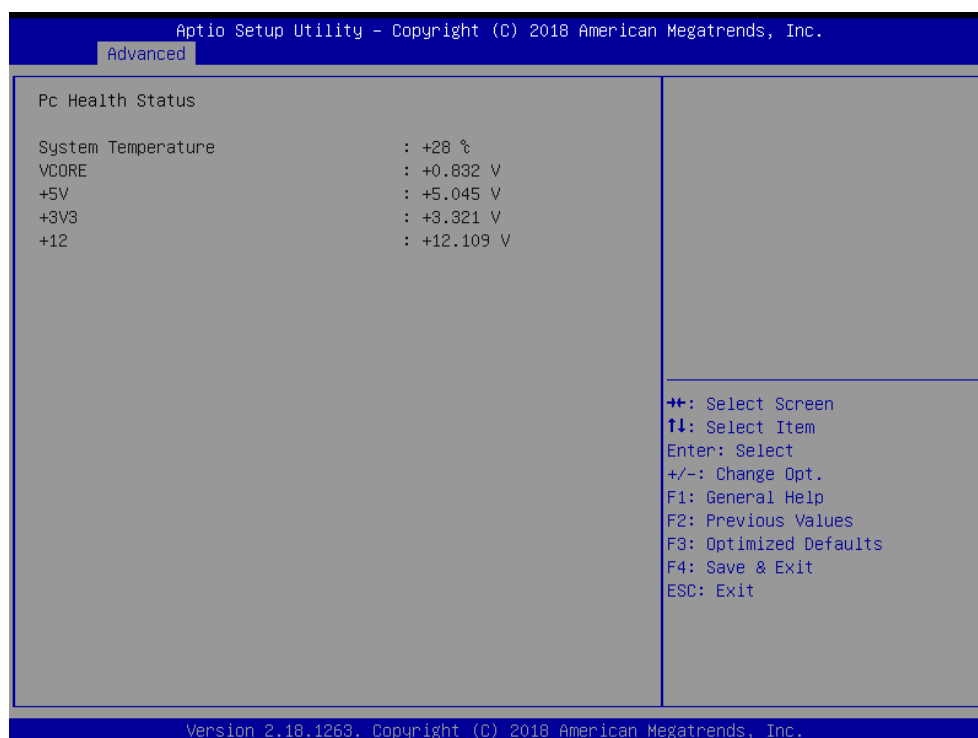

4.3.9 Serial Port Console Redirection

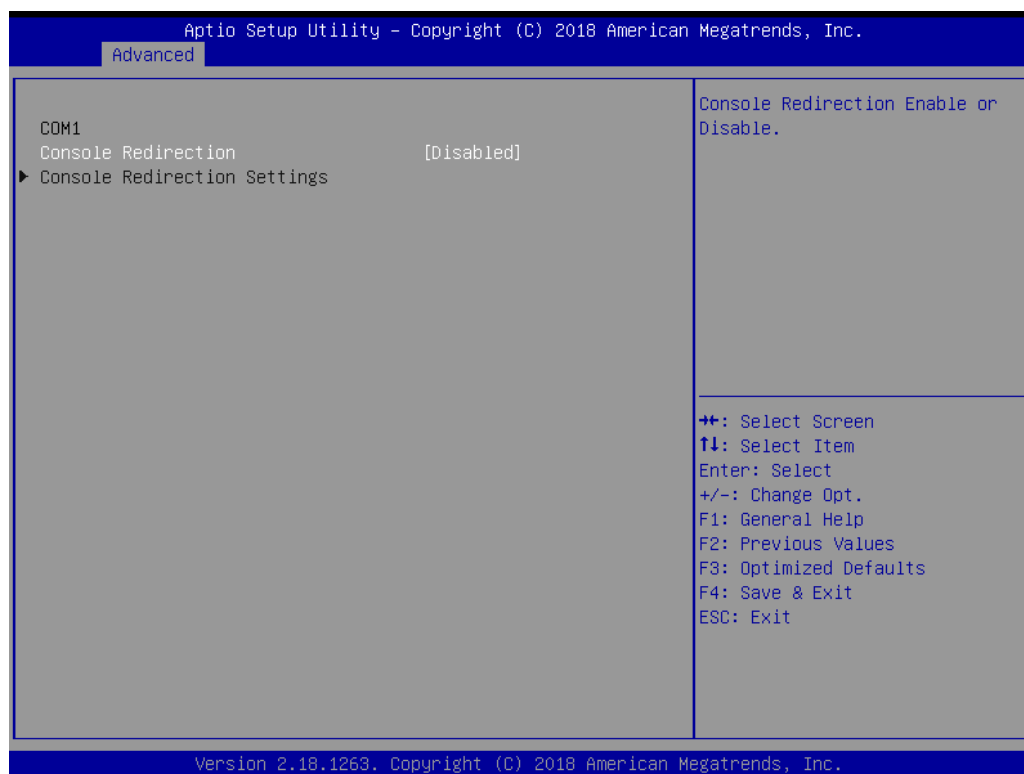


■ Console Redirection

These items allows you to enable or disable COM1 console redirection.

4.3.10 Stack Configuration



4.3.11 CSM Configuration

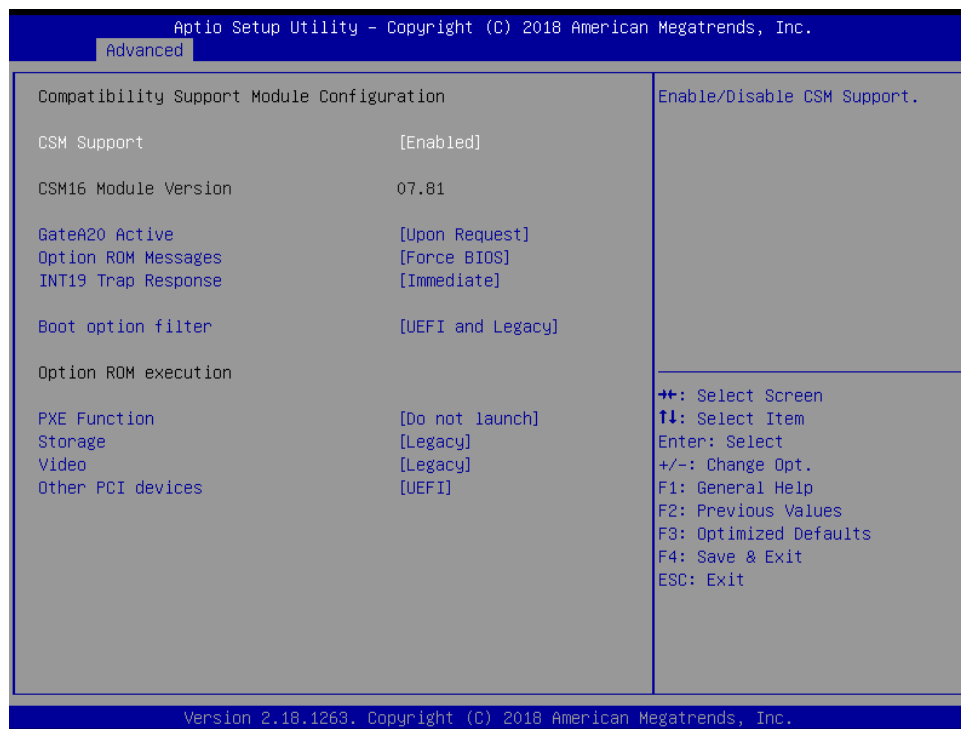

■ CSM Support

This item allows users to enable or disable for “CSM Support”.

■ GateA20 Active

This item allows users to set Upon Request or Always for “GateA20 Active”.

■ Option ROM Messages

This item allows users to set Force BIOS or Keep Current for “Option ROM Messages”.

■ INT19 Trap Response

This item allows users to set the BIOS reaction to INT19 trapping by Option ROM:

“Immediate” - execute the trap right away;

“postponed” - execute the trap during legacy boot.

■ Boot option filter

This item allows users to select which type of operating system to boot by option:

“UEFI and Legacy” - allows booting from operating systems that support legacy option ROM or UEFI option ROM;

“Legacy only” - allows booting from operating systems that only support legacy option ROM;

“UEFI only” - allows booting from operating systems that only support UEFI option ROM.

This item is configurable only when CSM Support is set to Enabled.

■ PXE Function

This item allows users to enable or disable PXE function.

■ Storage

This item allows users to set Do not launch or UEFI or Legacy for “Storage”.


■ Video

This item allows users to set Do not launch or UEFI or Legacy for “Video”.

■ Other PCI devices

This item allows users to set Do not launch or UEFI or Legacy for “Other PCI devices”.

4.3.12 USB Configuration

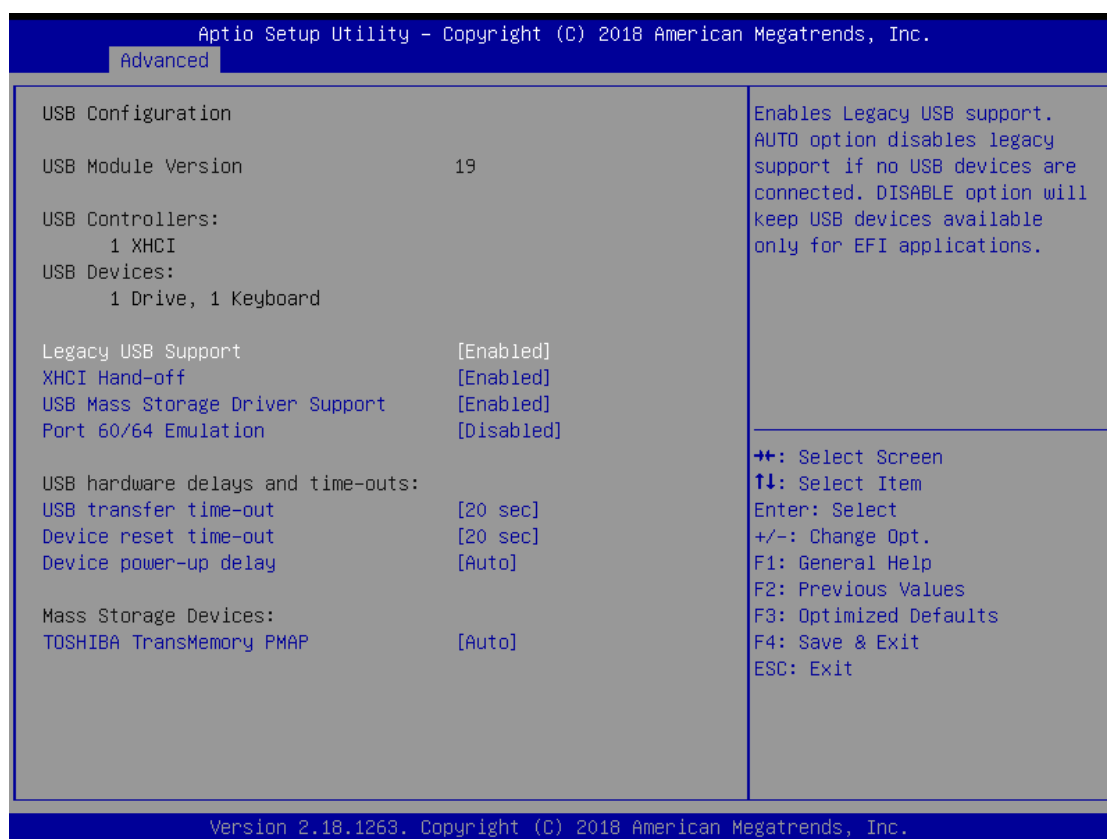

■ Legacy USB Support

Allows USB keyboard/ mouse to be used in MS-DOS.

■ XHCI Hand-off

Determines whether to enable XHCI (USB3.0) Hand-off feature for an operating system without XHCI (USB3.0) Hand-off support.

■ USB Mass Storage Driver Support

Enables or disables support for USB storage devices.

■ Port 60/64 Emulation

Enables or disables support for Port 60/64 Emulation.

■ USB transfer time-out

This item allows users to set different time mode for “USB transfer time-out”.

■ Device reset time-out

This item allows users to set different time mode for “Device reset time-out”.

■ Device power-up delay

This item allows users to set different time mode for “Device power-up delay”.

■ Mass Storage Devices


This item allows users to set different mode for “Mass Storage Devices”.

4.4 Chipset

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.




4.4.1 System Agent (SA) Configuration

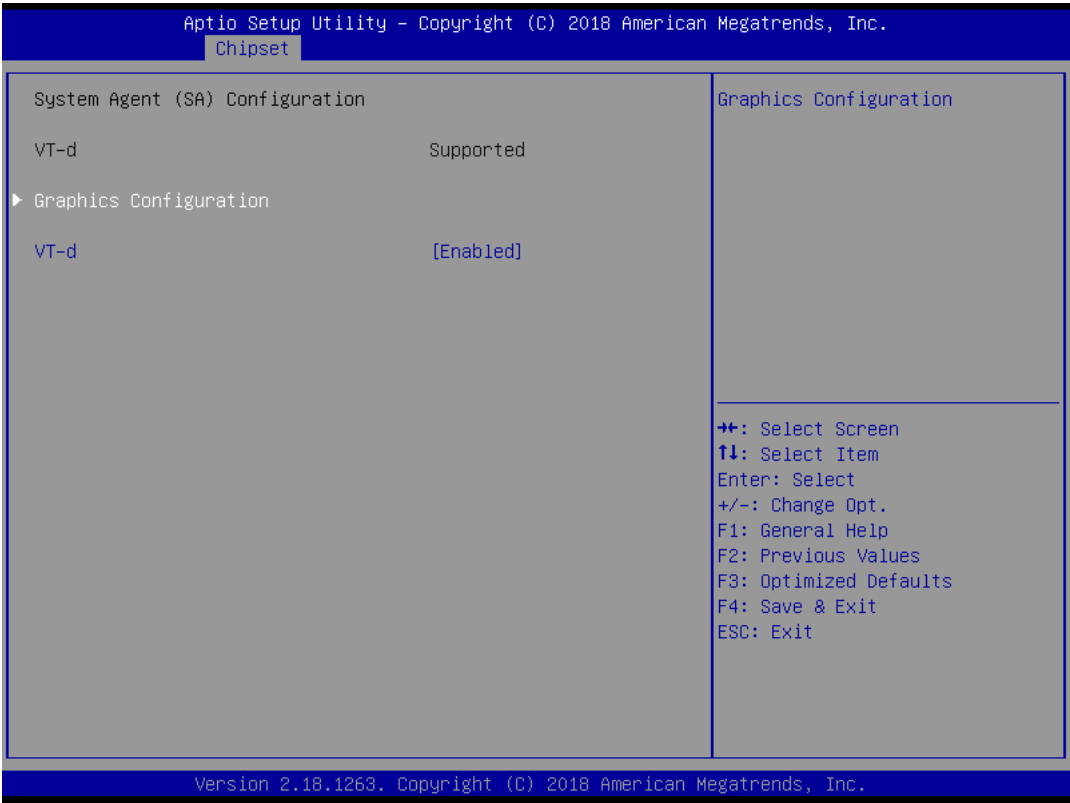

VT-d

This item allows users to enable or disable VT-d.


■ Graphic Configuration

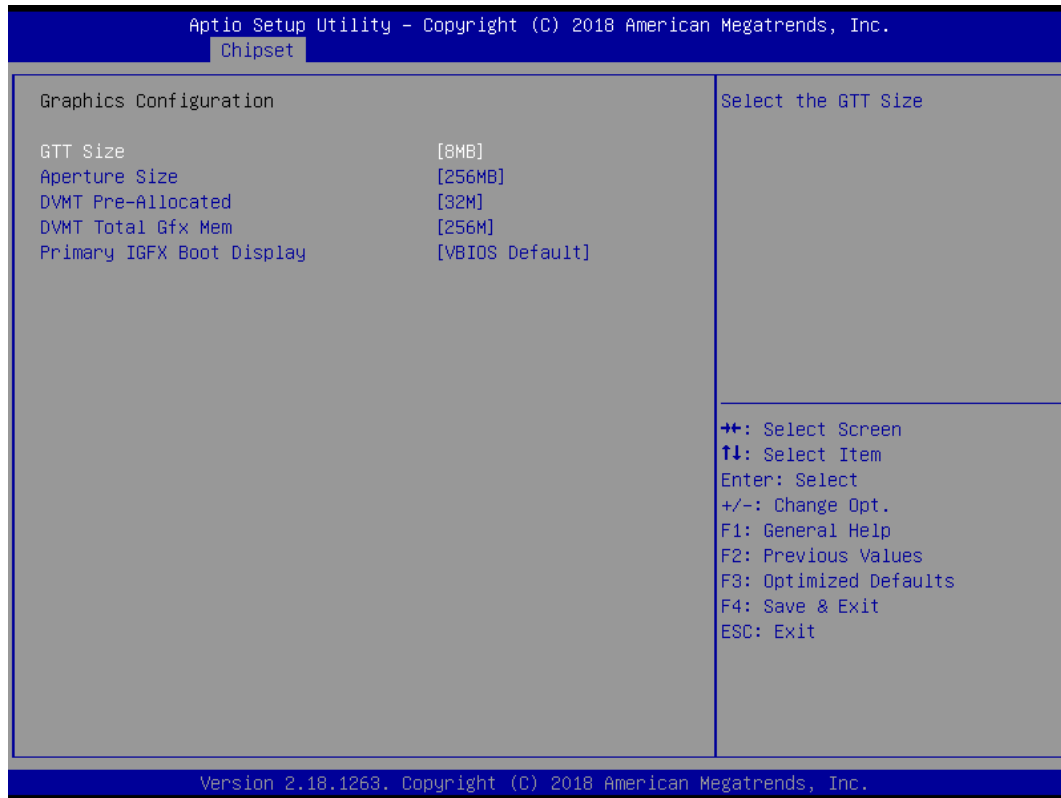


- **GTT Size**
This item allows you to change the GTT size.
- **Aperture Size**
Aperture size optimal between 128MB, 256MB, 512MB, 1024MB or 2048MB.
- **DVMT Pre-Allocated**
DVMT pre-allocated (fixed) Graphics memory size optimal from 0M to 60M.
- **DVMT Total Gfx Mem**
DVMT Total Gfx Mem optimal Between 128M, 256M or MAX.
- **Primary IGFX Boot Display**
Use the field to select the type of device you want to use as the display(s) of the system.

4.4.2 PCH-IO Configuration


This section allows you to configure the chipset.

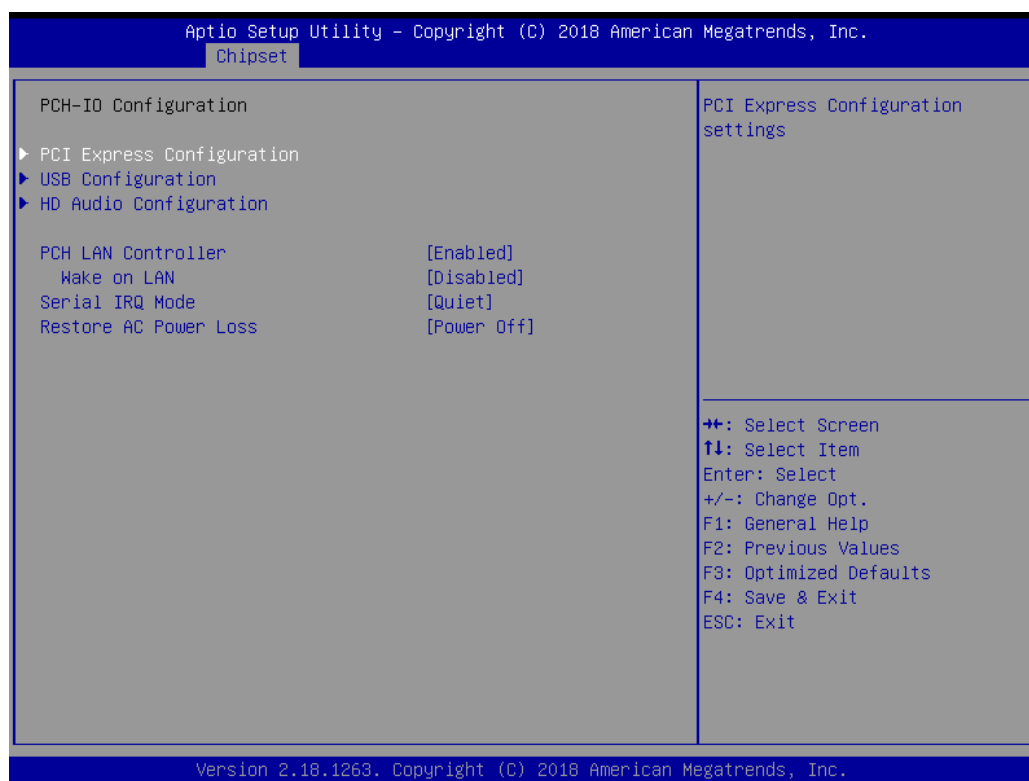

■ PCI Express Configuration

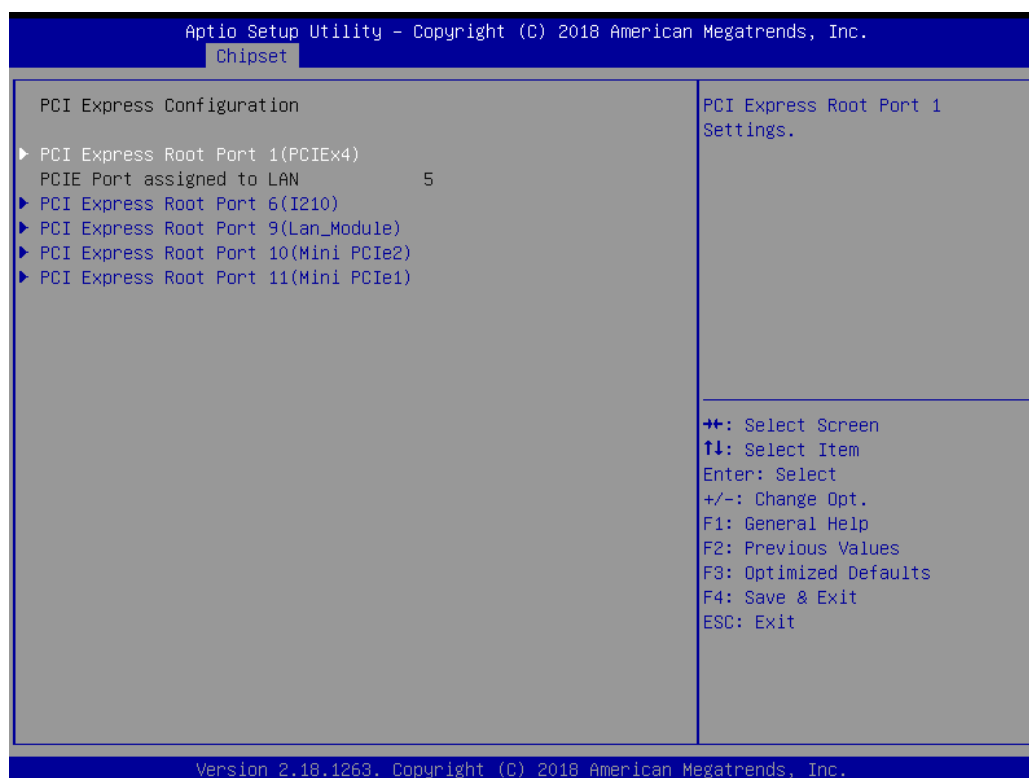

● PCI Express Root Port 1 / 6 / 9 / 10 / 11

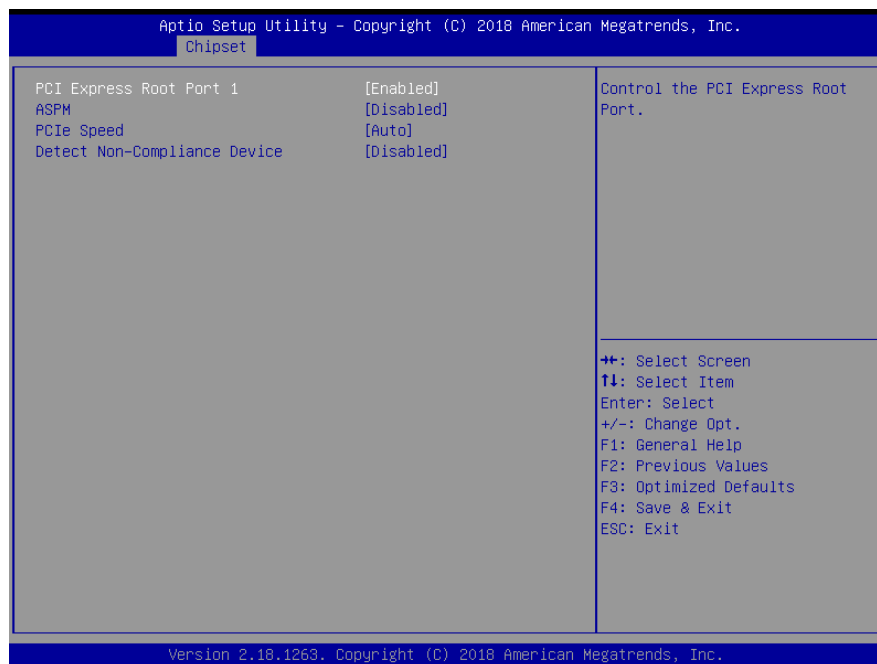

✓ PCI Express Port 1 / 6 / 9 / 10 / 11

This item allows you to enable or disable PCI Express Port 1 / 6 / 9 / 10 / 11 in the chipset.

✓ ASPM

This item allows you to select the ASPM state for energy-saving. Select <Disabled>, <L0s>, <L1>, <L0sL1> or <Auto>

✓ PCIe Speed

Change the PCIe Port Speed. Select <AUTO>, <Gen 1>, <Gen 2> or <Gen 3>

✓ Detect Non-Compliance Device

Detect Non-Compliance PCI Express Device. If enable, it will take more time at POST time.

■ USB Configuration



● XHCI Disable Compliance mode

Options to disable compliance mode. Default is FALSE enable compliance mode. Set TRUE to disable compliance mode.

● xDCI Support

This item will allow users to enable or disable xDCI Support.

■ HD Audio Configuration



● HD Audio

Control detection of the HD-Audio device. This item allows you to select <Enabled>, <Disabled> or <Auto>.


Disabled: Azalia will be unconditionally be disabled.

Enabled: Azalia will be unconditionally be enabled.

Auto: Azalia will be enabled if present, disabled otherwise.

4.5 Security

Security menu allow users to change administrator password and user password settings.

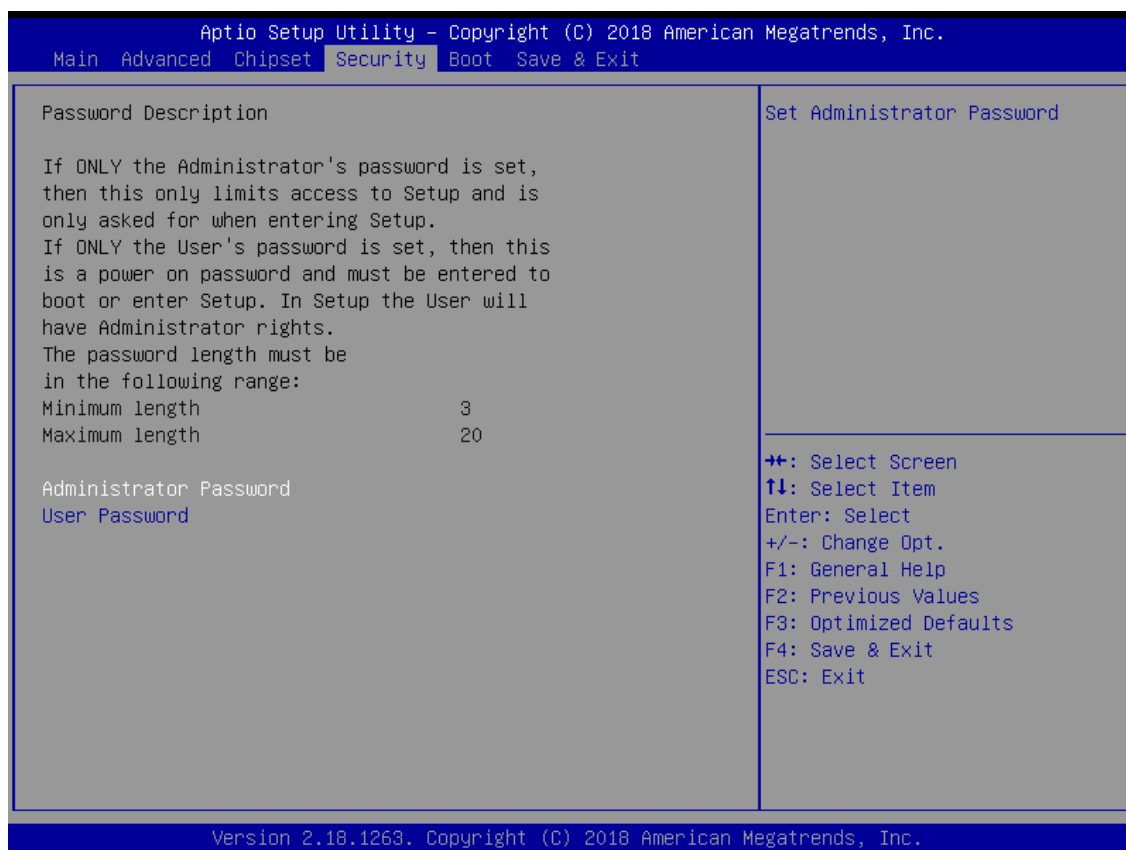

■ Administrator Password

This item allows you to set Administrator Password.

■ User Password

This item allows you to set User Password.

4.6 Boot

This menu allows you to setup the system boot options.



■ Setup Prompt Timeout

This item sets number of seconds to wait for setup activation key.

■ Bootup NumLock State

This item selects the keyboard NumLock state. Select <On> or <Off>.

■ Full Screen Logo Show


This item allows you to enable or disable Full Screen Logo Show function.

■ Hard Driver BBS Priorities

The items specify the boot device priority sequence from the available devices. The number of device items that appears on the screen depends on the number of devices installed in the system.

4.7 Save & Exit

This setting allows users to configure the boot settings.

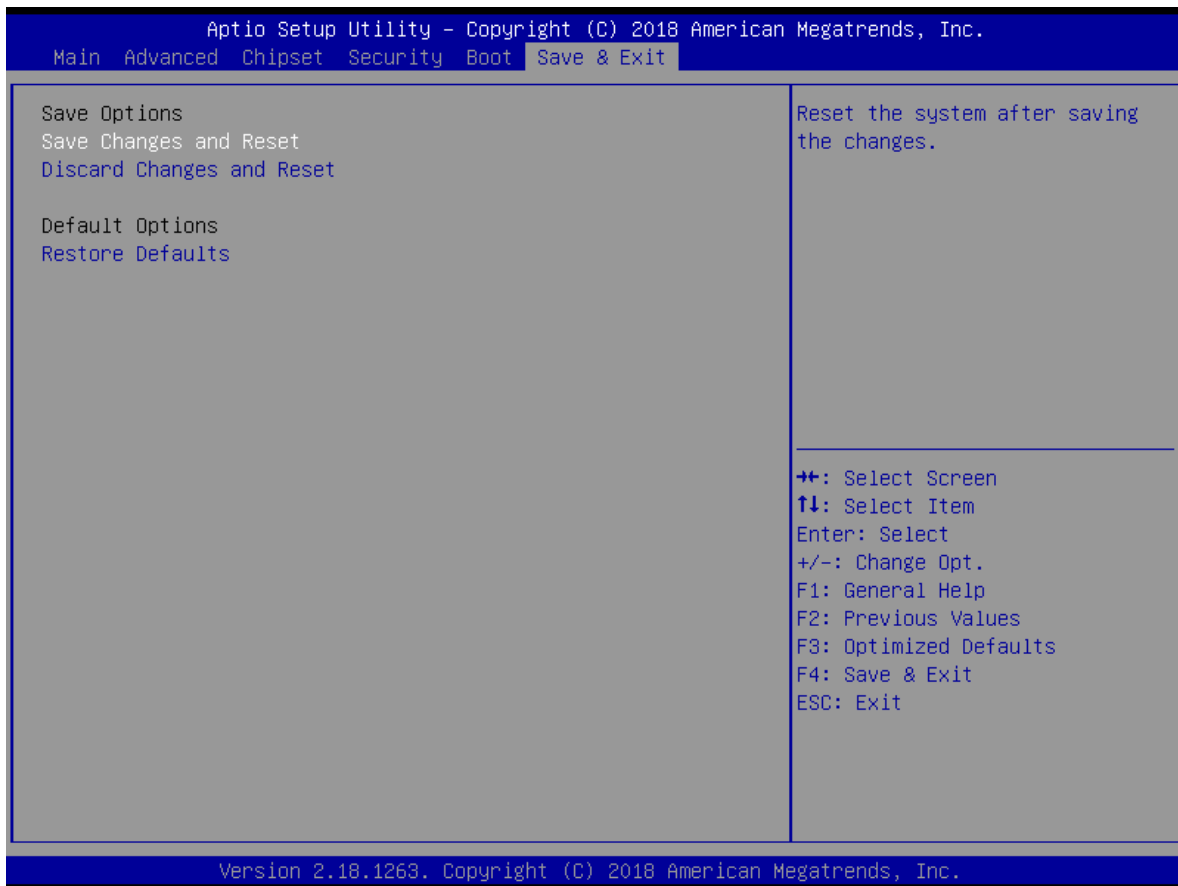

■ Save Changes and Reset

This item allows user to reset the system after saving the changes. This item allows user to reset the system after saving the changes.

■ Discard Changes and Reset

This item allows user to reset the system without saving any changes.

■ Restore Defaults

Use this item to restore /load default values for all the setup options.

Appendix

WDT & GPIO

This appendix provides the sample codes of WDT (Watch Dog Timer) and GPIO (General Purpose Input/ Output).

WDT Sample Code

```
// IO Address 0xA16 is time value
// IO Address 0xA15 is WDT enable and configuration
Example, Set 0xA16=0x03, 0xA15=0x31, it will reset after 3 seconds
```

```
#define TimePort    0xA16
#define TimeEnablePort 0xA15

WriteByte (TimePort,0x03)
WriteByte (TimeEnablePort,0x31)
```

Watchdog Timer Configuration Register 1 – base address + 05h

Bit	Name	R/W	Reset	Default	Description
7	Reserved	R	-	0	Reserved
6	WDTMOUT_STS	R/W	5VSB	0	If watchdog timeout event occurred, this bit will be set to 1. Write a 1 to this bit will clear it to 0.
5	WD_EN	R/W	5VSB	0	If this bit is set to 1, the counting of watchdog time is enabled.
4	WD_PULSE	R/W	5VSB	0	Select output mode (0: level, 1: pulse) of RSTOUT# by setting this bit.
3	WD_UNIT	R/W	5VSB	0	Select time unit (0: 1 sec, 1: 60 sec) of watchdog timer by setting this bit.
2	WD_HACTIVE	R/W	5VSB	0	Select output polarity of RSTOUT# (1: high active, 0: low active) by setting this bit.
1-0	WD_PSWIDTH	R/W	5VSB	0	Select output pulse width of RSTOUT# 0: 1 ms 1: 25 ms 2: 125 ms 3: 5 sec

Watchdog Timer Configuration Register 2 – base address + 06h

Bit	Name	R/W	Reset	Default	Description
7-0	WD_TIME	R/W	5VSB	0	Time of watchdog timer

GPIO Sample Code

● GPI 1 ~ GPI 8

	GPI 1	GPI 2	GPI 3	GPI 4	GPI 5	GPI 6	GPI 7	GPI 8
IO Address	0xA03h	0xA03h	0xA03h	0xA03h	0xA06h	0xA06h	0xA06h	0xA06h
Bit	4	5	6	7	0	1	2	3
Sample code	#1							

● GPO 1 ~ GPO 8

	GPO 1	GPO 2	GPO 3	GPO 4	GPO 5	GPO 6	GPO 7	GPO 8
IO Address	0xA02h	0xA02h	0xA02h	0xA02h	0xA06h	0xA07h	0xA08h	0xA04h
Bit	0	1	2	3	4	7	0	7
Sample code	#2							

```
#define GPI1to4_ADDR    0xA03
#define GPI5to8_ADDR    0xA06
```

```
#define GPO1to4_ADDR    0xA02
```

```
#define GPO5_ADDR        0xA06
#define GPO6_ADDR        0xA04
#define GPO7_ADDR        0xA08
#define GPO8_ADDR        0xA04
```

```
#define GPO1_DataHigh    0x01
#define GPO2_DataHigh    0x02
#define GPO3_DataHigh    0x04
#define GPO4_DataHigh    0x08
#define GPO5_DataHigh    0x10
#define GPO6_DataHigh    0x80
#define GPO7_DataHigh    0x01
#define GPO8_DataHigh    0x80
```

```
#define WriteByte    outputb
#define ReadByte     inportb
```

Sample Code:

```
#1 :  
// Get GPI 1 status  
//Get GPI 0 Pin Status Register  
printf("Input port value = %x\n", ReadByte(GPI1to4_ADDR)); // bit4 = GPI 1 status
```

```
// Get GPI 5 status  
//Get GPI 0 Pin Status Register  
printf("Input port value = %x\n", ReadByte(GPI_REG5to8)); // bit0 = GPI 5 status
```

```
#2 :  
// Set GPO status to high  
; Set GPO 1 Pin to High  
Data = ReadByte(GPO1to4_ADDR) | GPO1_DataHigh;  
WriteByte(GPO1to4_ADDR, Data); //Set IO_DO1 to High
```

```
; Set GPO 2 Pin to High  
Data = ReadByte(GPO1to4_ADDR) | GPO2_DataHigh;  
WriteByte(GPO1to4_ADDR, Data); //Set IO_DO2 to High
```

```
; Set GPO 3 Pin to High  
Data = ReadByte(GPO1to4_ADDR) | GPO3_DataHigh;  
WriteByte(GPO1to4_ADDR, Data); //Set IO_DO3 to High
```

```
; Set GPO 4 Pin to High  
Data = ReadByte(GPO1to4_ADDR) | GPO4_DataHigh;  
WriteByte(GPO1to4_ADDR, Data); //Set IO_DO4 to High
```

```
; Set GPO 5 Pin to High  
Data = ReadByte(GPO5_ADDR) | GPO5_DataHigh;  
WriteByte(GPO5_ADDR, Data); //Set IO_DO5 to High
```

```
; Set GPO 6 Pin to High  
Data = ReadByte(GPO6_ADDR) | GPO6_DataHigh;  
WriteByte(GPO6_ADDR, Data); //Set IO_DO6 to High
```

```
; Set GPO 7 Pin to High  
Data = ReadByte(GPO7_ADDR) | GPO7_DataHigh;  
WriteByte(GPO7_ADDR, Data); //Set IO_DO7 to High
```

```
; Set GPO 8 Pin to High  
Data = ReadByte(GPO8_ADDR) | GPO8_DataHigh;  
WriteByte(GPO8_ADDR, Data); //Set IO_DO8 to High
```

