

USER'S MANUAL

**VIO-200-PC100-J1900 Series
Industrial Panel PCs**



Table of Contents

| | |
|---|-----------|
| Prefaces | 05 |
| Revision | 05 |
| Disclaimer | 05 |
| Copyright Notice | 05 |
| Trademarks Acknowledgment | 05 |
| Environmental Protection Announcement | 05 |
| Safety Precautions | 06 |
| Technical Support and Assistance | 07 |
| Conventions Used in this Manual | 07 |
| Package Contents | 08 |
| Ordering Information | 09 |
| Optional Accessory | 11 |
| Chapter 1 Product Introductions | 12 |
| 1.1 Overview | 13 |
| 1.1.1 Key Feature | 13 |
| 1.2 Hardware Specification | 14 |
| 1.2.1 VIO-212R(C)-PC100-J1900 VIO-212R(C)-PC100-J1900-1 | 14 |
| 1.2.2 VIO-215R(C)-PC100-J1900 VIO-215R(C)-PC100-J1900-1 | 15 |
| 1.2.3 VIO-W215R(C)-PC100-J1900 VIO-W215R(C)-PC100-J1900-1 | 16 |
| 1.2.4 VIO-217R(C)-PC100-J1900 VIO-217R(C)-PC100-J1900-1 | 17 |
| 1.2.5 VIO-219R(C)-PC100-J1900 VIO-219R(C)-PC100-J1900-1 | 18 |
| 1.2.6 VIO-W221R(C)-PC100-J1900 VIO-W221R(C)-PC100-J1900-1 | 19 |
| 1.2.7 VIO-W224R(C)-PC100-J1900 VIO-W224R(C)-PC100-J1900-1 | 20 |
| 1.3 System I/O | 21 |
| 1.3.1 Front | 21 |
| 1.3.2 Rear | 21 |
| 1.3.3 Side (Left) | 22 |
| 1.3.4 Side (Right) | 22 |
| 1.3.5 Top | 23 |
| 1.4 Mechanical Dimension | 24 |
| 1.4.1 VIO-212R(C)-PC100-J1900 VIO-212R(C)-PC100-J1900-1 | 24 |
| 1.4.2 VIO-215R(C)-PC100-J1900 VIO-215R(C)-PC100-J1900-1 | 25 |
| 1.4.3 VIO-W215R(C)-PC100-J1900 VIO-W215R(C)-PC100-J1900-1 | 26 |
| 1.4.4 VIO-217R(C)-PC100-J1900 VIO-217R(C)-PC100-J1900-1 | 27 |
| 1.4.5 VIO-219R(C)-PC100-J1900 VIO-219R(C)-PC100-J1900-1 | 28 |
| 1.4.6 VIO-W221R(C)-PC100-J1900 VIO-W221R(C)-PC100-J1900-1 | 29 |
| 1.4.7 VIO-W224R(C)-PC100-J1900 VIO-W224R(C)-PC100-J1900-1 | 30 |
| Chapter 2 Jumpers and Connectors | 31 |
| 2.1 Switch and connector Locations | 32 |
| 2.1.1 Top View | 32 |
| 2.1.2 Bottom View | 32 |
| 2.2 Connector / Switch Definition | 33 |
| 2.3 Switch Definitions | 34 |
| 2.4 Connector Definitions | 36 |

| | | |
|------------------|---|-----------|
| Chapter 3 | Front Panel Controls | 47 |
| 3.1 | Users Controls | 48 |
| 3.1.1 | Power Button | 48 |
| 3.1.2 | LED | 48 |
| 3.1.3 | MENU / Enter Button | 48 |
| 3.1.4 | Increase Button | 48 |
| 3.1.5 | Decrease Button | 48 |
| 3.1.6 | AUTO / Exit Button | 48 |
| 3.2 | OSD Operation | 49 |
| 3.2.1 | Luminance | 49 |
| 3.2.2 | Picture | 50 |
| 3.2.3 | Color | 50 |
| 3.2.4 | OSD Settings | 50 |
| 3.2.5 | Setup | 51 |
| Chapter 4 | System Setup | 52 |
| 4.1 | Set torque force to 3.5 kgf-cm to execute all the screwing and unscrewing | 53 |
| 4.2 | Installing SODIMM | 53 |
| 4.3 | Installing mini PCIe card / mSATA | 54 |
| 4.4 | Installing HDD on removable SATA HDD bay | 55 |
| 4.5 | Installing CFast card | 57 |
| 4.6 | Installing SIM card | 58 |
| 4.7 | Removing chassis bottom cover | 60 |
| 4.8 | Installing antenna | 61 |
| 4.9 | Assemble chassis top cover | 64 |
| 4.10 | Connecting PC module with VIO display module | 66 |
| Chapter 5 | BIOS Setup | 68 |
| 5.1 | BIOS Introduction | 69 |
| 5.2 | Main Setup | 70 |
| 5.2.1 | System Date | 70 |
| 5.2.2 | System Time | 70 |
| 5.3 | Advanced Setup | 71 |
| 5.3.1 | Trusted Computing (Optional) | 71 |
| 5.3.2 | ACPI Settings | 72 |
| 5.3.3 | Super IO Configuration | 72 |
| 5.3.4 | Hardware Monitor | 76 |
| 5.3.5 | Serial Port Console Redirection | 77 |
| 5.3.6 | CPU Configuration | 77 |
| 5.3.7 | SATA Configuration | 78 |
| 5.3.8 | OS Configuration | 78 |
| 5.3.9 | CSM Configuration | 79 |
| 5.3.10 | USB Configuration | 80 |
| 5.3.11 | Intel® I210 Gigabit Network Connection- XX:XX:XX:XX:XX:XX..... | 81 |
| 5.4 | Chipset | 82 |
| 5.4.1 | North Bridge | 82 |
| 5.4.2 | South Bridge | 84 |

| | | |
|-----------------|---------------------------------|-----------|
| 5.5 | Security | 86 |
| 5.5.1 | Administrators Password | 86 |
| 5.5.2 | Users Password | 86 |
| 5.6 | Boot | 87 |
| 5.6.1 | Setup Prompt Timeout | 87 |
| 5.6.2 | Bootup NumLock State | 87 |
| 5.6.3 | Full Screen Logo Show | 87 |
| 5.6.4 | Boot Option Priorities | 87 |
| 5.7 | Save & Exit | 88 |
| 5.7.1 | Save Changes and Reset | 88 |
| 5.7.2 | Discard Changes and Reset | 88 |
| 5.7.3 | Restore Defaults | 88 |
| Appendix | | 89 |
| | WDT Sample Code | 90 |
| | GPIO Sample Code | 91 |
| | Mounting Guide | 94 |

Prefaces

Revision

| Revision | Description | Date |
|----------|-----------------|------------|
| 1.0 | Manual Released | 2018/12/27 |

Disclaimer

All specifications and information in this User's Manual are believed to be accurate and up to date. Premio Inc. does not guarantee that the contents herein are complete, true, accurate or non-misleading. The information in this document is subject to change without notice and does not represent a commitment on the part of Premio Inc.

Premio Inc. disclaims all warranties, express or implied, including, without limitation, those of merchantability, fitness for a particular purpose with respect to contents of this User's Manual. Users must take full responsibility for the application of the product.

Copyright Notice

All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, without the prior written permission of Premio Inc. Copyright © Premio Inc.

Trademarks Acknowledgment

Intel®, Celeron® and Pentium® are trademarks of Intel Corporation.

Windows® is registered trademark of Microsoft Corporation.

AMI is trademark of American Megatrend Inc.

IBM, XT, AT, PS/2 and Personal System/2 are trademarks of International Business Machines Corporation

All other products and trademarks mentioned in this manual are trademarks of their respective owners.

Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. Please recycle to minimize pollution and ensure environment protection.



Safety Precautions

Before installing and using the equipment, please read the following precautions:

- Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
- The power outlet shall be installed near the equipment and shall be easily accessible.
- Turn off the system power and disconnect the power cord from its source before making any installation. Be sure both the system and the external devices are turned OFF. Sudden surge of power could ruin sensitive components. Make sure the equipment is properly grounded.
- When the power is connected, never open the equipment. The equipment should be opened only by qualified service personnel.
- Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- Disconnect this equipment from the power before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- Avoid the dusty, humidity and temperature extremes.
- Do not place heavy objects on the equipment.
- If the equipment is not used for long time, disconnect it from the power to avoid being damaged by transient over-voltage.
- The storage temperature shall be above -20°C and below 70°C.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- If one of the following situation arises, get the equipment checked be service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or it cannot work according the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.

Technical Support and Assistance

1. Visit the Premio Inc website at <https://premioinc.com/> where you can find the latest information about the product.
2. Contact your distributor, our technical support team or sales representative for technical support if you need additional assistance. Please have following information ready before you call:
 - Model name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Conventions Used in this Manual

**WARNING**

This indication alerts operators to an operation that, if not strictly observed, may result in severe injury.

**CAUTION**

This indication alerts operators to an operation that, if not strictly observed, may result in safety hazards to personnel or damage to equipment.

**NOTE**

This indication provides additional information to complete a task easily.

Package Contents

Before installation, please ensure all the items listed in the following table are included in the package.

| VIO-212-PC100-J1900 VIO-212-PC100-J1900-1 | | |
|--|-------------------------------------|------|
| Item | Description | Q'ty |
| 1 | VIO-212-PC100-J1900 Series Panel PC | 1 |
| 2 | Panel Mount Kit | 10 |
| 3 | Utility DVD Driver | 1 |
| 4 | Screw Pack | 1 |

| VIO-215-PC100-J1900 VIO-215-PC100-J1900-1 | | |
|--|-------------------------------------|------|
| Item | Description | Q'ty |
| 1 | VIO-215-PC100-J1900 Series Panel PC | 1 |
| 2 | Panel Mount Kit | 10 |
| 3 | Utility DVD Driver | 1 |
| 4 | Screw Pack | 1 |

| VIO-W215-PC100-J1900 VIO-W215-PC100-J1900-1 | | |
|--|--------------------------------------|------|
| Item | Description | Q'ty |
| 1 | VIO-W215-PC100-J1900 Series Panel PC | 1 |
| 2 | Panel Mount Kit | 8 |
| 3 | Utility DVD Driver | 1 |
| 4 | Screw Pack | 1 |

| VIO-217-PC100-J1900 VIO-217-PC100-J1900-1 | | |
|--|-------------------------------------|------|
| Item | Description | Q'ty |
| 1 | VIO-217-PC100-J1900 Series Panel PC | 1 |
| 2 | Panel Mount Kit | 10 |
| 3 | Utility DVD Driver | 1 |
| 4 | Screw Pack | 1 |

| VIO-219-PC100-J1900 VIO-219-PC100-J1900-1 | | |
|--|-------------------------------------|------|
| Item | Description | Q'ty |
| 1 | VIO-219-PC100-J1900 Series Panel PC | 1 |
| 2 | Panel Mount Kit | 14 |
| 3 | Utility DVD Driver | 1 |
| 4 | Screw Pack | 1 |

| VIO-W221-PC100-J1900 VIO-W221-PC100-J1900-1 | | |
|--|--------------------------------------|------|
| Item | Description | Q'ty |
| 1 | VIO-W221-PC100-J1900 Series Panel PC | 1 |
| 2 | Panel Mount Kit | 12 |
| 3 | Utility DVD Driver | 1 |
| 4 | Screw Pack | 1 |

| VIO-W224-PC100-J1900 VIO-W224-PC100-J1900-1 | | |
|--|--------------------------------------|------|
| Item | Description | Q'ty |
| 1 | VIO-W224-PC100-J1900 Series Panel PC | 1 |
| 2 | Panel Mount Kit | 12 |
| 3 | Utility DVD Driver | 1 |
| 4 | Screw Pack | 1 |

Ordering Information

| Model No. | Product Description |
|--------------------------------|---|
| VIO-212R-PC100-J1900 | 12.1" XGA Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-212C-PC100-J1900 | 12.1" XGA Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-212R-PC100-J1900-1 | 12.1" XGA Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-212C-PC100-J1900-1 | 12.1" XGA Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-215R-PC100-J1900 | 15" XGA Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-215C-PC100-J1900 | 15" XGA Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-215R-PC100-J1900-1 | 15" XGA Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-215C-PC100-J1900-1 | 15" XGA Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-W215R-PC100-J1900 | 15.6" 16:9 Full HD Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-W215C-PC100-J1900 | 15.6" 16:9 Full HD Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-W215R-PC100-J1900-1 | 15.6" 16:9 Full HD Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-W215C-PC100-J1900-1 | 15.6" 16:9 Full HD Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |

| Model No. | Product Description |
|--------------------------------|--|
| VIO-217R-PC100-J1900 | 17" SXGA Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-217C-PC100-J1900 | 17" SXGA Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-217R-PC100-J1900-1 | 17" SXGA Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-217C-PC100-J1900-1 | 17" SXGA Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-219R-PC100-J1900 | 19" SXGA Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-219C-PC100-J1900 | 19" SXGA Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-219R-PC100-J1900-1 | 19" SXGA Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-219C-PC100-J1900-1 | 19" SXGA Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-W221R-PC100-J1900 | 21.5" 16:9 Full HD Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-W221C-PC100-J1900 | 21.5" 16:9 Full HD Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-W221R-PC100-J1900-1 | 21.5" 16:9 Full HD Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-W221C-PC100-J1900-1 | 21.5" 16:9 Full HD Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-W224R-PC100-J1900 | 23.8" 16:9 Full HD Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-W224C-PC100-J1900 | 23.8" 16:9 Full HD Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM |
| VIO-W224R-PC100-J1900-1 | 23.8" 16:9 Full HD Resistive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |
| VIO-W224C-PC100-J1900-1 | 23.8" 16:9 Full HD Capacitive Touch Thin Frame Panel PC with Intel® Celeron® Processor J1900, 4x COM, 2x Universal I/O Bracket |

Optional Accessories

| Model No. | Product Description |
|-------------|--|
| 1-E09A06007 | Adapter AC/DC 12V 5A 60W with 3pin Terminal Block Plug 5.0mm Pitch |
| SFICBL022 | Power Cord, 3-pin US Type, 180cm |
| 1-TPCD00002 | Power Cord, European Type, 180cm |
| 1-TPCD00001 | Power Cord, 3-pin UK Type, 180cm |

Chapter 1

Product Introductions

1.1 Overview

The VIO-200-PC100-J1900 series Panel PC is based on Intel® Celeron® J1900 Quad Core Processor. Designed with flat surface, IP 65 dust/waterproof front panel, and aluminum die-casting front frame with rugged body structure, it is a versatile I/O connections, and rugged reliability industrial panel PC.

The VIO-200-PC100-J1900 series Panel PC supports Multi-Mode Display Module (MDM) technology which makes it more flexible in system maintaining and upgrading. It offers modularize expansion I/O, rich connectivity interfaces, wide range (9~50V) DC power input, and high reliability even operating in temperature extremes.

Featuring with completely high functional, VIO-200-PC100-J1900 series Panel PC are ruggedized display systems that can operate in harsh environments and easy to install and maintain. A build in over voltage protection (OVP), over current protection (OCP), reverse protection, and wide range DC power input makes VIO-200-PC100-J1900 series Panel PC are safety system for all industrial applications.



1.1.1 Key Features

- 12.1"~ 23.8" Multi-functional All-in-One Panel PCs
- Intel® Celeron® processor J1900, 2.0 GHz
- 1x 204-pin DDR3L SODIMM. Max up to 8GB
- 1x 2.5" SATA HDD bay, 1x mSATA, 1x Cfast, 2x SIM socket
- 2x Full-size mini PCIe for communication or expansion modules
- 2x LAN
- 1x VGA, 1x DisplayPort
- 4x External RS-232/422/485, 2x Internal RS-232/422/485
- 1x USB 3.0, 3x USB 2.0
- 1x Line-out, 1x Mic-in
- 8x Isolated Digital Input, 8x Isolated Digital Output
- 9 to 50VDC wide range power input
- Designed with Aluminum Die-Casting Front Frame
- IP65 Compliant Front Panel
- 2x 2W Internal Speakers Built-in (VIO-212 Series Only)
- 2x 10W Internal Speakers Built-in
- Multi-language OSD Built-in

1.2 Hardware Specification

1.2.1 VIO-212R(C)-PC100-J1900 | VIO-212R(C)-PC100-J1900-1

Hardware Specification

Display

- LCD Size: 12.1" (4:3)
- Max. Resolution: 1024 x 768 (XGA)
- Brightness (cd/m²): 500
- Contrast Ratio: 700 : 1
- LCD Color: 16.2M
- Pixel Pitch (mm): 0.24 (H) x 0.24 (V)
- Viewing Angle (H-V): 160 / 160
- Backlight MTBF: 50000 hrs (LED Backlight)

Touch

- Resistive 5-Wire: VIO-212R-PC100-J1900 and VIO-212R-PC100-J1900-1 Only
- Projected Capacitive: VIO-212C-PC100-J1900 and VIO-212C-PC100-J1900-1 Only

System

- Processor: Intel® Celeron® Processor J1900, Quad Core, 2MB Cache, 2.0 GHz
- System Chipset: SOC integrated
- LAN Chipset: GbE1 & GbE2: Intel® I210-AT (Support Wake-on-LAN and PXE)
- Audio Codec: Realtek ALC888S
- System Memory: 1x 204-Pin DDR3L 1066/1333MHz SODIMM. Max. up to 8GB
- BIOS: AMI 64Mbit SPI BIOS
- Watchdog: Software Programmable Supports 1~255 sec. System Reset

Storage

- SSD/HDD: 1x External 2.5" SATA HDD Bay
- mSATA: 1x mSATA (Shared by 1x Mini PCIe)
- CFast: 1x CFast (Shared by 1x mSATA & 1x Mini PCIe)
- SIM Socket: 2x External SIM socket

Expansion

- Mini PCI Express: 2x Full-size Mini PCIe
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB+SATA)
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB)
- 2x Universal I/O Bracket (VIO-212-PC100-J1900 Series Only)

Other Features

- Internal Speaker: AMP 2W + 2W
- OSD: LCD On/Off, Auto, Menu, Up and Down Multi-language

I/O

- VGA: 1x VGA
- DisplayPort: 1x 1x DisplayPort
- COM
 - 4x RS-232/422/485
 - 2x RS-232/422/485 (internal)
- USB: 1x USB 3.0, 3x USB 2.0
- LAN: 2x RJ45
- Audio: 1x Mic-in, 1x Line-out
- DIO: 8 in / 8 out (Isolated)
- Others:
 - 3x WiFi Antenna Holes
 - 1x Power Switch, 1x AT/ATX Switch, 1x Remote Power On/Off

Operating System

- Windows: Windows 10
- Linux: Linux kernel 3.X

Power

- Power Mode: AT, ATX
- Power Supply Voltage: 9-50VDC
- Power Ignition Sensing: Power Ignition Management
- Power Connector: 3-pin Terminal Block
- Power Adaptor: Optional AC/DC 12V/5A, 60W
- Power Protection
 - OVP (Over Voltage Protection)
 - OCP (Over Current Protection)
 - Reverse Protection

Environment

- Operating Temp.: -10°C to 60°C
- Storage Temp.: -20°C to 70°C
- Relative Humidity: 10%~80% (non-condensing)
- IP Level: IP 65 Compliant Front Panel
- Standards / Certification: CE, FCC Class A

Physical

- Front Panel Construction: Die-cast Flat Surface
- **VIO-212R(C)-PC100-J1900**
 - Dimension: 319 (W) x 257 (D) x 61.7 (H)mm
 - Weight: 3.88 ~ 3.92 kg
- **VIO-212R(C)-PC100-J1900-1**
 - Dimension: 319 (W) x 257 (D) x 83.7 (H)mm
 - Weight: 4.28 ~ 4.37 kg
- Mounting: VESA Mounting Holes 75 x 75mm, 100 x 100mm

1.2.2 VIO-215R(C)-PC100-J1900 | VIO-215R(C)-PC100-J1900-1

Hardware Specification

Display

- LCD Size: 15" (4:3)
- Max. Resolution: 1024 x 768 (XGA)
- Brightness (cd/m²): 350
- Contrast Ratio: 700 : 1
- LCD Color: 16.2M
- Pixel Pitch (mm): 0.297 (H) x 0.297 (V)
- Viewing Angle (H-V): 170 / 160
- Backlight MTBF: 50000 hrs (LED Backlight)

Touch

- Resistive 5-Wire: VIO-215R-PC100-J1900 and VIO-215R/PC110 Only
- Projected Capacitive: VIO-215C-PC100-J1900 and VIO-215C-PC100-J1900-1 Only

System

- Processor: Intel® Celeron® Processor J1900, Quad Core, 2MB Cache, 2.0 GHz
- System Chipset: SOC integrated
- LAN Chipset: GbE1 & GbE2: Intel® I210-AT (Support Wake-on-LAN and PXE)
- Audio Codec: Realtek ALC888S
- System Memory: 1x 204-Pin DDR3L 1066/1333MHz SODIMM. Max. up to 8GB
- BIOS: AMI 64Mbit SPI BIOS
- Watchdog: Software Programmable Supports 1~255 sec. System Reset

Storage

- SSD/HDD: 1x External 2.5" SATA HDD Bay
- mSATA: 1x mSATA (Shared by 1x Mini PCIe)
- CFast: 1x CFast (Shared by 1x mSATA & 1x Mini PCIe)
- SIM Socket: 2x External SIM socket

Expansion

- Mini PCI Express: 2x Full-size Mini PCIe
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB+SATA)
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB)
- 2x Universal I/O Bracket (VIO-215-PC100-J1900-1 Series Only)

Other Features

- Internal Speaker: AMP 10W + 10W
- OSD: LCD On/Off, Auto, Menu, Up and Down Multi-language

I/O

- VGA: 1x VGA
- DisplayPort: 1x 1x DisplayPort
- COM
 - 4x RS-232/422/485
 - 2x RS-232/422/485 (internal)
- USB: 1x USB 3.0, 3x USB 2.0
- LAN: 2x RJ45
- Audio: 1x Mic-in, 1x Line-out
- DIO: 8 in / 8 out (Isolated)
- Others:
 - 3x WiFi Antenna Holes
 - 1x Power Switch, 1x AT/ATX Switch, 1x Remote Power On/Off

Operating System

- Windows: Windows 10
- Linux: Linux kernel 3.X

Power

- Power Mode: AT, ATX
- Power Supply Voltage: 9-50VDC
- Power Ignition Sensing: Power Ignition Management
- Power Connector: 3-pin Terminal Block
- Power Adaptor: Optional AC/DC 12V/5A, 60W
- Power Protection
 - OVP (Over Voltage Protection)
 - OCP (Over Current Protection)
 - Reverse Protection

Environment

- Operating Temp.: -10°C to 60°C
- Storage Temp.: -20°C to 65°C
- Relative Humidity: 10%~80% (non-condensing)
- IP Level: IP 65 Compliant Front Panel
- Standards / Certification: CE, FCC Class A

Physical

- Front Panel Construction: Die-cast Flat Surface
- **VIO-215R(C)-PC100-J1900**
 - Dimension: 377 (W) x 301 (D) x 64.7 (H)mm
 - Weight: 5.12 ~ 5.16 kg
- **VIO-215R(C)-PC100-J1900-1**
 - Dimension: 377 (W) x 301 (D) x 86.7 (H)mm
 - Weight: 5.24 ~ 5.32 kg
- Mounting: VESA Mounting Holes 75 x 75mm, 100 x 100mm

1.2.3 VIO-W215R(C)-PC100-J1900 | VIO-W215R(C)-PC100-J1900-1

Hardware Specification

Display

- LCD Size: 15.6" (16:9)
- Max. Resolution: 1920 x 1080 (Full HD)
- Brightness (cd/m²): 400
- Contrast Ratio: 700 : 1
- LCD Color: 16.7M
- Pixel Pitch (mm): 0.17925 (H) x 0.17925 (V)
- Viewing Angle (H-V): 160 / 140
- Backlight MTBF: 50000 hrs (LED Backlight)

Touch

- Resistive 5-Wire: VIO-W215R-PC100-J1900 and VIO-W215R-PC100-J1900-1 Only
- Projected Capacitive: VIO-W215C-PC100-J1900 and VIO-W215C-PC100-J1900-1 Only

System

- Processor: Intel® Celeron® Processor J1900, Quad Core, 2MB Cache, 2.0 GHz
- System Chipset: SOC integrated
- LAN Chipset: GbE1 & GbE2: Intel® I210-AT (Support Wake-on-LAN and PXE)
- Audio Codec: Realtek ALC888S
- System Memory: 1x 204-Pin DDR3L 1066/1333MHz SODIMM. Max. up to 8GB
- BIOS: AMI 64Mbit SPI BIOS
- Watchdog: Software Programmable Supports 1~255 sec. System Reset

Storage

- SSD/HDD: 1x External 2.5" SATA HDD Bay
- mSATA: 1x mSATA (Shared by 1x Mini PCIe)
- CFast: 1x CFast (Shared by 1x mSATA & 1x Mini PCIe)
- SIM Socket: 2x External SIM socket

Expansion

- Mini PCI Express: 2x Full-size Mini PCIe
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB+SATA)
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB)
- 2x Universal I/O Bracket (VIO-W215-PC100-J1900 Series Only)

Other Features

- Internal Speaker: AMP 10W + 10W
- OSD: LCD On/Off, Auto, Menu, Up and Down Multi-language

I/O

- VGA: 1x VGA
- DisplayPort: 1x 1x DisplayPort
- COM
 - 4x RS-232/422/485
 - 2x RS-232/422/485 (internal)
- USB: 1x USB 3.0, 3x USB 2.0
- LAN: 2x RJ45
- Audio: 1x Mic-in, 1x Line-out
- DIO: 8 in / 8 out (Isolated)
- Others:
 - 3x WiFi Antenna Holes
 - 1x Power Switch, 1x AT/ATX Switch, 1x Remote Power On/Off

Operating System

- Windows: Windows 10
- Linux: Linux kernel 3.X

Power

- Power Mode: AT, ATX
- Power Supply Voltage: 9-50VDC
- Power Ignition Sensing: Power Ignition Management
- Power Connector: 3-pin Terminal Block
- Power Adaptor: Optional AC/DC 12V/5A, 60W
- Power Protection
 - OVP (Over Voltage Protection)
 - OCP (Over Current Protection)
 - Reverse Protection

Environment

- Operating Temp.: -10°C to 70°C
- Storage Temp.: -20°C to 70°C
- Relative Humidity: 10%~80% (non-condensing)
- IP Level: IP 65 Compliant Front Panel
- Standards / Certification: CE, FCC Class A

Physical

- Front Panel Construction: Die-cast Flat Surface
- **VIO-W215R(C)-PC100-J1900**
 - Dimension: 398 (W) x 247 (D) x 70.7 (H)mm
 - Weight: 5.52 ~ 5.58 kg
- **VIO-W215R(C)-PC100-J1900-1**
 - Dimension: 398 (W) x 247 (D) x 92.7 (H)mm
 - Weight: 5.53 ~ 5.62 kg
- Mounting: VESA Mounting Holes 75 x 75mm, 100 x 100mm

1.2.4 VIO-217R(C)-PC100-J1900 | VIO-217R(C)-PC100-J1900-1

Hardware Specification

Display

- LCD Size: 17" (4:3)
- Max. Resolution: 1280 x 1024 (SXGA)
- Brightness (cd/m²): 350
- Contrast Ratio: 800 : 1
- LCD Color: 16.7M
- Pixel Pitch (mm): 0.264 (H) x 0.264 (V)
- Viewing Angle (H-V): 170 / 160
- Backlight MTBF: 50000 hrs (LED Backlight)

Touch

- Resistive 5-Wire: VIO-217R-PC100-J1900 and VIO-217R-PC100-J1900-1 Only
- Projected Capacitive: VIO-217C-PC100-J1900 and VIO-217C-PC100-J1900-1 Only

System

- Processor: Intel® Celeron® Processor J1900, Quad Core, 2MB Cache, 2.0 GHz
- System Chipset: SOC integrated
- LAN Chipset: GbE1 & GbE2: Intel® I210-AT (Support Wake-on-LAN and PXE)
- Audio Codec: Realtek ALC888S
- System Memory: 1x 204-Pin DDR3L 1066/1333MHz SODIMM. Max. up to 8GB
- BIOS: AMI 64Mbit SPI BIOS
- Watchdog: Software Programmable Supports 1~255 sec. System Reset

Storage

- SSD/HDD: 1x External 2.5" SATA HDD Bay
- mSATA: 1x mSATA (Shared by 1x Mini PCIe)
- CFast: 1x CFast (Shared by 1x mSATA & 1x Mini PCIe)
- SIM Socket: 2x External SIM socket

Expansion

- Mini PCI Express: 2x Full-size Mini PCIe
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB+SATA)
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB)
- 2x Universal I/O Bracket (VIO-217-PC100-J1900 Series Only)

Other Features

- Internal Speaker: AMP 10W + 10W
- OSD: LCD On/Off, Auto, Menu, Up and Down Multi-language

I/O

- VGA: 1x VGA
- DisplayPort: 1x 1x DisplayPort
- COM
 - 4x RS-232/422/485
 - 2x RS-232/422/485 (internal)
- USB: 1x USB 3.0, 3x USB 2.0
- LAN: 2x RJ45
- Audio: 1x Mic-in, 1x Line-out
- DIO: 8 in / 8 out (Isolated)
- Others:
 - 3x WiFi Antenna Holes
 - 1x Power Switch, 1x AT/ATX Switch, 1x Remote Power On/Off

Operating System

- Windows: Windows 10
- Linux: Linux kernel 3.X

Power

- Power Mode: AT, ATX
- Power Supply Voltage: 9-50VDC
- Power Ignition Sensing: Power Ignition Management
- Power Connector: 3-pin Terminal Block
- Power Adaptor: Optional AC/DC 12V/5A, 60W
- Power Protection
 - OVP (Over Voltage Protection)
 - OCP (Over Current Protection)
 - Reverse Protection

Environment

- Operating Temp.: -10°C to 60°C
- Storage Temp.: -20°C to 70°C
- Relative Humidity: 10%~80% (non-condensing)
- IP Level: IP 65 Compliant Front Panel
- Standards / Certification: CE, FCC Class A

Physical

- Front Panel Construction: Die-cast Flat Surface
- **VIO-217R(C)-PC100-J1900**
 - Dimension: 407.5 (W) x 339 (D) x 70.5 (H)mm
 - Weight: 6.08 ~ 6.11 kg
- **VIO-217R(C)-PC100-J1900-1**
 - Dimension: 407.5 (W) x 339 (D) x 92.5 (H)mm
 - Weight: 6.13 ~ 6.17 kg
- Mounting: VESA Mounting Holes 75 x 75mm, 100 x 100mm

1.2.5 VIO-219R(C)-PC100-J1900 | VIO-219R(C)-PC100-J1900-1

Hardware Specification

Display

- LCD Size: 19" (4:3)
- Max. Resolution: 1280 x 1024 (SXGA)
- Brightness (cd/m²): 350
- Contrast Ratio: 1000 : 1
- LCD Color: 16.7M
- Pixel Pitch (mm): 0.294 (H) x 0.294 (V)
- Viewing Angle (H-V): 170 / 160
- Backlight MTBF: 50000 hrs (LED Backlight)

Touch

- Resistive 5-Wire: VIO-219R-PC100-J1900 and VIO-219R/PC110 Only
- Projected Capacitive: VIO-219C-PC100-J1900 and VIO-219C-PC100-J1900-1 Only

System

- Processor: Intel® Celeron® Processor J1900, Quad Core, 2MB Cache, 2.0 GHz
- System Chipset: SOC integrated
- LAN Chipset: GbE1 & GbE2: Intel® I210-AT (Support Wake-on-LAN and PXE)
- Audio Codec: Realtek ALC888S
- System Memory: 1x 204-Pin DDR3L 1066/1333MHz SODIMM. Max. up to 8GB
- BIOS: AMI 64Mbit SPI BIOS
- Watchdog: Software Programmable Supports 1~255 sec. System Reset

Storage

- SSD/HDD: 1x External 2.5" SATA HDD Bay
- mSATA: 1x mSATA (Shared by 1x Mini PCIe)
- CFast: 1x CFast (Shared by 1x mSATA & 1x Mini PCIe)
- SIM Socket: 2x External SIM socket

Expansion

- Mini PCI Express: 2x Full-size Mini PCIe
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB+SATA)
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB)
- 2x Universal I/O Bracket (VIO-219-PC100-J1900-1 Series Only)

Other Features

- Internal Speaker: AMP 10W + 10W
- OSD: LCD On/Off, Auto, Menu, Up and Down Multi-language

I/O

- VGA: 1x VGA
- DisplayPort: 1x 1x DisplayPort
- COM
 - 4x RS-232/422/485
 - 2x RS-232/422/485 (internal)
- USB: 1x USB 3.0, 3x USB 2.0
- LAN: 2x RJ45
- Audio: 1x Mic-in, 1x Line-out
- DIO: 8 in / 8 out (Isolated)
- Others:
 - 3x WiFi Antenna Holes
 - 1x Power Switch, 1x AT/ATX Switch, 1x Remote Power On/Off

Operating System

- Windows: Windows 10
- Linux: Linux kernel 3.X

Power

- Power Mode: AT, ATX
- Power Supply Voltage: 9-50VDC
- Power Ignition Sensing: Power Ignition Management
- Power Connector: 3-pin Terminal Block
- Power Adaptor: Optional AC/DC 12V/5A, 60W
- Power Protection
 - OVP (Over Voltage Protection)
 - OCP (Over Current Protection)
 - Reverse Protection

Environment

- Operating Temp.: -10°C to 50°C
- Storage Temp.: -20°C to 60°C
- Relative Humidity: 10%~80% (non-condensing)
- IP Level: IP 65 Compliant Front Panel
- Standards / Certification: CE, FCC Class A

Physical

- Front Panel Construction: Die-cast Flat Surface
- **VIO-219R(C)-PC100-J1900**
 - Dimension: 450 (W) x 375 (D) x 71 (H)mm
 - Weight: 7.19 ~ 7.23 kg
- **VIO-219R(C)-PC100-J1900-1**
 - Dimension: 450 (W) x 375 (D) x 93 (H)mm
 - Weight: 7.18 ~ 7.26 kg
- Mounting: VESA Mounting Holes 75 x 75mm, 100 x 100mm

1.2.6 VIO-W221R(C)-PC100-J1900 | VIO-W221R(C)-PC100-J1900-1

Hardware Specification

Display

- LCD Size: 21.5" (16:9)
- Max. Resolution: 1920 x 1080 (Full HD)
- Brightness (cd/m²): 300
- Contrast Ratio: 5000 : 1
- LCD Color: 16.7M
- Pixel Pitch (mm): 0.248 (H) x 0.248 (V)
- Viewing Angle (H-V): 178 / 178
- Backlight MTBF: 50000 hrs (LED Backlight)

Touch

- Resistive 5-Wire: VIO-W221R-PC100-J1900 and VIO-W121R/PC110 Only
- Projected Capacitive: VIO-W221C-PC100-J1900-1 and VIO-W121C/PC110 Only

System

- Processor: Intel® Celeron® Processor J1900, Quad Core, 2MB Cache, 2.0 GHz
- System Chipset: SOC integrated
- LAN Chipset: GbE1 & GbE2: Intel® I210-AT (Support Wake-on-LAN and PXE)
- Audio Codec: Realtek ALC888S
- System Memory: 1x 204-Pin DDR3L 1066/1333MHz SODIMM. Max. up to 8GB
- BIOS: AMI 64Mbit SPI BIOS
- Watchdog: Software Programmable Supports 1~255 sec. System Reset

Storage

- SSD/HDD: 1x External 2.5" SATA HDD Bay
- mSATA: 1x mSATA (Shared by 1x Mini PCIe)
- CFast: 1x CFast (Shared by 1x mSATA & 1x Mini PCIe)
- SIM Socket: 2x External SIM socket

Expansion

- Mini PCI Express: 2x Full-size Mini PCIe
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB+SATA)
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB)
- 2x Universal I/O Bracket (VIO-W221-PC100-J1900 Series Only)

Other Features

- Internal Speaker: AMP 10W + 10W
- OSD: LCD On/Off, Auto, Menu, Up and Down Multi-language

I/O

- VGA: 1x VGA
- DisplayPort: 1x 1x DisplayPort
- COM
 - 4x RS-232/422/485
 - 2x RS-232/422/485 (internal)
- USB: 1x USB 3.0, 3x USB 2.0
- LAN: 2x RJ45
- Audio: 1x Mic-in, 1x Line-out
- DIO: 8 in / 8 out (Isolated)
- Others:
 - 3x WiFi Antenna Holes
 - 1x Power Switch, 1x AT/ATX Switch, 1x Remote Power On/Off

Operating System

- Windows: Windows 10
- Linux: Linux kernel 3.X

Power

- Power Mode: AT, ATX
- Power Supply Voltage: 9-50VDC
- Power Ignition Sensing: Power Ignition Management
- Power Connector: 3-pin Terminal Block
- Power Adaptor: Optional AC/DC 12V/5A, 60W
- Power Protection
 - OVP (Over Voltage Protection)
 - OCP (Over Current Protection)
 - Reverse Protection

Environment

- Operating Temp.: -10°C to 60°C
- Storage Temp.: -20°C to 60°C
- Relative Humidity: 10%~80% (non-condensing)
- IP Level: IP 65 Compliant Front Panel
- Standards / Certification: CE, FCC Class A

Physical

- Front Panel Construction: Die-cast Flat Surface
- **VIO-W221R(C)-PC100-J1900**
 - Dimension: 528.5 (W) x 324 (D) x 71 (H)mm
 - Weight: 7.58 ~ 7.63 kg
- **VIO-W221R(C)-PC100-J1900-1**
 - Dimension: 528.5 (W) x 324 (D) x 93 (H)mm
 - Weight: 7.63 ~ 7.68 kg
- Mounting: VESA Mounting Holes 75 x 75mm, 100 x 100mm

1.2.7 VIO-W224R(C)-PC100-J1900 | VIO-W224R(C)-PC100-J1900-1

Hardware Specification

Display

- LCD Size: 23.8" (16:9)
- Max. Resolution: 1920 x 1080 (Full HD)
- Brightness (cd/m²): 350
- Contrast Ratio: 1000 : 1
- LCD Color: 16.7M
- Pixel Pitch (mm): 0.2745 (H) x 0.2745 (V)
- Viewing Angle (H-V): 178 / 178
- Backlight MTBF: 30000 hrs (LED Backlight)

Touch

- Resistive 5-Wire: VIO-W224R-PC100-J1900 and VIO-W224R/PC110 Only
- Projected Capacitive: VIO-W224C-PC100-J1900 and VIO-W224C-PC100-J1900-1 Only

System

- Processor: Intel® Celeron® Processor J1900, Quad Core, 2MB Cache, 2.0 GHz
- System Chipset: SOC integrated
- LAN Chipset: GbE1 & GbE2: Intel® I210-AT (Support Wake-on-LAN and PXE)
- Audio Codec: Realtek ALC888S
- System Memory: 1x 204-Pin DDR3L 1066/1333MHz SODIMM. Max. up to 8GB
- BIOS: AMI 64Mbit SPI BIOS
- Watchdog: Software Programmable Supports 1~255 sec. System Reset

Storage

- SSD/HDD: 1x External 2.5" SATA HDD Bay
- mSATA: 1x mSATA (Shared by 1x Mini PCIe)
- CFast: 1x CFast (Shared by 1x mSATA & 1x Mini PCIe)
- SIM Socket: 2x External SIM socket

Expansion

- Mini PCI Express: 2x Full-size Mini PCIe
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB+SATA)
 - 1x Full-size Mini PCIe socket with USIM socket (PCIe+USB)
- 2x Universal I/O Bracket (VIO-W224-PC100-J1900-1 Series Only)

Other Features

- Internal Speaker: AMP 10W + 10W
- OSD: LCD On/Off, Auto, Menu, Up and Down Multi-language

I/O

- VGA: 1x VGA
- DisplayPort: 1x 1x DisplayPort
- COM
 - 4x RS-232/422/485
 - 2x RS-232/422/485 (internal)
- USB: 1x USB 3.0, 3x USB 2.0
- LAN: 2x RJ45
- Audio: 1x Mic-in, 1x Line-out
- DIO: 8 in / 8 out (Isolated)
- Others:
 - 3x WiFi Antenna Holes
 - 1x Power Switch, 1x AT/ATX Switch, 1x Remote Power On/Off

Operating System

- Windows: Windows 10
- Linux: Linux kernel 3.X

Power

- Power Mode: AT, ATX
- Power Supply Voltage: 9-50VDC
- Power Ignition Sensing: Power Ignition Management
- Power Connector: 3-pin Terminal Block
- Power Adaptor: Optional AC/DC 12V/5A, 60W
- Power Protection
 - OVP (Over Voltage Protection)
 - OCP (Over Current Protection)
 - Reverse Protection

Environment

- Operating Temp.: -10°C to 50°C
- Storage Temp.: -20°C to 60°C
- Relative Humidity: 10%~80% (non-condensing)
- IP Level: IP 65 Compliant Front Panel
- Standards / Certification: CE, FCC Class A

Physical

- Front Panel Construction: Die-cast Flat Surface
- **VIO-W221R(C)-PC100-J1900**
 - Dimension: 588 (W) x 360 (D) x 71.8 (H)mm
 - Weight: 9.91 ~ 10.16 kg
- **VIO-W221R(C)-PC100-J1900-1**
 - Dimension: 588 (W) x 360 (D) x 93.8 (H)mm
 - Weight: 10.20 ~ 10.45 kg
- Mounting: VESA Mounting Holes 75 x 75mm, 100 x 100mm

1.3 System I/O

1.3.1 Front

Antenna hole

Used to connect an antenna for optional Mini-Pcie WiFi module

CFast Socket


Used to insert CFast card

SIM card

Used to insert SIM card

Removable HDD Bay

Used to insert a 2.5" HDD or SSD

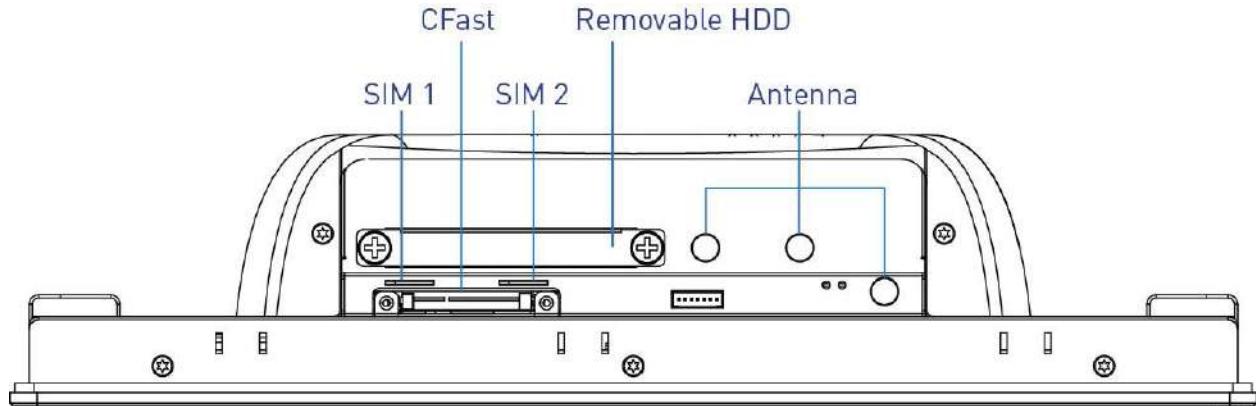

1.3.2 Rear

DC IN

Used to plug a DC power input with terminal block

VGA

Used to connect an analog VGA monitor

DisplayPort

Used to connect a DisplayPort monitor

USB 3.0 port

Used to connect USB 3.0/2.0/1.1 device

USB 2.0 port

Used to connect USB 2.0/1.1 device

LAN port

Used to connect the system to a local area network

Line-out


Used to connect a speaker

Mic-in

Used to connect a microphone

Remote Power on/off Terminal Block

Used to plug a remote power on/off terminal block

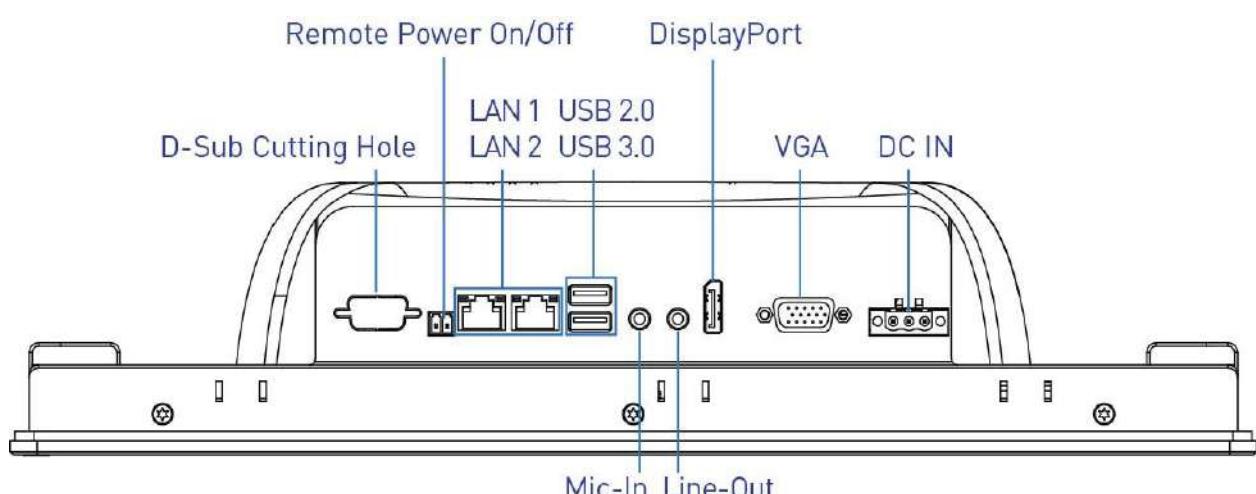

1.3.3 Side (Left)

Universal I/O Bracket

Used to customized I/O output
(VIO-100/PC110 and VIO-200-PC100-J1900-1 series only)

COM port


COM 3/4 support RS232/422/485 serial device

12V/24V mode select switch

Used to select Car power input voltage

DELAY TIME switch

Used to select Car power turn off delay-time

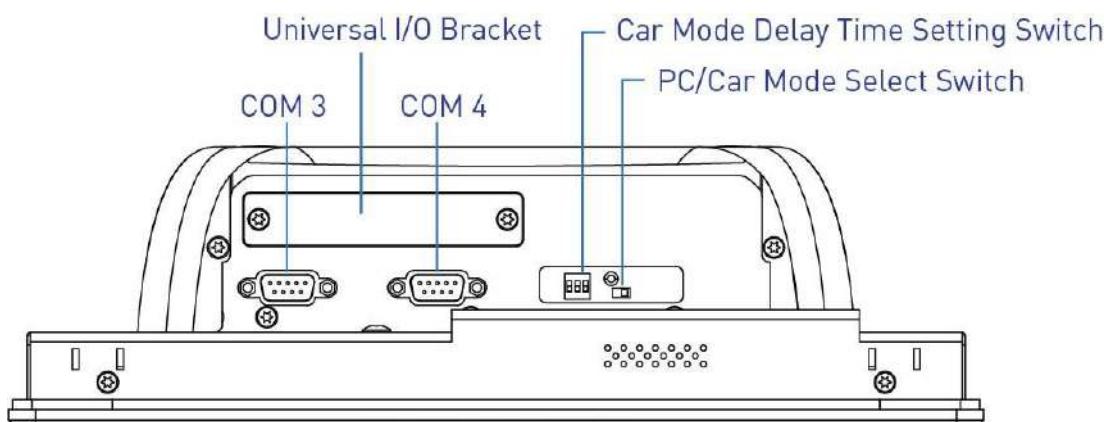

1.3.4 Side (Right)

COM port

COM 1/2 support RS232/422/485 serial device

USB 2.0 port

Used to connect USB 2.0/1.1 device

Digital I/O Terminal Block

The Digital I/O terminal block supports 8 digital input and 8 digital output

Reset switch

Press to reset the system

Universal I/O Bracket


Used to customized I/O output
(VIO-100/PC110 and VIO-200-PC100-J1900-1 series only)

ATX power on/off switch

Press to power-on or power-off the system

Reset switch


Press to reset the system

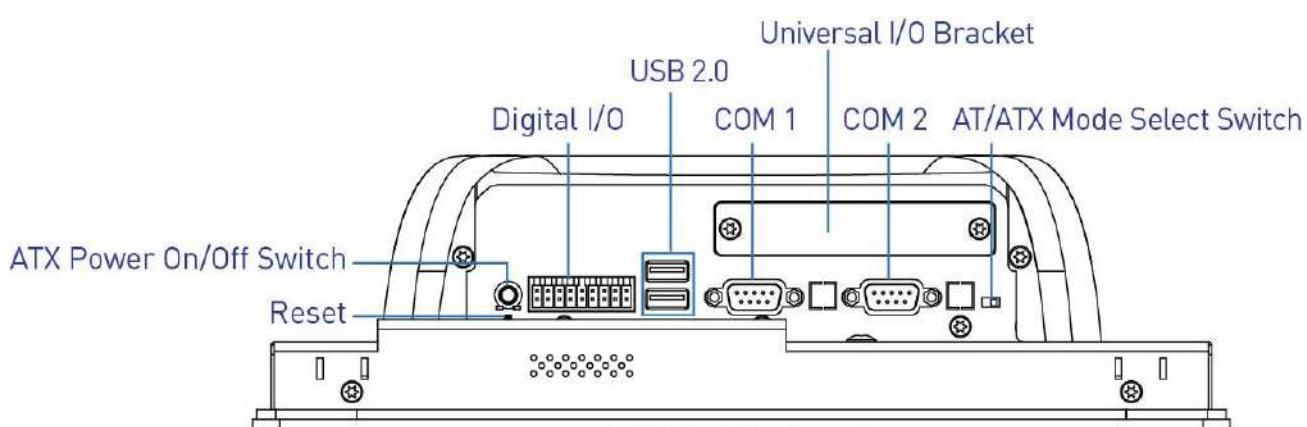

1.3.5 TOP


VESA Mounting Hole

These are mounting holes for VESA mount (75x75mm and 100x100mm)

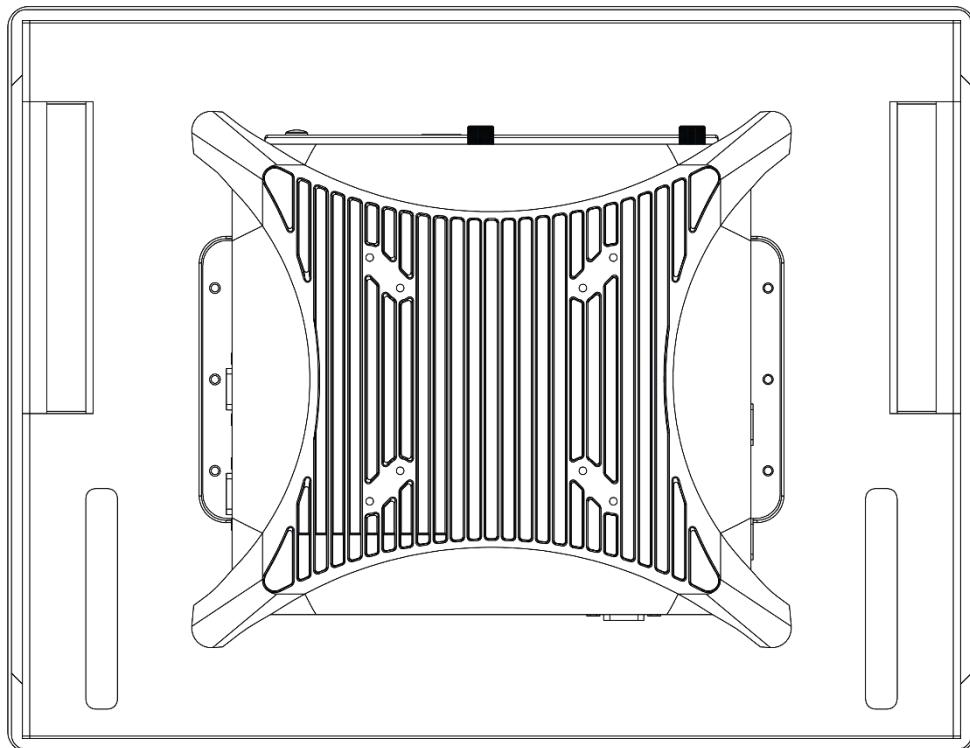


1.4 Mechanical Dimensions


1.4.1 VIO-212R(C)-PC100-J1900

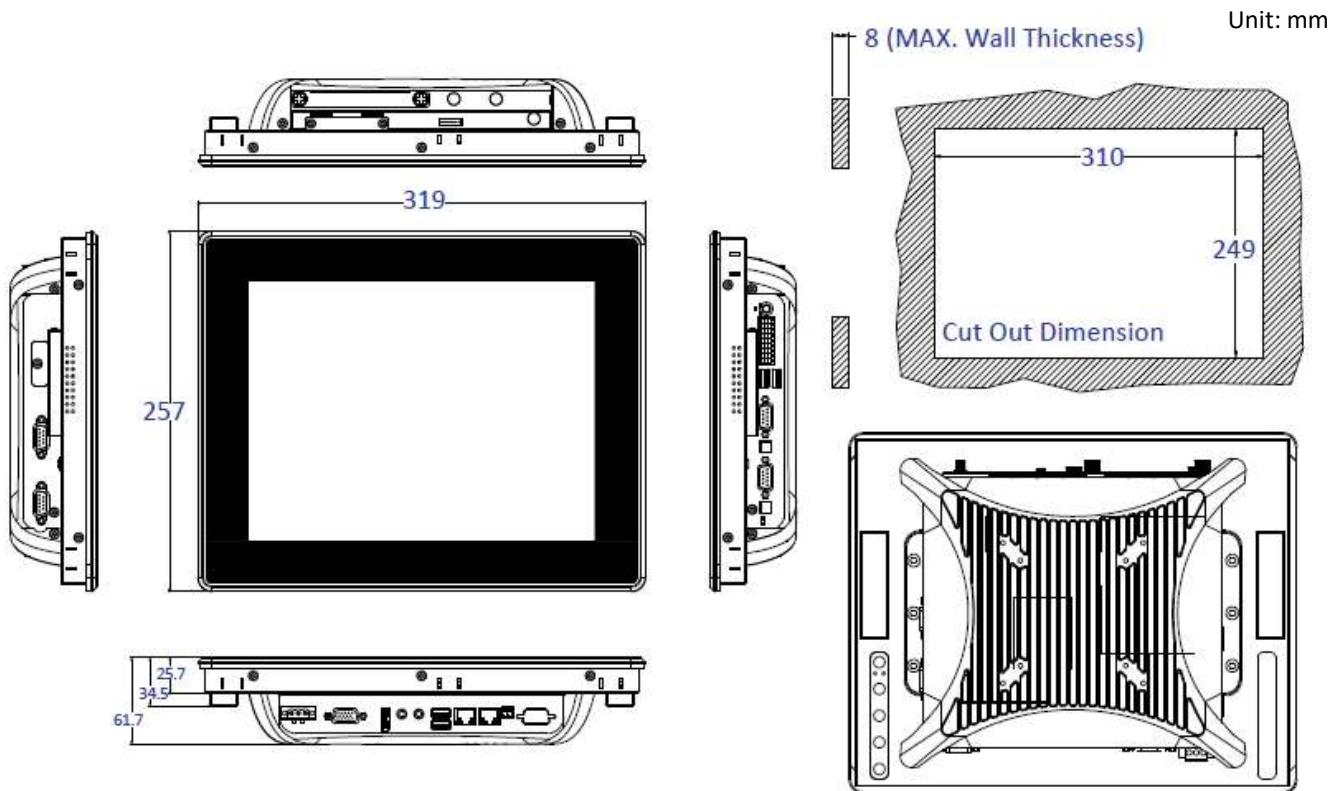


VIO-212R(C)-PC100-J1900-1

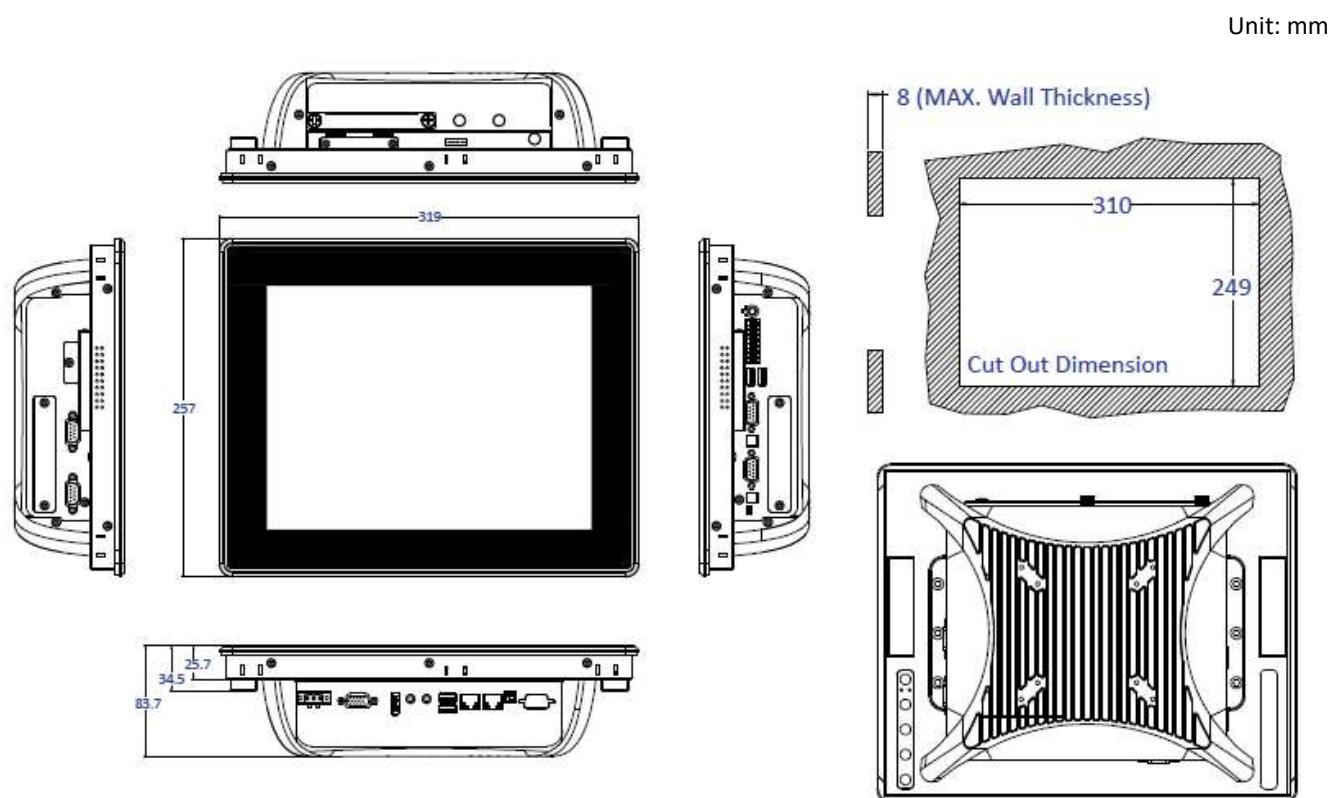

1.4.2 VIO-215R(C)-PC100-J1900

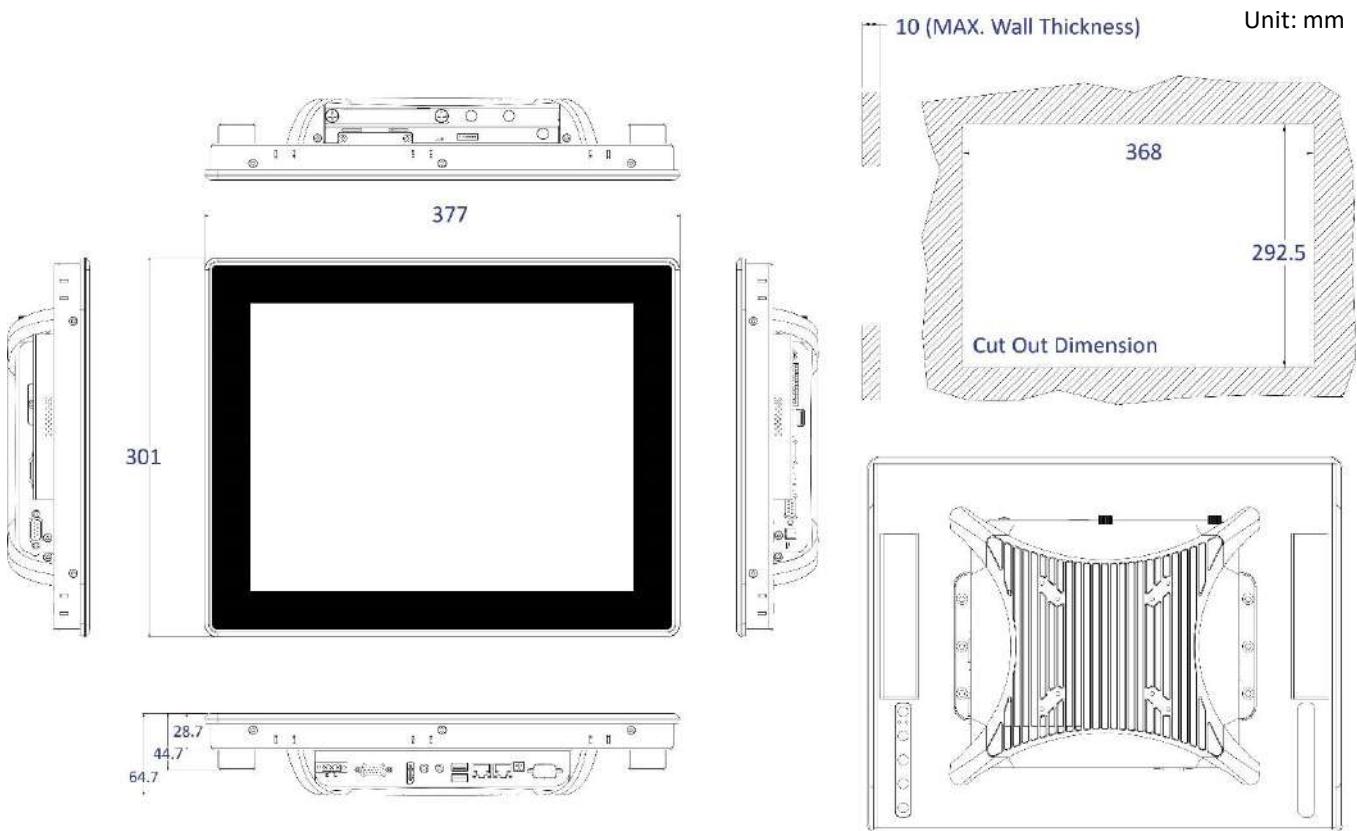


VIO-215R(C)-PC100-J1900-1

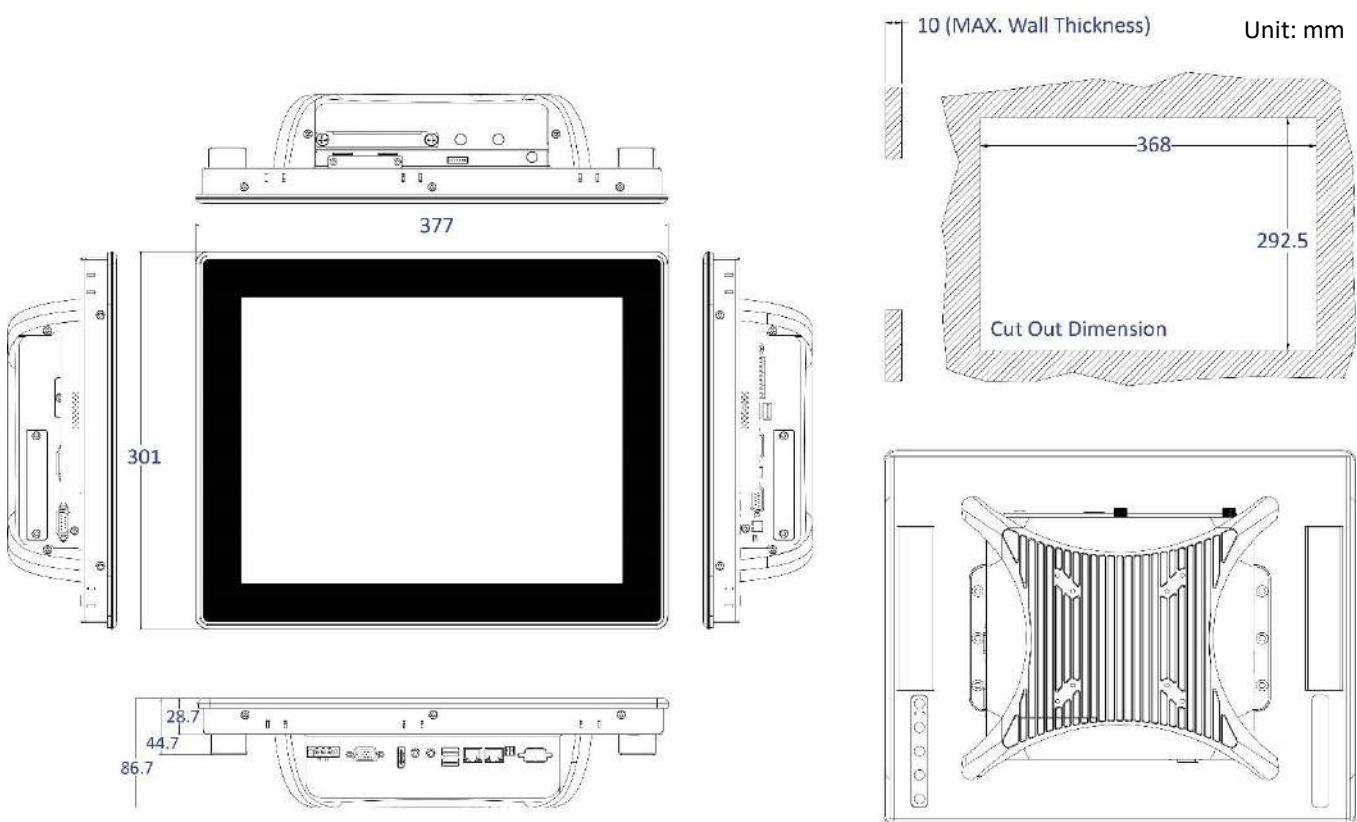


1.4.3 VIO-W215R(C)-PC100-J1900

Unit: mm

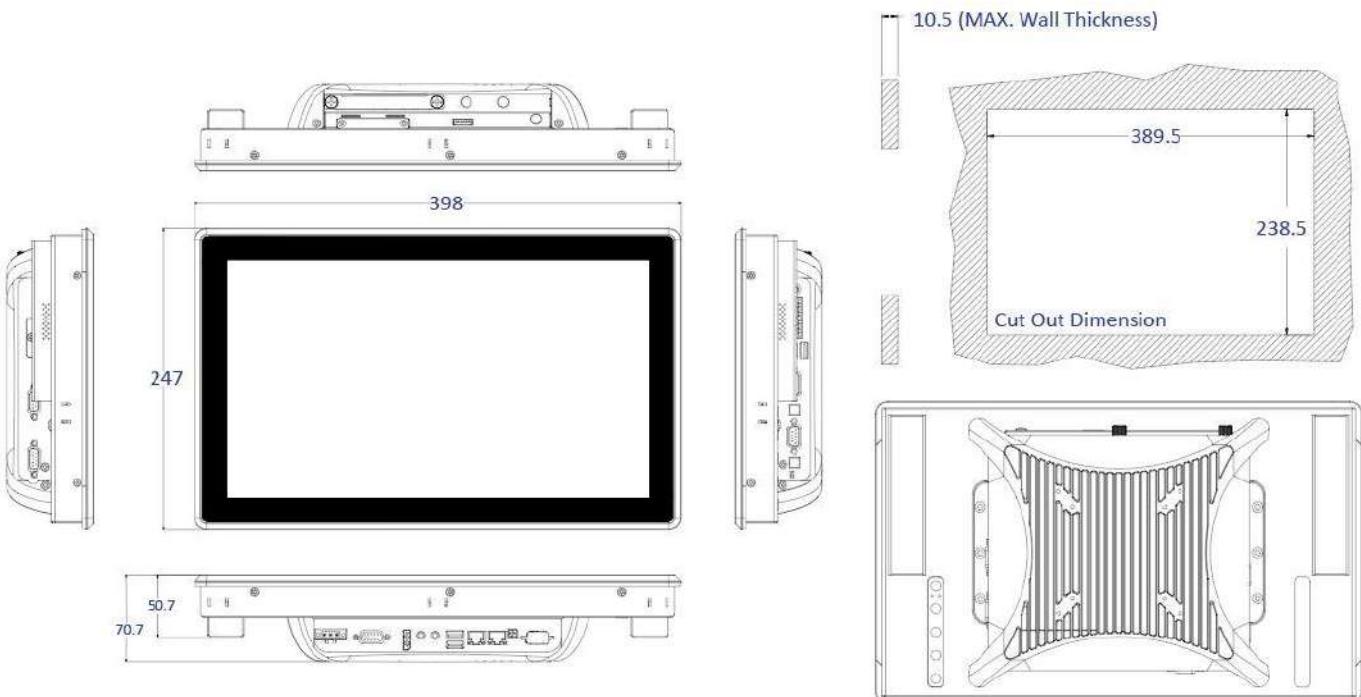


VIO-W215R(C)-PC100-J1900-1


Unit: mm

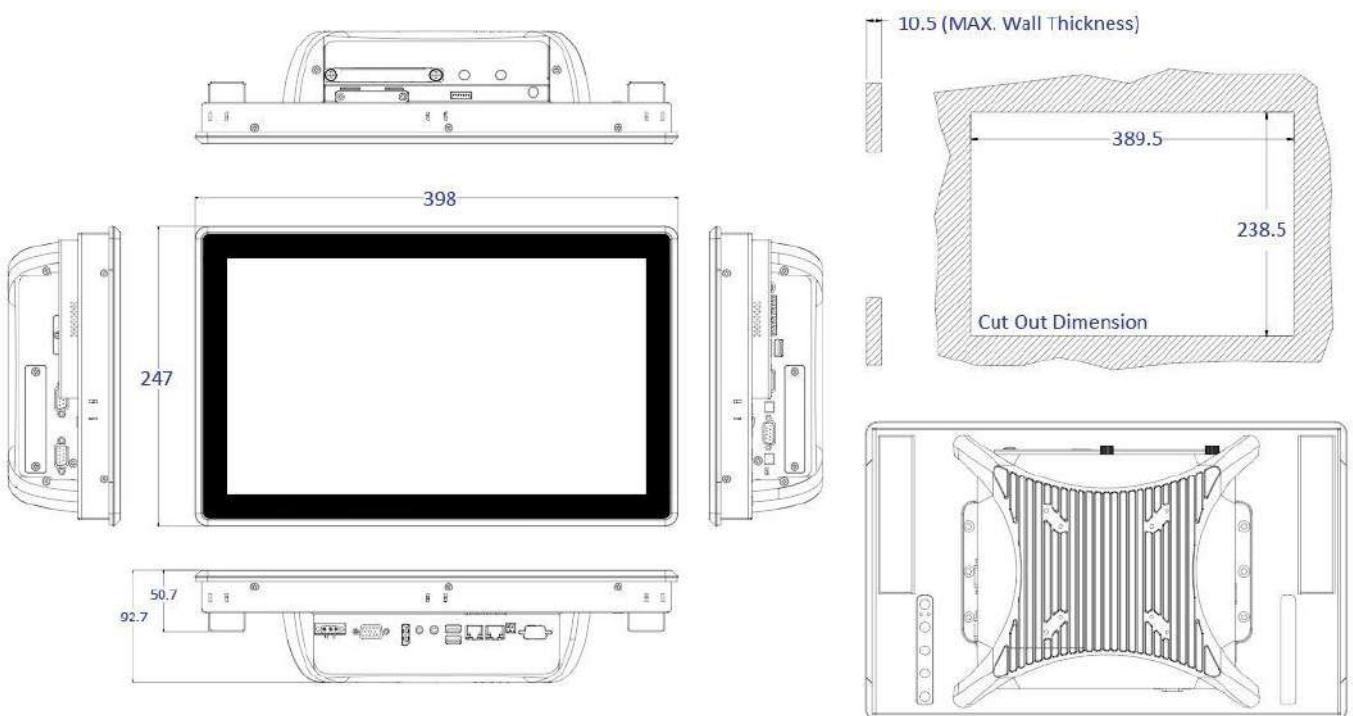


1.4.4 VIO-217R(C)-PC100-J1900

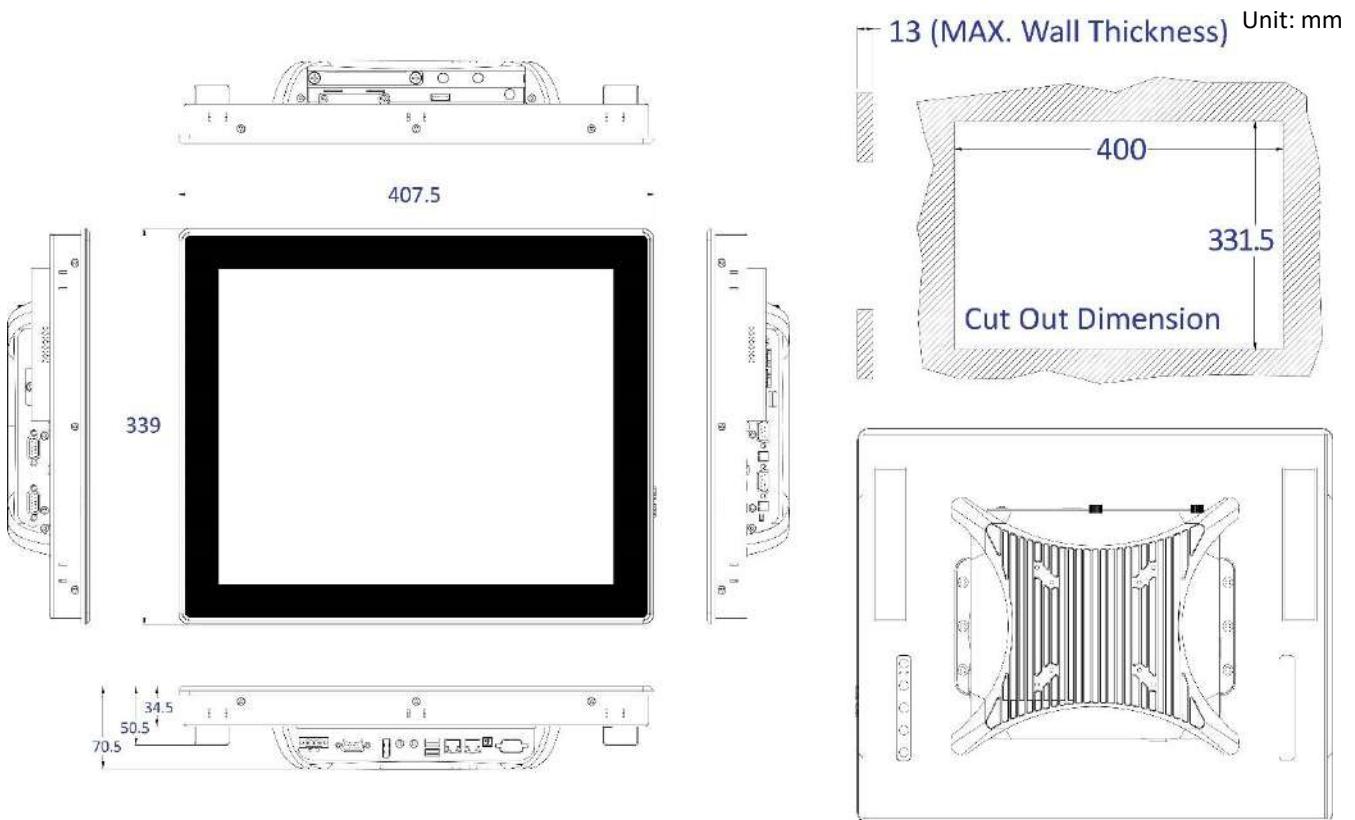


VIO-217R(C)-PC100-J1900-1

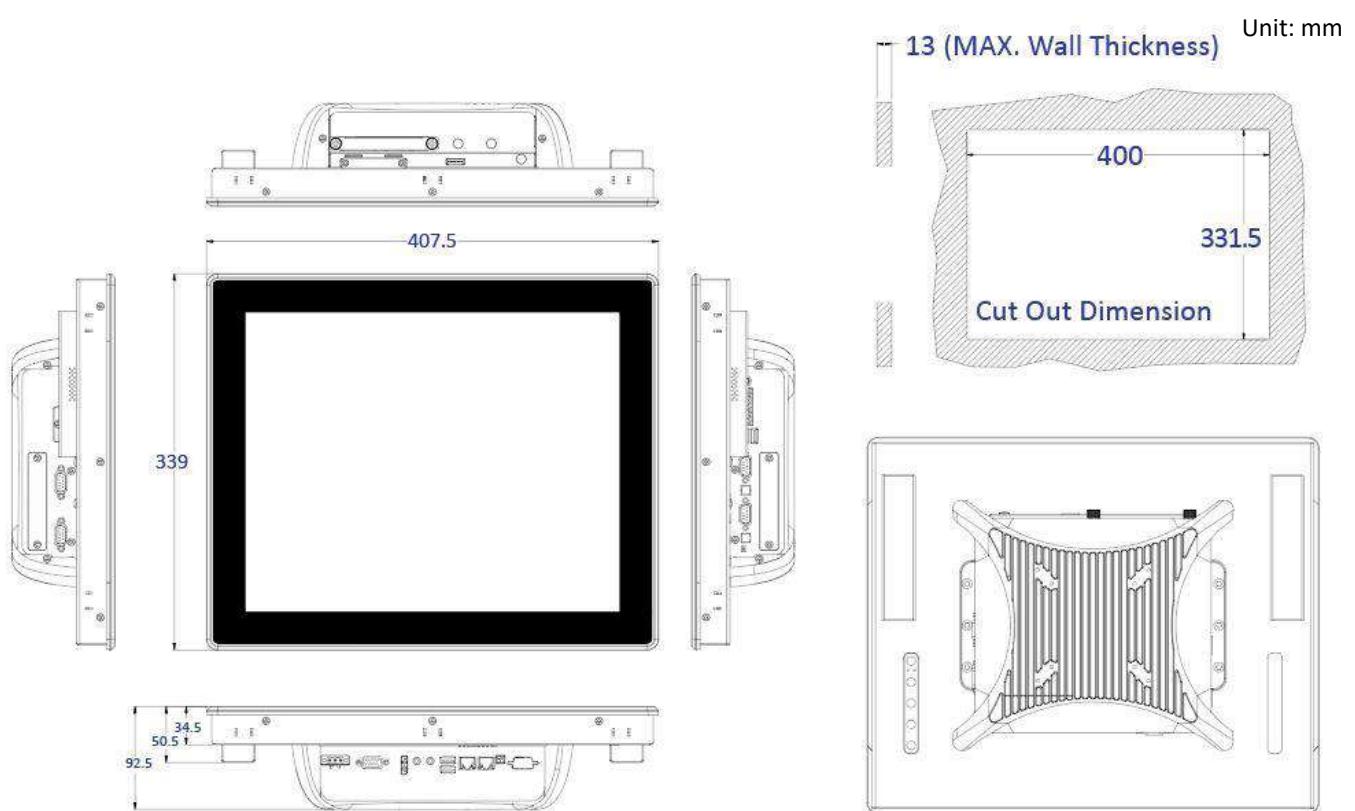


1.4.5 VIO-219R(C)-PC100-J1900

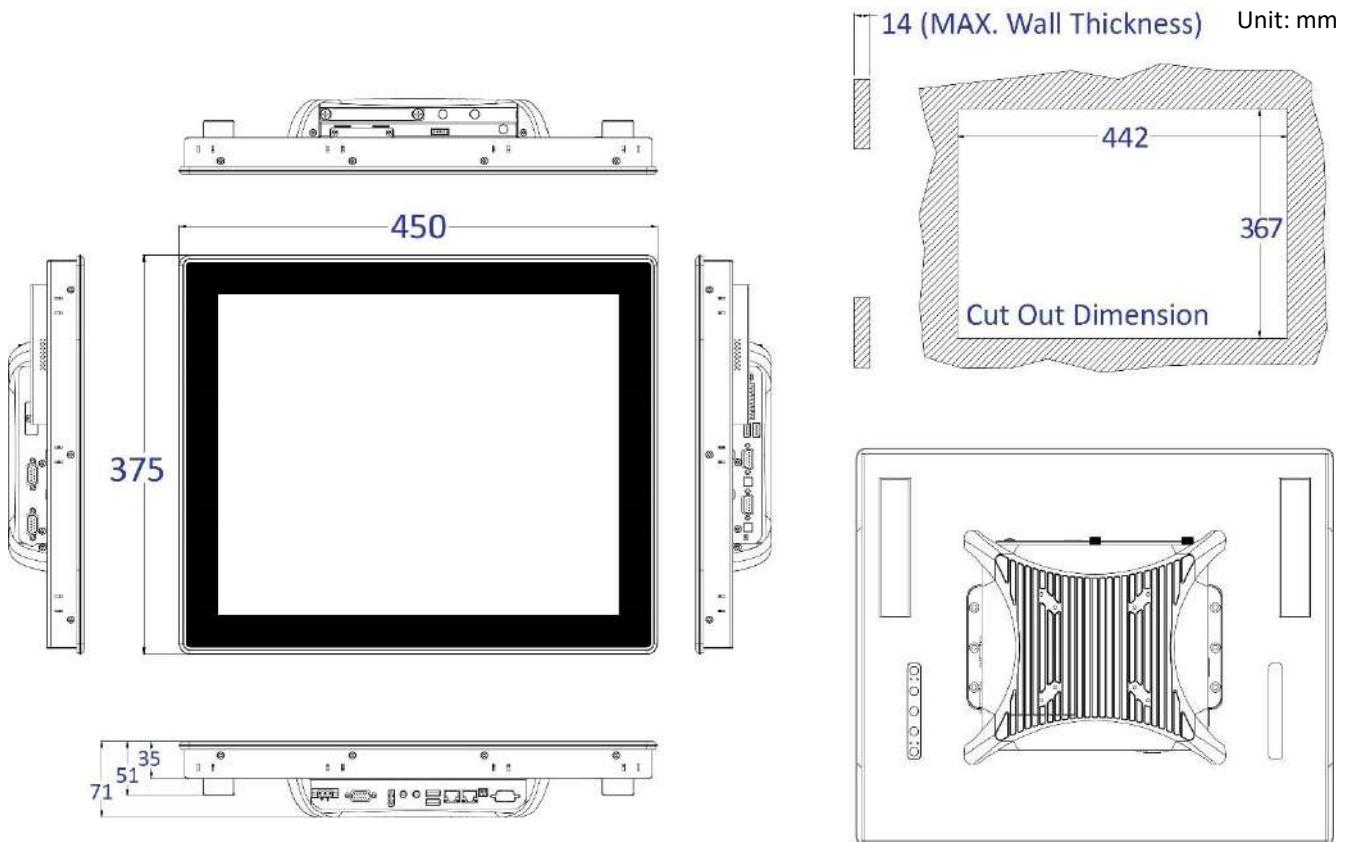


VIO-219R(C)-PC100-J1900-1

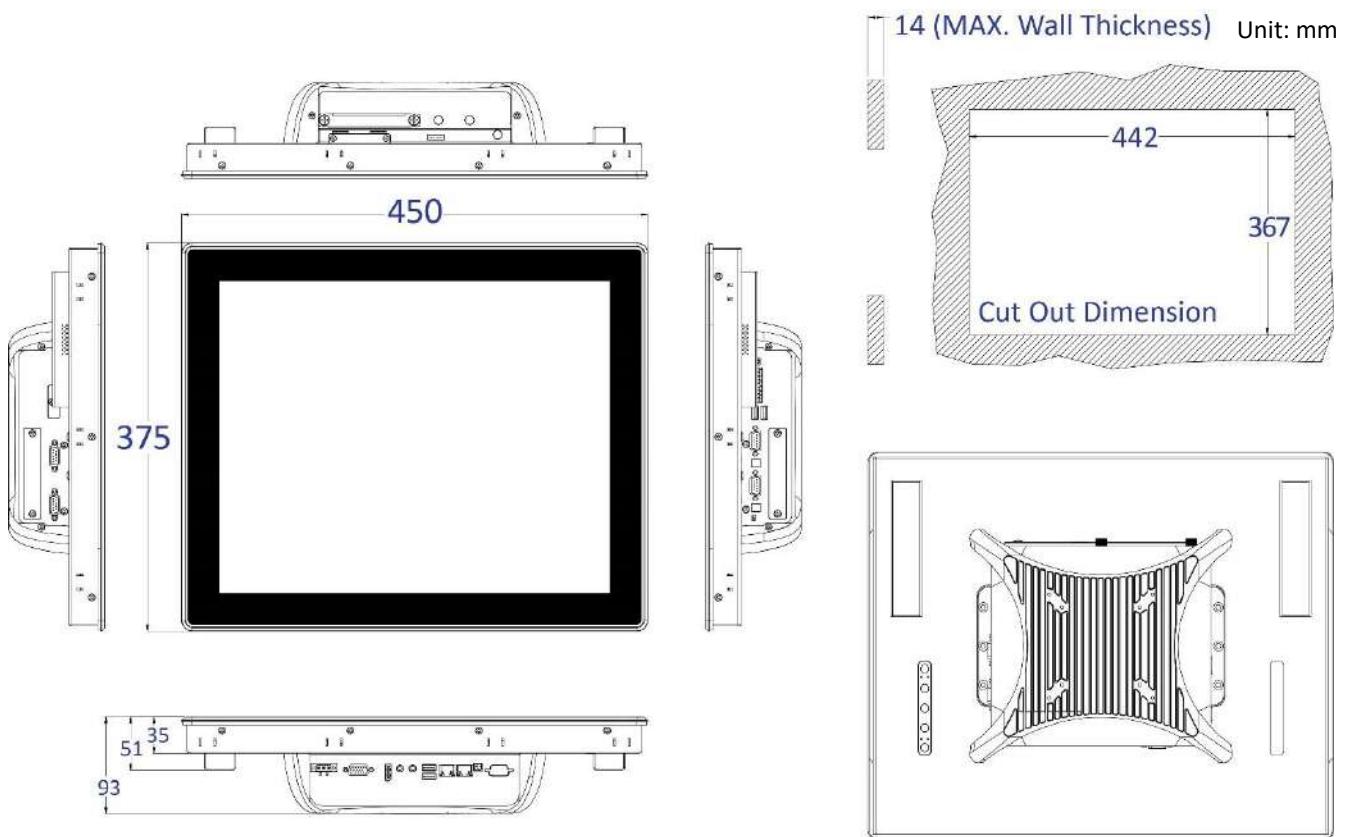

1.4.6 VIO-W221R(C)-PC100-J1900

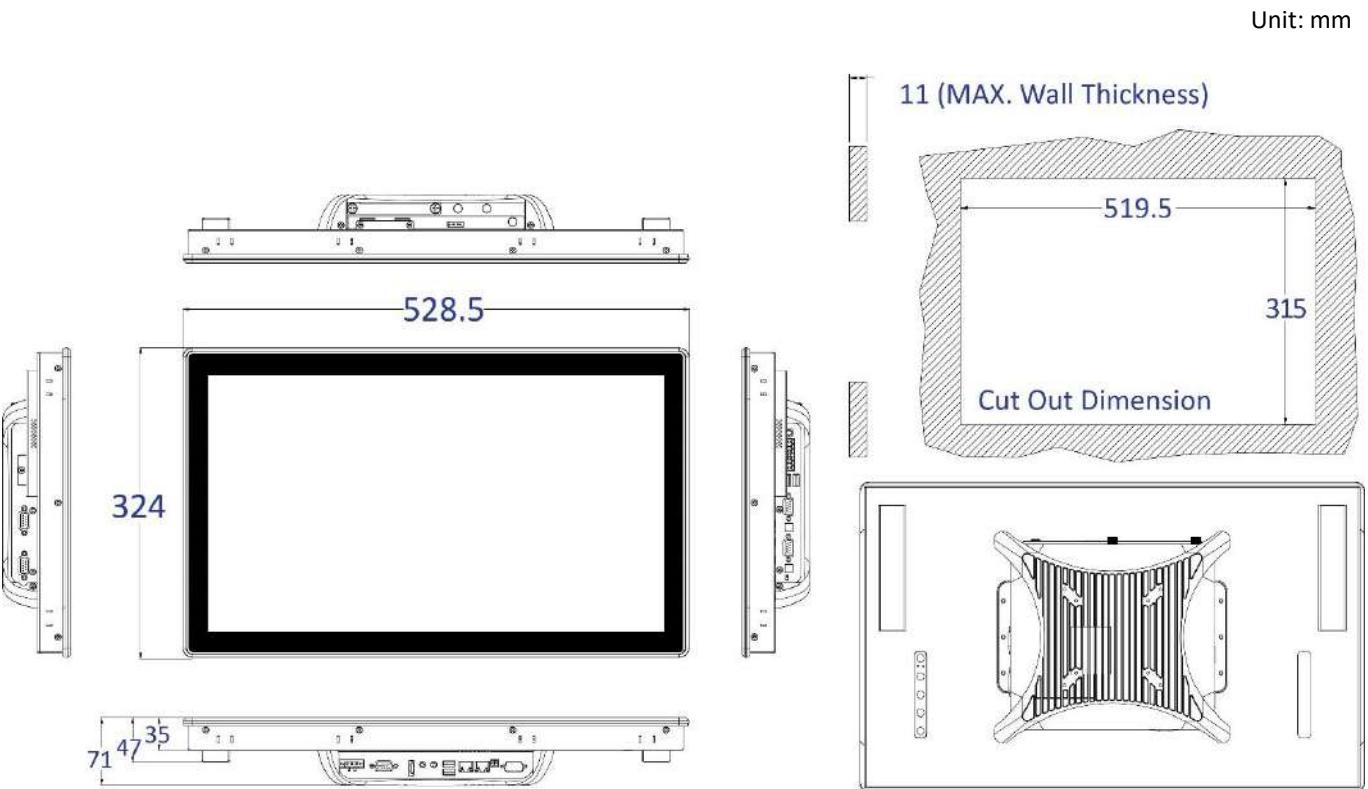


VIO-W221R(C)-PC100-J1900-1

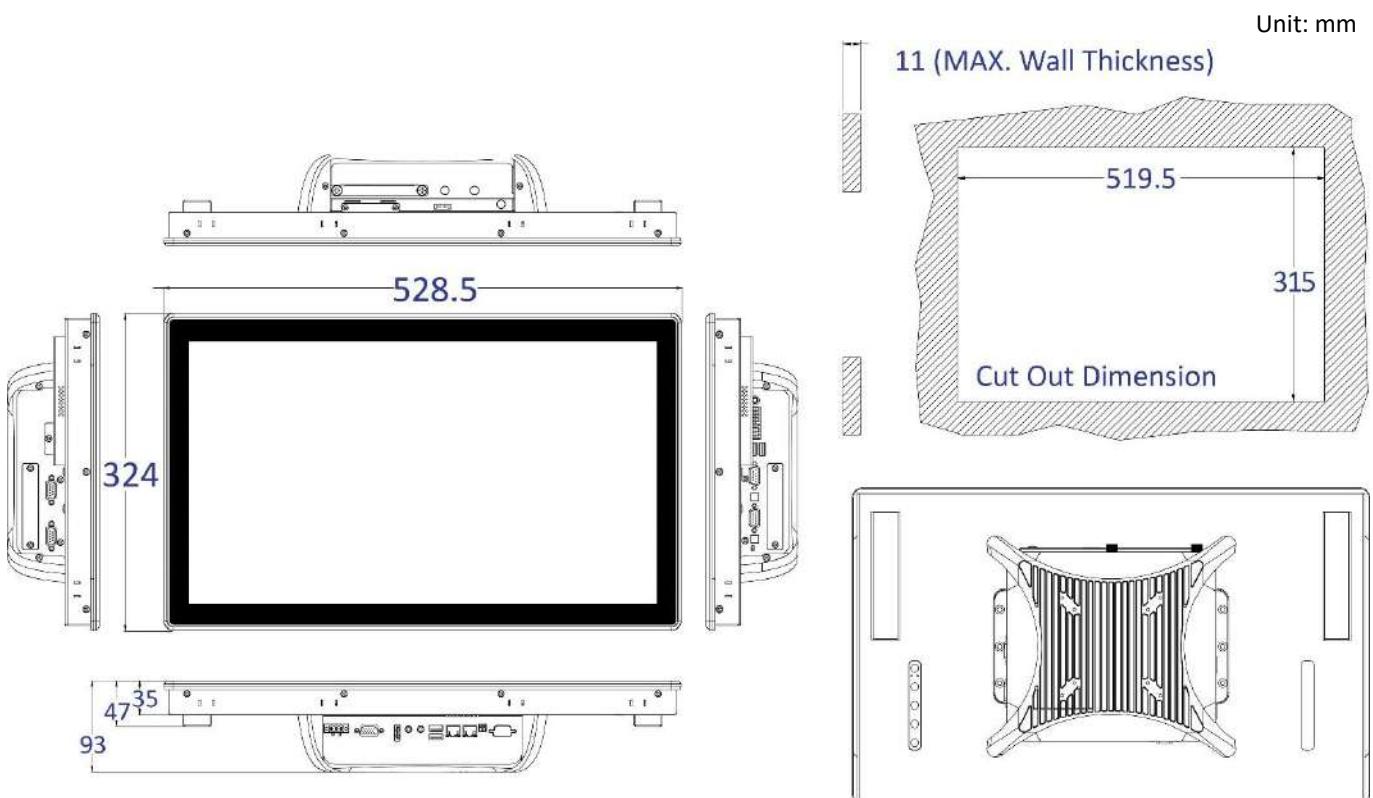


1.4.7 VIO-W224R(C)-PC100-J1900

Unit: mm

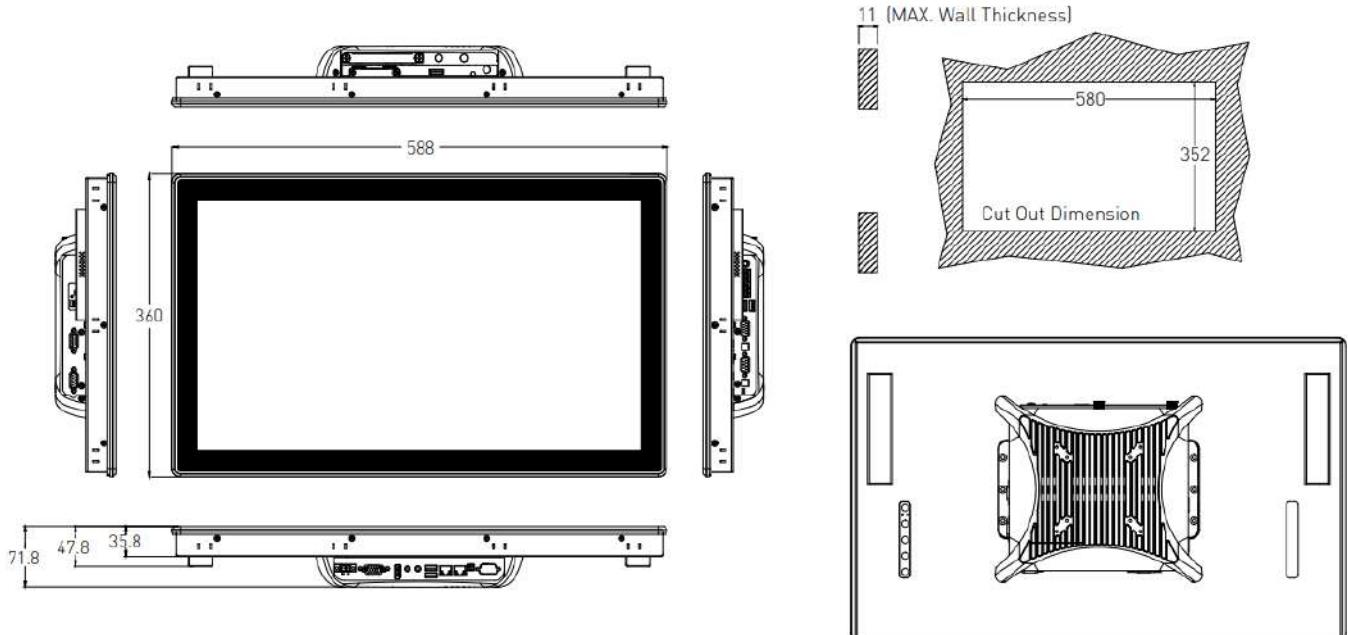

VIO-W224R(C)-PC100-J1900-1

Unit: mm

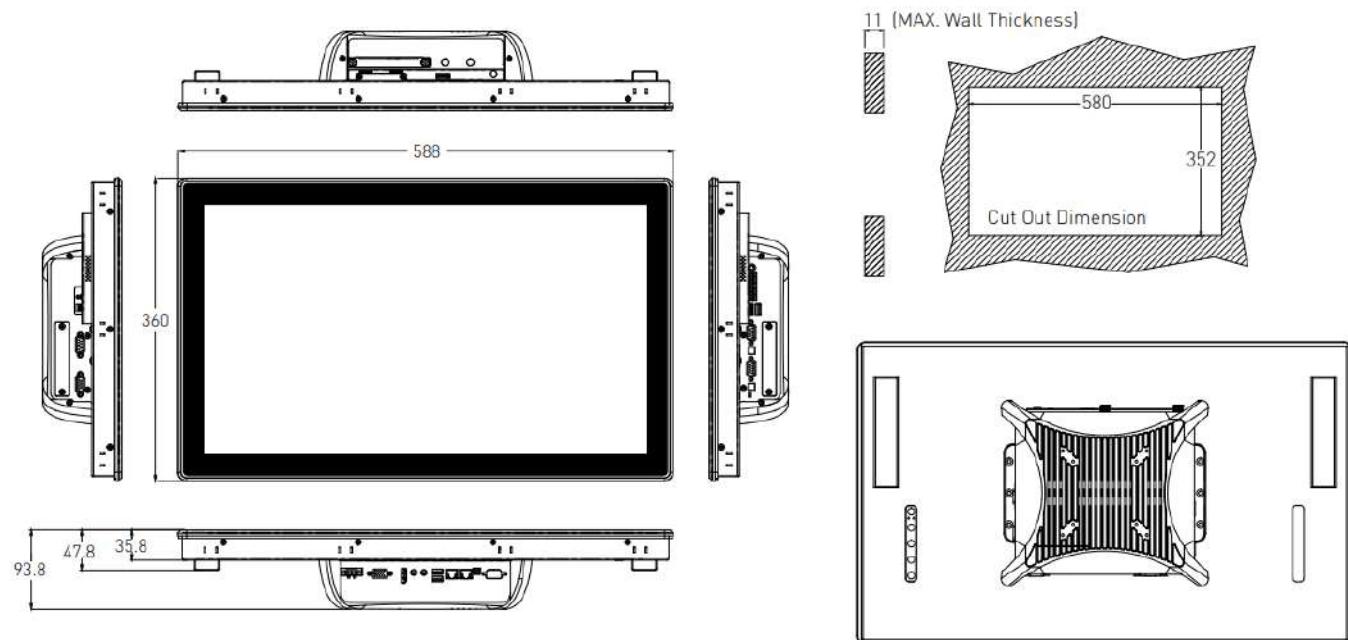


Chapter 2


Switches and Connectors

2.1 Switch and Connector Locations

2.1.1 Top View

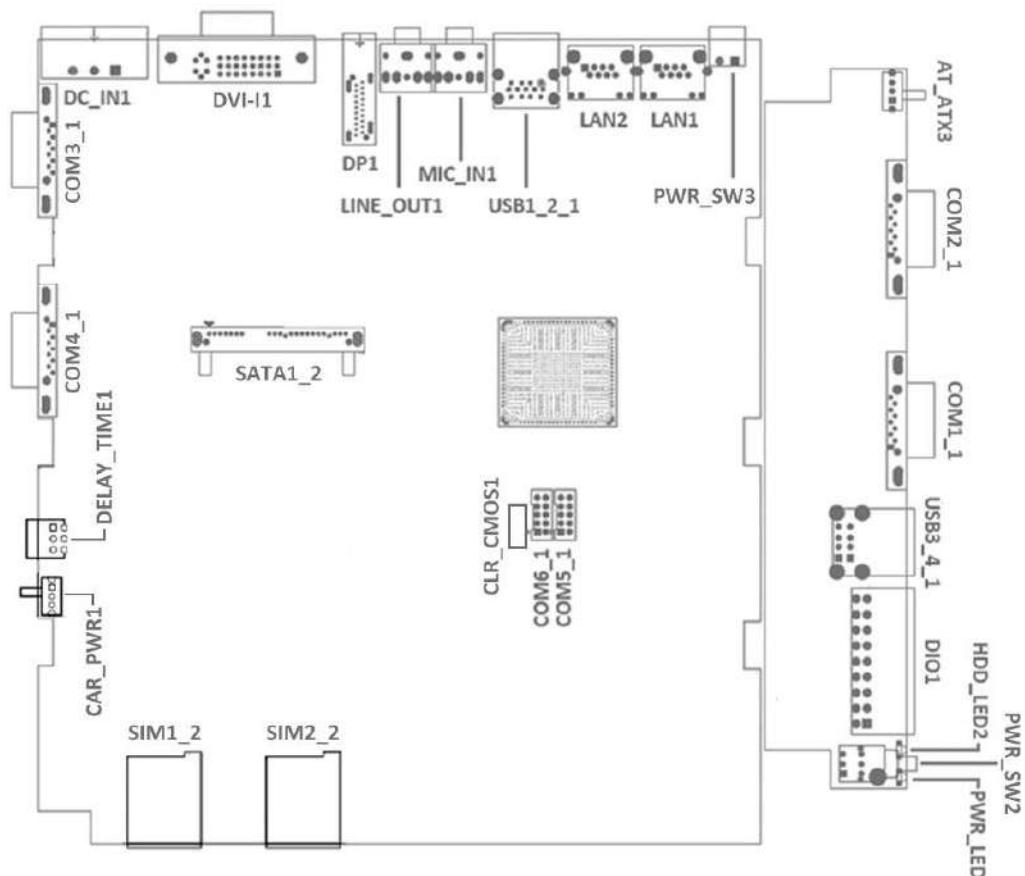

2.1.2 Bottom View

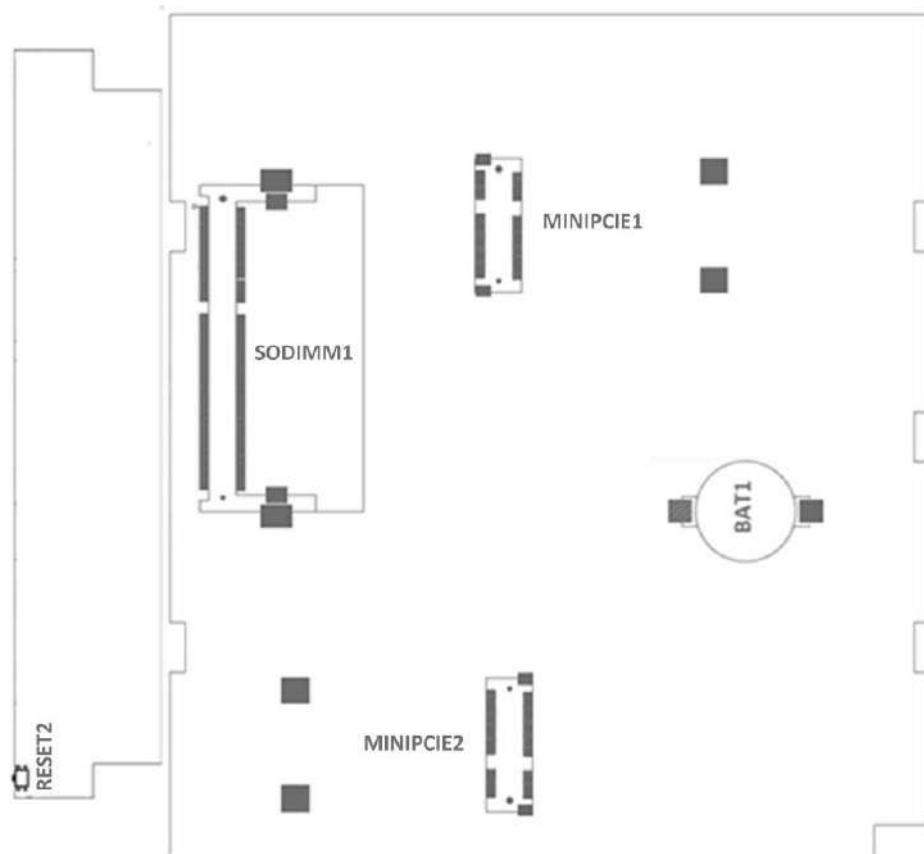

2.2 Connector / Switch Definition


List of Connector / Switch

| Connector Location | Definition |
|--------------------------------|--------------------------------------|
| AT_ATX3 | AT / ATX Power Mode Switch |
| CLR_CMOS1 | Clear BIOS Switch |
| CAR_PWR1 | PC / Car Mode Switch |
| DELAY_TIME2 | Car mode PC turn off delay time |
| CFAST1_1 | CFast Socket |
| PWR_SW2 | Power Switch |
| RESET2 | Reset Switch |
| USB1_2_1 | USB 3.0 & USB 2.0 Port |
| USB3_4_1 | USB 2.0 Port |
| SIM1_2, SIM2_2 | SIM Card Socket |
| COM1_1, COM2_1, COM3_1, COM4_1 | RS232 / RS422 / RS485 Connector |
| COM5_1, COM6_1 | RS232 / RS422 / RS485 Connector |
| LAN1, LAN2 | LAN Port |
| DC_IN1 | 3-pin DC 9~50V Power Input Connector |
| VGA1 | VGA Connector |
| DP1 | DisplayPort Connector |
| LINE_OUT1 | Line-out Jack |
| MIC_IN1 | Mic-in Jack |
| DIO1 | 8DI / 8DO Connector |
| PWR_SW3 | Remote Power Switch |
| MINIPCIE1 | Mini PCI-Express / mSATA Socket |
| MINIPCIE2 | Mini PCI-Express Socket |
| SATA1_2 | SATA with Power Connector |
| POWER1, POWER2 | Power Connector |
| PWR_LED1 | Power LED Status |
| HDD_LED1 | HDD Access LED Status |

2.3 Switches Definitions


AT_ATX3: AT / ATX Power Mode Switch

| Switch | Definition |
|-------------|----------------------------|
| 1-2 (Left) | ATX Power Mode (Default) |
| 2-3 (Right) | AT Power Mode |

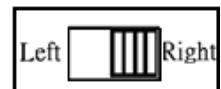


CLR_CMOS1: Clear BIOS Switch

| Switch | Definition |
|--------|-------------------------|
| Off | Normal Status (Default) |
| ON | Clear BIOS |

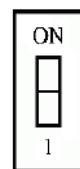


CAR_PWR1: PC / Car Mode Switch

| Switch | Definition |
|-------------|---------------------------|
| 1-2 (Left) | PC Power Mode (Default) |
| 2-3 (Right) | Power Ignition Mode |

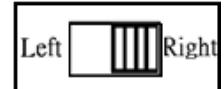

DELAY_TIME2: Power off delay time setup Switch

| Switch 1 / 2 / 3 | Definition |
|------------------|--|
| ON / ON / ON | 3 sec. (Default Shutdown Timer by O.S) |
| ON / ON / OFF | 1 min. |
| ON / OFF / ON | 5 min. |
| ON / OFF / OFF | 10 min. |
| OFF / ON / ON | 30 min. |
| OFF / ON / OFF | 1 hour |
| OFF / OFF / ON | 2 hour |

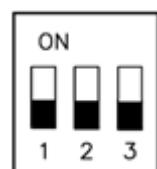

Step of Setting Power Ignition

Step 1:

To select power ignition by PC/CAR switch.

Step 2:

To configure the power off delay time, please check the Delay Time Setting Options in advance.

Step 3:

To connect the power and ignition power

Step 3

| Switch 1 / 2 / 3 | Power off delay time |
|------------------|----------------------|
| ON / ON / ON | 3 second |
| ON / ON / OFF | 1 minute |
| ON / OFF / ON | 5 minutes |
| ON / OFF / OFF | 10 minutes |
| OFF / ON / ON | 30 minutes |
| OFF / ON / OFF | 1 hour |
| OFF / OFF / ON | 2 hours |

Step 1

Pin 1-2 (Right): PC Mode

Pin 2-3 (Left): Power Ignition Mode



Step 3

To connect the battery power and ignition signal



Example: Delay Time Setting for 5 minutes

1. If delay time set as "5 minutes"




2. The system will shut down 5 minutes later after turning off the vehicle.



2.4 Connectors Definitions


CFAST1_1: CFast Socket

| Pin | Definition | Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|------|------------|
| S1 | GND | PC1 | NC | PC10 | NC |
| S2 | SATA_TXP1 | PC2 | GND | PC11 | NC |
| S3 | SATA_TXN1 | PC3 | NC | PC12 | NC |
| S4 | GND | PC4 | NC | PC13 | +3.3V |
| S5 | SATA_RXN1 | PC5 | NC | PC14 | +3.3V |
| S6 | SATA_RXP1 | PC6 | NC | PC15 | GND |
| S7 | GND | PC7 | GND | PC16 | GND |
| | | PC8 | NC | PC17 | NC |
| | | PC9 | NC | | |

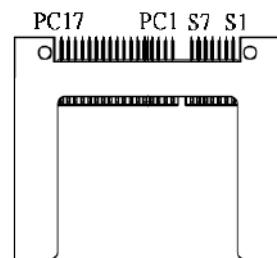

PWR_SW2: Power Button

| Pin | Definition | Pin | Definition |
|-----|--------------|-----|------------|
| 1 | NC | 4 | GND |
| 2 | Power Button | 5 | NC |
| 3 | NC | 6 | GND |

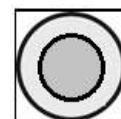


RESET2 : Reset Button

| Pin | Definition |
|-----|------------|
| 1 | RESET |
| 2 | GND |



USB1_2_1: USB3.0 & USB2.0 Connector, Type A


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | +5V | 10 | +5V |
| 2 | USB2_D0- | 11 | USB2_D1- |
| 3 | USB2_D0+ | 12 | USB2_D1+ |
| 4 | GND | 13 | GND |
| 5 | USB3_RX0- | | |
| 6 | USB3_RX0+ | | |
| 7 | GND | | |
| 8 | USB3_TX0- | | |
| 9 | USB3_TX0+ | | |

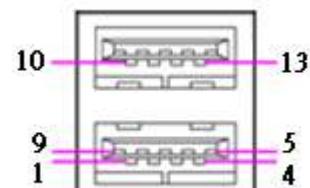

2.4 Connectors Definitions


USB3_4_1: USB2.0 Connector, Type A

| Pin | USB3_4_1 Definition |
|-----|---------------------|
| 1 | +5V |
| 2 | USB2_D2- |
| 3 | USB2_D2+ |
| 4 | GND |
| 5 | +5V |
| 6 | USB2_D3- |
| 7 | USB2_D3+ |
| 8 | GND |

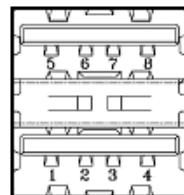

SIM1_2, SIM2_2 : SIM Card Socket


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| C1 | UIM_PWR | C6 | UIM_VPP |
| C2 | UIM_RESET | C7 | UIM_DATA |
| C3 | UIM_CLK | CD | NC |
| C5 | GND | COM | GND |

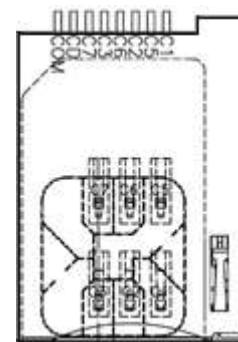

COM1_1: RS232 / RS422 / RS485 Connector


Connector Type: 9-pin D-Sub

| Pin | RS232 Definition | RS422 / 485 Full Duplex Definition | RS485 Half Duplex Definition |
|-----|------------------|------------------------------------|------------------------------|
| 1 | DCD1 | TX1- | DATA1- |
| 2 | RXD1 | TX1+ | DATA1+ |
| 3 | TXD1 | RX1+ | |
| 4 | DTR1 | RX1- | |
| 5 | GND | GND | GND |
| 6 | DSR1 | | |
| 7 | RTS1 | | |
| 8 | CTS1 | | |
| 9 | RI1 | | |

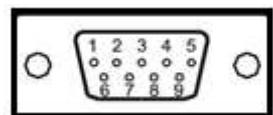**COM2_1: RS232 / RS422 / RS485 Connector**

Connector Type: 9-pin D-Sub


| Pin | RS232 Definition | RS422 / 485 Full Duplex Definition | RS485 Half Duplex Definition |
|-----|------------------|------------------------------------|------------------------------|
| 1 | DCD2 | TX2- | DATA2- |
| 2 | RXD2 | TX2+ | DATA2+ |
| 3 | TXD2 | RX2+ | |
| 4 | DTR2 | RX2- | |
| 5 | GND | GND | GND |
| 6 | DSR2 | | |
| 7 | RTS2 | | |
| 8 | CTS2 | | |
| 9 | RI2 | | |

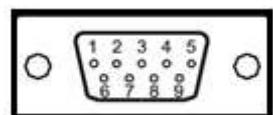

COM3_1 : RS232 / RS422 / RS485 Connector


Connector Type: 2X5 10-pin box header, 2.54mm pitch

| COM3_1 | | | |
|--------|------------------|------------------------------------|------------------------------|
| Pin | RS232 Definition | RS422 / 485 Full Duplex Definition | RS485 Half Duplex Definition |
| 1 | DCD3 | TX3- | DATA3- |
| 2 | RXD3 | TX3+ | DATA3+ |
| 3 | TXD3 | RX3+ | |
| 4 | DTR3 | RX3- | |
| 5 | GND | GND | GND |
| 6 | DSR3 | | |
| 7 | RTS3 | | |
| 8 | CTS3 | | |
| 9 | RI3 | | |

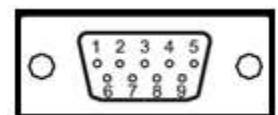**COM4_1 : RS232 / RS422 / RS485 Connector**

Connector Type: 2X5 10-pin box header, 2.54mm pitch


| COM4_1 | | | |
|--------|------------------|------------------------------------|------------------------------|
| Pin | RS232 Definition | RS422 / 485 Full Duplex Definition | RS485 Half Duplex Definition |
| 1 | DCD4 | TX4- | DATA4- |
| 2 | RXD4 | TX4+ | DATA4+ |
| 3 | TXD4 | RX4+ | |
| 4 | DTR4 | RX4- | |
| 5 | GND | GND | GND |
| 6 | DSR4 | | |
| 7 | RTS4 | | |
| 8 | CTS4 | | |
| 9 | RI4 | | |

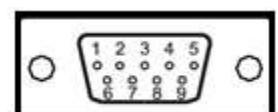

COM5_1 : RS232 / RS422 / RS485 Connector


Connector Type: 2X5 10-pin box header, 2.54mm pitch

| COM3_1 | | | |
|--------|------------------|------------------------------------|------------------------------|
| Pin | RS232 Definition | RS422 / 485 Full Duplex Definition | RS485 Half Duplex Definition |
| 1 | DCD5 | TX5- | DATA5- |
| 2 | RXD5 | TX5+ | DATA5+ |
| 3 | TXD5 | RX5+ | |
| 4 | DTR5 | RX5- | |
| 5 | GND | GND | GND |
| 6 | DSR5 | | |
| 7 | RTS5 | | |
| 8 | CTS5 | | |
| 9 | RI5 | | |

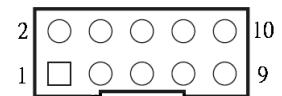**COM6_1 : RS232 / RS422 / RS485 Connector**

Connector Type: 2X5 10-pin box header, 2.54mm pitch

| COM4_1 | | | |
|--------|------------------|------------------------------------|------------------------------|
| Pin | RS232 Definition | RS422 / 485 Full Duplex Definition | RS485 Half Duplex Definition |
| 1 | DCD6 | TX6- | DATA6- |
| 2 | RxD6 | TX6+ | DATA6+ |
| 3 | TxD6 | RX6+ | |
| 4 | DTR6 | RX6- | |
| 5 | GND | GND | GND |
| 6 | DSR6 | | |
| 7 | RTS6 | | |
| 8 | CTS6 | | |
| 9 | RI6 | | |

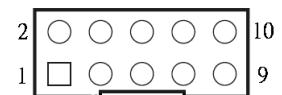


LAN1, LAN2: RJ45 with LEDs Port

Connector Type: RJ45 Connector

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | LAN1_MDIOP | 5 | LAN1_MDI2N |
| 2 | LAN1_MDI0N | 6 | LAN1_MDI1N |
| 3 | LAN1_MDI1P | 7 | LAN1_MDI3P |
| 4 | LAN1_MDI2P | 8 | LAN1_MDI3N |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | LAN2_MDIOP | 5 | LAN2_MDI2N |
| 2 | LAN2_MDI0N | 6 | LAN2_MDI1N |
| 3 | LAN2_MDI1P | 7 | LAN2_MDI3P |
| 4 | LAN2_MDI2P | 8 | LAN2_MDI3N |

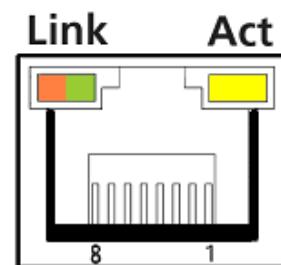


| Link LED Status | Definition | Act LED Status | Definition |
|-----------------|----------------------|-----------------|---------------|
| Steady Orange | 1Gbps Network Link | Blinking Yellow | Data Activity |
| Steady Green | 100Mbps Network Link | Off | No Activity |
| Off | 10Mbps Network Link | | |


DC_IN1: DC Power Input Connector (+9~50V)

Connector Type: Terminal Block 1X3 3-pin, 5.0mm pitch

| Pin | Definition |
|-----|----------------|
| 1 | +9~50VIN |
| 2 | Power Ignition |
| 3 | GND |

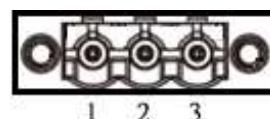**VGA1: VGA Connector**

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | RED | 9 | +5V |
| 2 | GREEN | 10 | GND |
| 3 | BLUE | 11 | NC |
| 4 | NC | 12 | DDC_SDA |
| 5 | GND | 13 | H SYNC |
| 6 | RED_GND | 14 | V SYNC |
| 7 | GREEN_GND | 15 | DDC_SCL |
| 8 | BLUE_GND | | |

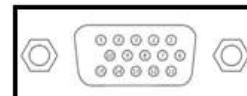

DP1: DisplayPort Connector

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | DP_LANE0_P | 11 | GND |
| 2 | GND | 12 | DP_LANE3_N |
| 3 | DP_LANE0_N | 13 | GND |
| 4 | DP_LANE1_P | 14 | GND |
| 5 | GND | 15 | DP_AUX_P |
| 6 | DP_LANE1_N | 16 | GND |
| 7 | DP_LANE2_P | 17 | DP_AUX_N |
| 8 | GND | 18 | DP_HPD |
| 9 | DP_LANE2_N | 19 | GND |
| 10 | DP_LANE3_P | 20 | DP_PWR |

**LINE_OUT1 : Line-out Jack (Green)**

Connector Type: 5-pin Phone Jack

| Pin | Definition |
|-----|------------|
| 1 | GND |
| 2 | OUT_R |
| 3 | NC |
| 4 | GND |
| 5 | OUT_L |

**MIC_IN1: Microphone Jack (Pink)**

Connector Type: 5-pin Phone Jack




| Pin | Definition |
|-----|------------|
| 1 | GND |
| 2 | MIC_R |
| 3 | NC |
| 4 | GND |
| 5 | MIC_L |





DIO1: Digital Input / Output Connector

Connector Type: Terminal Block 2X9 18-pin, 3.5mm pitch

| Pin | Definition | Pin | Definition |
|-----|-------------------|-----|--------------|
| 1 | DI1 | 2 | DO1 |
| 3 | DI2 | 4 | DO2 |
| 5 | DI3 | 6 | DO3 |
| 7 | DI4 | 8 | DO4 |
| 9 | DI5 | 10 | DO5 |
| 11 | DI6 | 12 | DO6 |
| 13 | DI7 | 14 | DO7 |
| 15 | DI8 | 16 | DO8 |
| 17 | External DC INPUT | 18 | External GND |

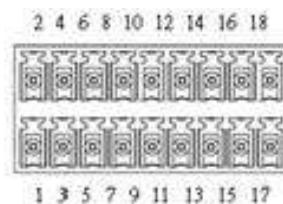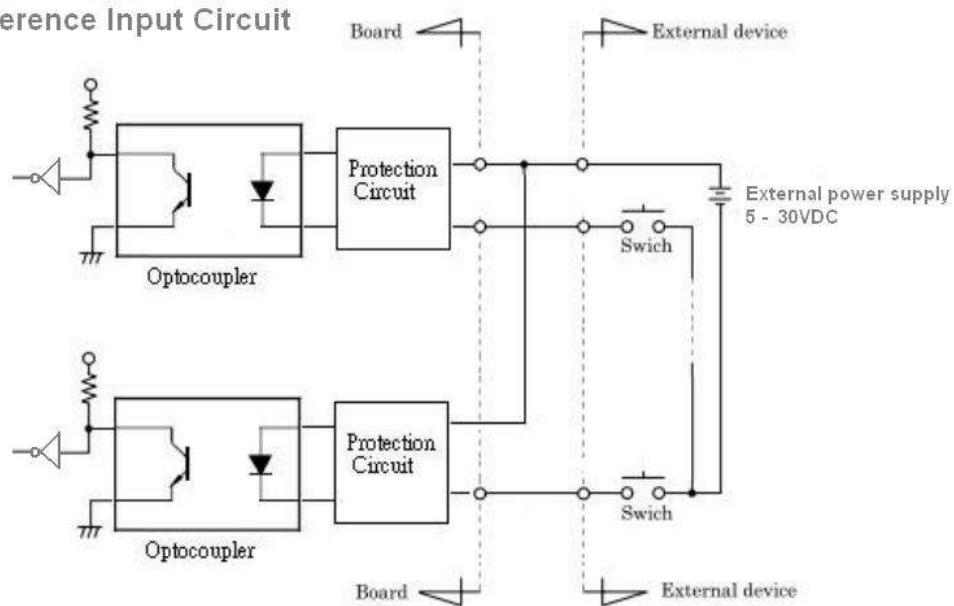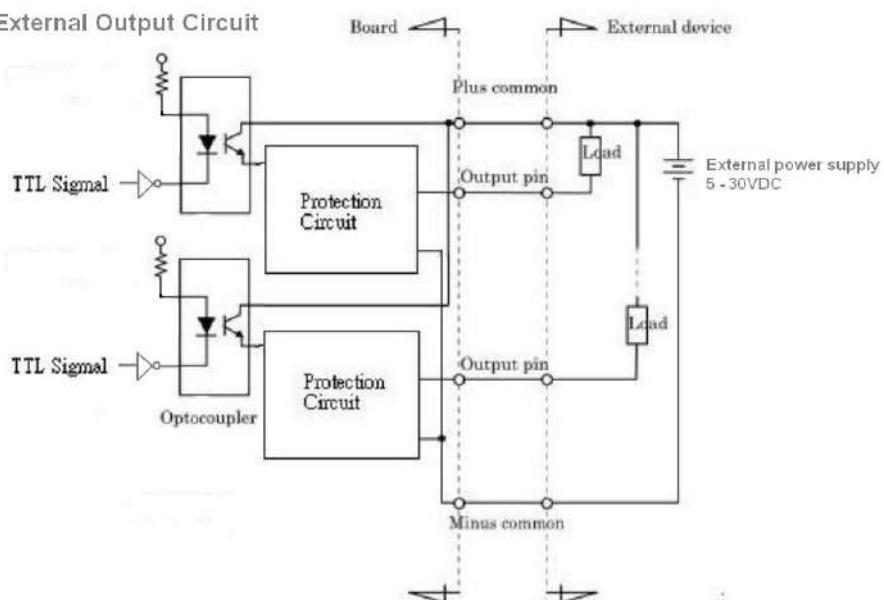**Reference Input Circuit****External Output Circuit**

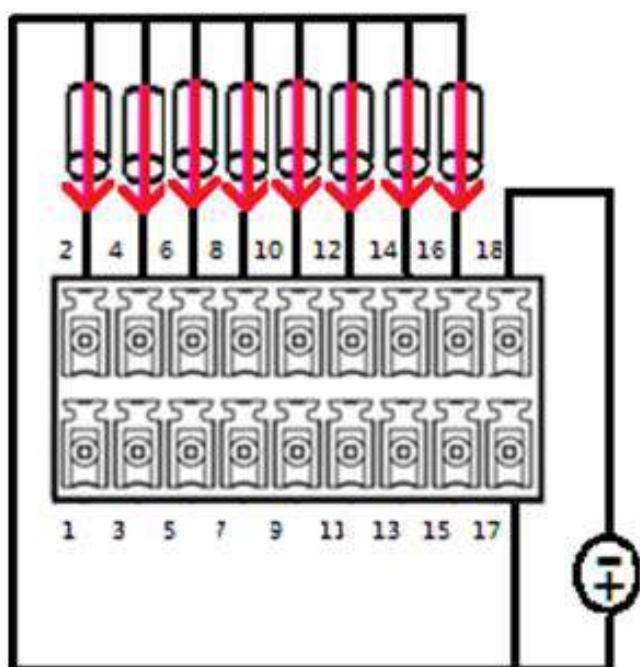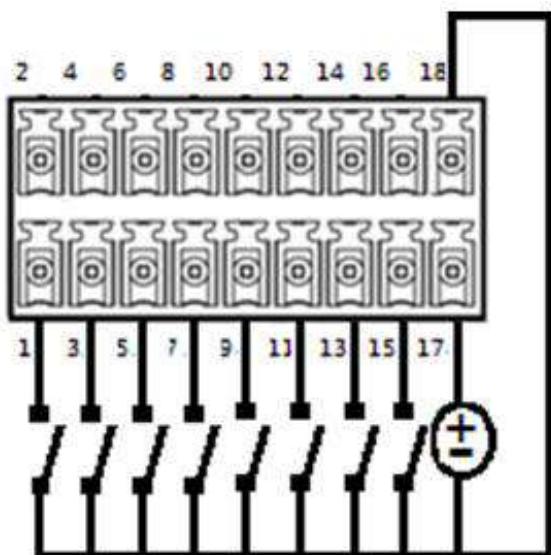

PWR_SW3 : Remote Power Switch


Connector Type: Terminal Block 1X2 2-pin, 3.5mm pitch

| Pin | Definition |
|-----|--------------|
| 1 | Power Button |
| 2 | GND |




MINIPCIE1: Mini PCI-Express / mSATA Socket

| Pin | Definition | Pin | Definition | Pin | Definition |
|------------|-------------------|------------|--------------------------|------------|-------------------|
| 1 | WAKE# | 19 | NC | 37 | GND |
| 2 | +3.3V | 20 | +3.3V | 38 | USB_D4+ |
| 3 | NC | 21 | GND | 39 | +3.3V |
| 4 | GND | 22 | PCIE_RST# | 40 | GND |
| 5 | NC | 23 | PCIE_RXN3 (SATA_RXN1) | 41 | +3.3V |
| 6 | +1.5V | 24 | +3.3V | 42 | NC |
| 7 | CLKREQ3# | 25 | PCIE_RXP3 (SATA_RXP1) | 43 | GND |
| 8 | USIM1_VCC | 26 | GND | 44 | NC |
| 9 | GND | 27 | GND | 45 | NC |
| 10 | USIM1_DATA | 28 | +1.5V | 46 | NC |
| 11 | PCIE_CLKN3 | 29 | GND | 47 | NC |
| 12 | USIM1_CLK | 30 | SMB_CLK | 48 | +1.5V |
| 13 | PCIE_CLKP3 | 31 | PCIE_TXN3 (SATA_TXN1) | 49 | NC |
| 14 | USIM1_RST | 32 | SMB_DATA | 50 | GND |
| 15 | GND | 33 | PCIE_TXP3 (SATA_TXP1) | 51 | NC |
| 16 | USIM1_VPP | 34 | GND | 52 | +3.3V |
| 17 | NC | 35 | GND | | |
| 18 | GND | 36 | USB_D4- | | |

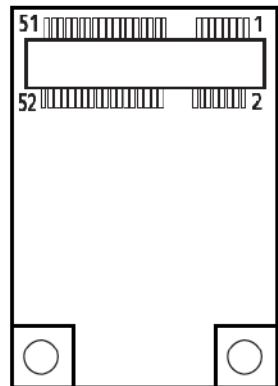
**MINIPCIE2: Mini PCI-Express**

| Pin | Definition | Pin | Definition | Pin | Definition |
|------------|-------------------|------------|-------------------|------------|-------------------|
| 1 | WAKE# | 19 | NC | 37 | GND |
| 2 | +3.3V | 20 | +3.3V | 38 | USB_D6+ |
| 3 | NC | 21 | GND | 39 | +3.3V |
| 4 | GND | 22 | MINIPCIE_RST# | 40 | GND |
| 5 | NC | 23 | PCIE_RXN4 | 41 | +3.3V |
| 6 | +1.5V | 24 | +3.3V | 42 | NC |
| 7 | CLKREQ4# | 25 | PCIE_RXP4 | 43 | GND |
| 8 | USIM2_VCC | 26 | GND | 44 | NC |
| 9 | GND | 27 | GND | 45 | NC |
| 10 | USIM2_DATA | 28 | +1.5V | 46 | NC |
| 11 | PCIE_CLKN4 | 29 | GND | 47 | NC |
| 12 | USIM2_CLK | 30 | SMB_CLK | 48 | +1.5V |
| 13 | PCIE_CLKP4 | 31 | PCIE_TXN4 | 49 | NC |
| 14 | USIM2_RST | 32 | SMB_DATA | 50 | GND |
| 15 | GND | 33 | PCIE_TXP4 | 51 | NC |
| 16 | USIM2_VPP | 34 | GND | 52 | +3.3V |
| 17 | NC | 35 | GND | | |
| 18 | GND | 36 | USB_D6- | | |

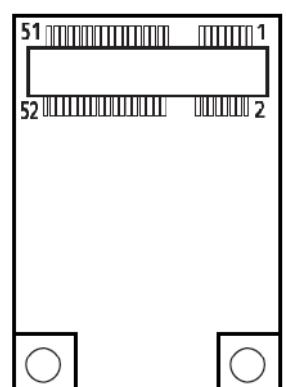

SATA1_2: SATA with Power Connector

| Pin | SATA1_1 Definition | Pin | SATA1_1 Definition | Pin | SATA2 Definition | Pin | SATA2 Definition |
|-----|--------------------|-----|--------------------|-----|------------------|-----|------------------|
| 1 | GND | 12 | GND | 1 | GND | 12 | GND |
| 2 | SATA_TXP0 | 13 | GND | 2 | SATA_TXP1 | 13 | GND |
| 3 | SATA_TXN0 | 14 | +5V | 3 | SATA_TXN1 | 14 | +5V |
| 4 | GND | 15 | +5V | 4 | GND | 15 | +5V |
| 5 | SATA_RXN0 | 16 | +5V | 5 | SATA_RXN1 | 16 | +5V |
| 6 | SATA_RXP0 | 17 | GND | 6 | SATA_RXP1 | 17 | GND |
| 7 | GND | 18 | GND | 7 | GND | 18 | GND |
| 8 | +3.3V | 19 | GND | 8 | +3.3V | 19 | GND |
| 9 | +3.3V | 20 | +12V | 9 | +3.3V | 20 | +12V |
| 10 | +3.3V | 21 | +12V | 10 | +3.3V | 21 | +12V |
| 11 | GND | 22 | +12V | 11 | GND | 22 | +12V |

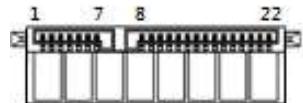**POWER1, POWER2: Power Connector**

Connector Type: 1X4-pin Wafer, 2.0mm pitch

| Pin | Definition |
|-----|------------|
| 1 | +5V |
| 2 | GND |
| 3 | GND |
| 4 | +12V |

**PWR_LED1: Power LED Status**

| Pin | Definition |
|-----|------------|
| 1 | POWER LED+ |
| 2 | POWER LED- |

**HDD_LED1: HDD Access LED Status**


| Pin | Definition |
|-----|------------|
| 1 | HDD LED+ |
| 2 | HDD LED- |



Chapter 3

Front Panel Controls

3.1 Users Controls

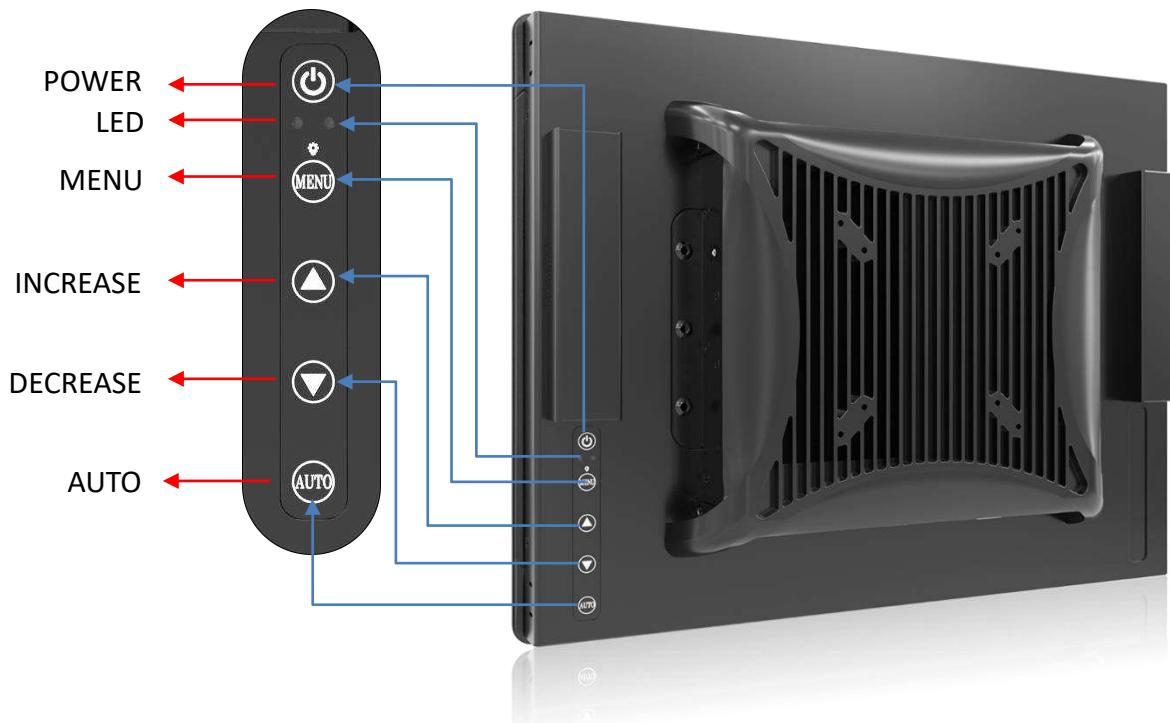

3.1.1 Power Button

Turns the monitor on or off.

3.1.2 LED

1. Blue indicates power on.
2. Yellow indicates HDD access status.

3.1.3 MENU / Enter Button

Press to view the OSD menu. Press it again to enter a selection in the OSD menu.

3.1.4 Increase Button

1. Activates the Volume control menu, and increases volume (with audio option).
2. Scrolls the OSD menu upward.
3. Increases the value of a selected function.


3.1.5 Decrease Button

1. Activates the Volume control menu, and decreases volume (with audio option).
2. Scrolls the OSD menu downward.
3. Decreases the value of a selected function.

3.1.6 AUTO / Exit Button

1. When the OSD menu is active, press this button to exit the OSD menu.
2. When the OSD menu is inactive, press this button for two seconds to activate the Auto Adjustment function and the monitor will automatically optimize the display position, focus, and clock of your display.

3.2 OSD Operation

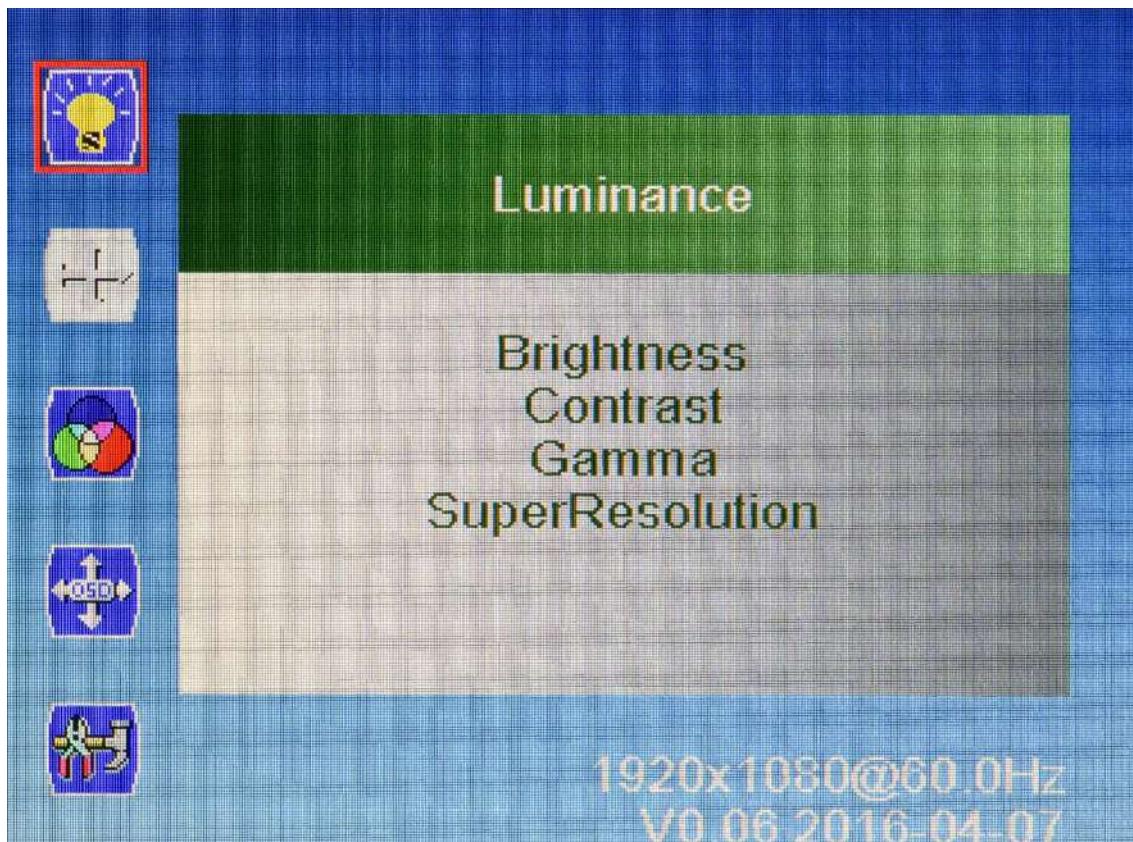

3.2.1 Luminance



■ Brightness

Adjust the luminance level of the screen.

■ Contrast

Adjusts the contrast level of the screen.

■ Gamma

This item allows you to on or off the Gamma function.

■ SuperResolution

This setting allows you to select options for the SuperResolution. Select <Off>, <Weak>, <Median> or .

3.2.2 Picture



■ Phase

Adjust the monitor internal signal phase.

■ Clock

Adjust the monitor internal sampling clock rate.

■ H. Position

Adjusts the position of the screen image left and right.

■ V. Position

Adjusts the position of the screen image up and down.

3.2.3 Color



■ Color Temperature

6500K: Select the setting of screen color to be reddish white.

7500K: Select the setting of screen color to be bluish white.

9300K: Select the setting of screen color to be bluish white.

sRGB: Set the screen color to fit the sRGB standard color specification.

User Define: Individual adjustments for red (R), green (G), blue (B).

3.2.4 OSD Settings



■ Horizontal

Changes the viewing position of the OSD menu to the left or right area of the screen.

■ Vertical

Changes the viewing position of the OSD menu to the top or bottom area of the screen.

■ Transparency

Adjust to view the background information through the OSD.

■ OSD Time Out

Sets the time duration in seconds that the OSD is visible after the last button is pressed.

3.2.5 Setup



■ Language

Selects the language in which the OSD menu is displayed. The factory default is English.

■ Mute

Allows the user to turn the Mute On or Off.

■ Input

When press Input Select change Input signal to D-SUB, DVI or DP.

■ Reset

Reset monitor parameters back to factory preset values.

Chapter 4

System Setup

4.1 Set torque force to 3.5 kgf-cm to execute all the screwing and unscrewing




WARNING

In order to prevent electric shock or system damage, before removing the chassis cover, must turn off power and disconnect the unit from power source.

4.2 Installing SODIMM

1. Remove SODIMM cover in the below circled area for installing memory module.

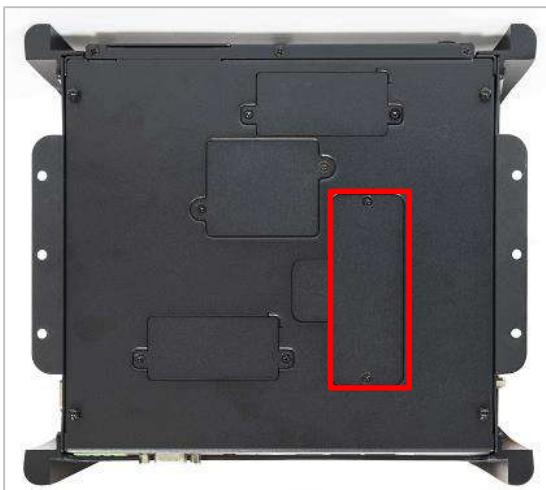

2. Insert memory module from 45 degree direction.




3. Press the memory module vertically downward until you hear the “click” sound. Make sure the memory module is firmly in place.



4.3 Installing mini PCIe card / mSATA

- Two mini PCIe slots are available for PC100 series. MiniPCIE1 supports mSATA.

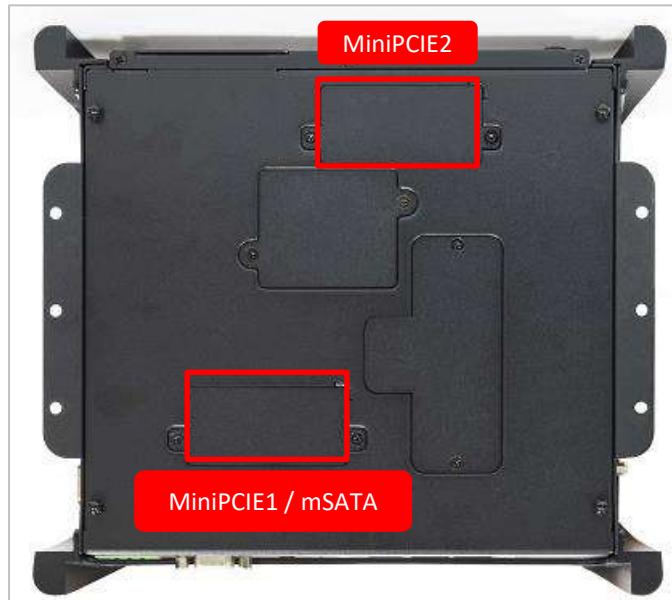

- Insert mini PCIe card or mSATA module from 45 degree direction.



- Press the mini PCIe card or mSATA module down and lock it with two screws (M2x3.7L).



4.4 Installing HDD on removable STAT HDD bay


1. One removable SATA HDD bays is available for PC100 Series



2. Unscrew the two sun screws circled below to take out the removable SATA HDD bay.



3. Lock the 2.5" HDD with HDD bracket using four screws (M3x4L).

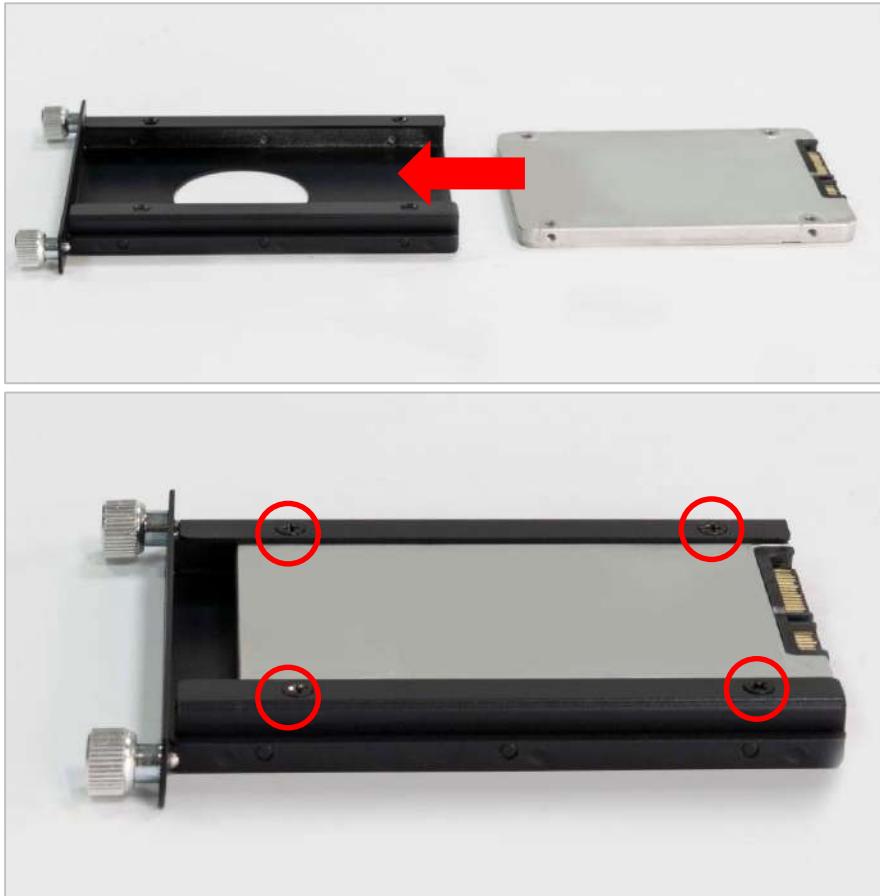

4. Slide the HDD bracket back and then fasten the sun screws.



4.5 Installing CFast card

1. One CFast socket is available for PC100 series. Unscrew two screws to remove the bracket.



2. Insert CFast card into the socket until you hear the “click” sound.



3. The socket is push-push type. Push the installed CFast card again to remove it.



4.6 Installing SIM card

1. For PC100 Series, two SIM card slots are available on system chassis between removable HDD bay and CFast slot.




2. Press the SIM card in until you hear the “click” sound.



3. Please note that the installation of SIM 1 and SIM 2 has to match the installation of mini PCIe slots.

| SIM Card Socket Number | Matching Mini PCIe Slot |
|------------------------|-------------------------|
| SIM 1 | MiniPCIE1 / mSATA |
| SIM 2 | MiniPCIE2 |

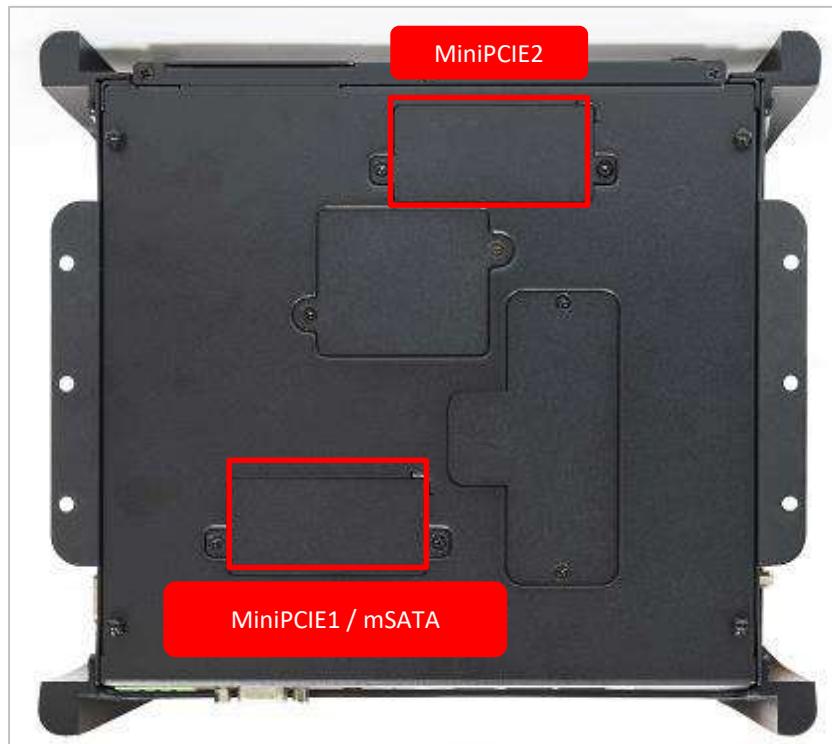

4. To uninstall SIM card, simply press the installed SIM card and then the card will be pushed out

4.7 Removing chassis bottom cover

1. Unscrew the 6 screws (M3x5L) below.



2. Remove the top cover of PC module.



4.8 Installing antenna

1. Three antenna holes are available for PC100 series.



2. Remove antenna hole cover on the system panel.



3. Have antenna jack penetrate through the hole.



4. Put on washer and fasten the nut with antenna jack.



5. Attach the RF connector at the cable-end onto the communication module.



6. Assemble the antenna and antenna jack together.



4.9 Assemble chassis top cover

1. Ensure thermal pad is in place on the CPU thermal block.



2. Close the chassis top cover following the below direction and make sure the aluminum part on the top cover is touching the thermal pad on CPU thermal block.



- Fasten the six screws (M3X5L) to lock the system body with top cover.



4.10 Connecting PC module with VIO display module

1. Hold the PC module with its connector facing towards the connector on the back of VIO display module.



2. Press the PC module downward to ensure two modules are firmly connected.



3. Lock the below 6 screws (M4X5L) to finish assembly.



Chapter 5

BIOS Setup

5.1 BIOS Introduction

The system BIOS software is stored on EEPROM. The BIOS provides an interface to modify the configuration. When the battery is removed, all the parameters will be reset.

BIOS Setup

Power on the embedded system and by pressing or <F2> immediately allows you to enter the setup screens. If the message disappears before you respond and you still wish to enter the Setup, restart the system by turning it OFF and ON or pressing the RESET button.

You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

| Control Keys | |
|---------------|--|
| <↔> <→> | Select Screen |
| <↑> <↓> | Select Item |
| <Enter> | Select |
| <Page Up/+> | Increases the numeric value or makes changes |
| <Page Down/-> | Decreases the numeric value or makes changes |
| <F1> | General Help |
| <F2> | Previous Value |
| <F3> | Load Optimized Defaults |
| <F4> | Save Configuration and Exit |
| <Tab> | Select Setup Fields |
| <Esc> | Exit BIOS Setup |

Main Setup

The main menu lists the setup functions you can make changes to. You can use the arrow keys (↑↓) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

5.2 Main Setup

Press to enter BIOS CMOS Setup Utility. The Main setup screen is showed as following when the setup utility is entered. System Date/Time is set up in the Main Menu.




5.2.1 System Date

Set the system date. Please use <Tab> to switch between data elements.


5.2.2 System Time

Set the system time. Please use <Tab> to switch between time elements.

5.3 Advanced Setup

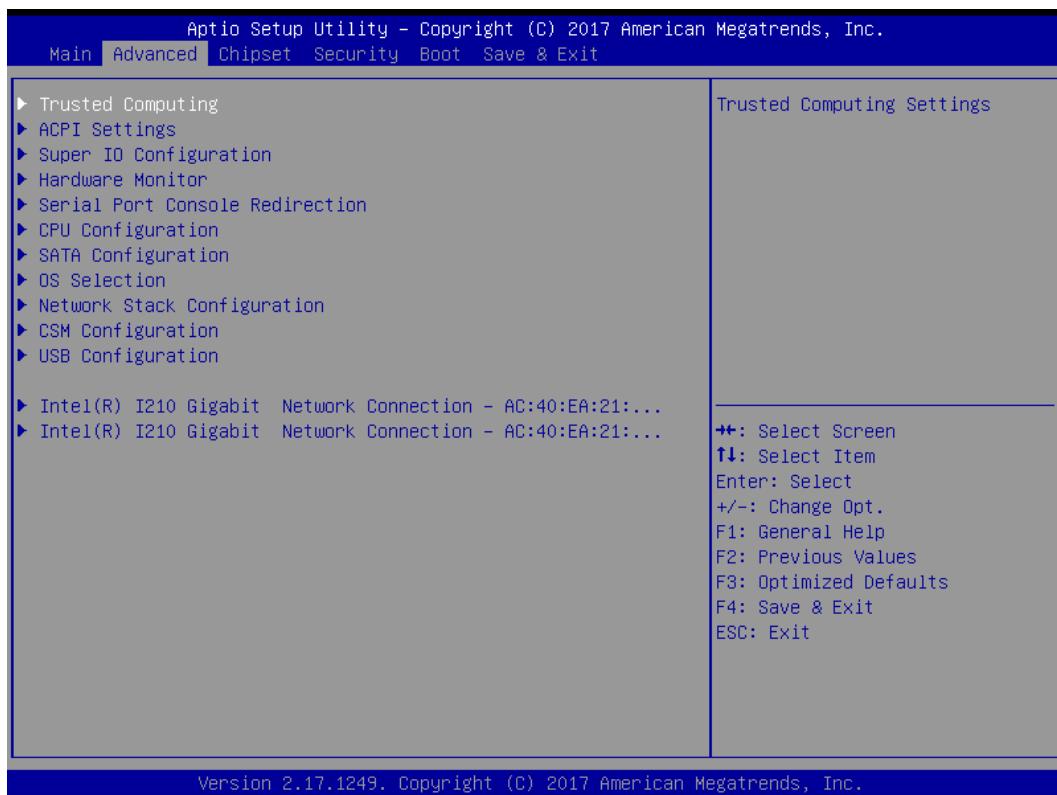


5.3.1 Trusted Computing (Optional)

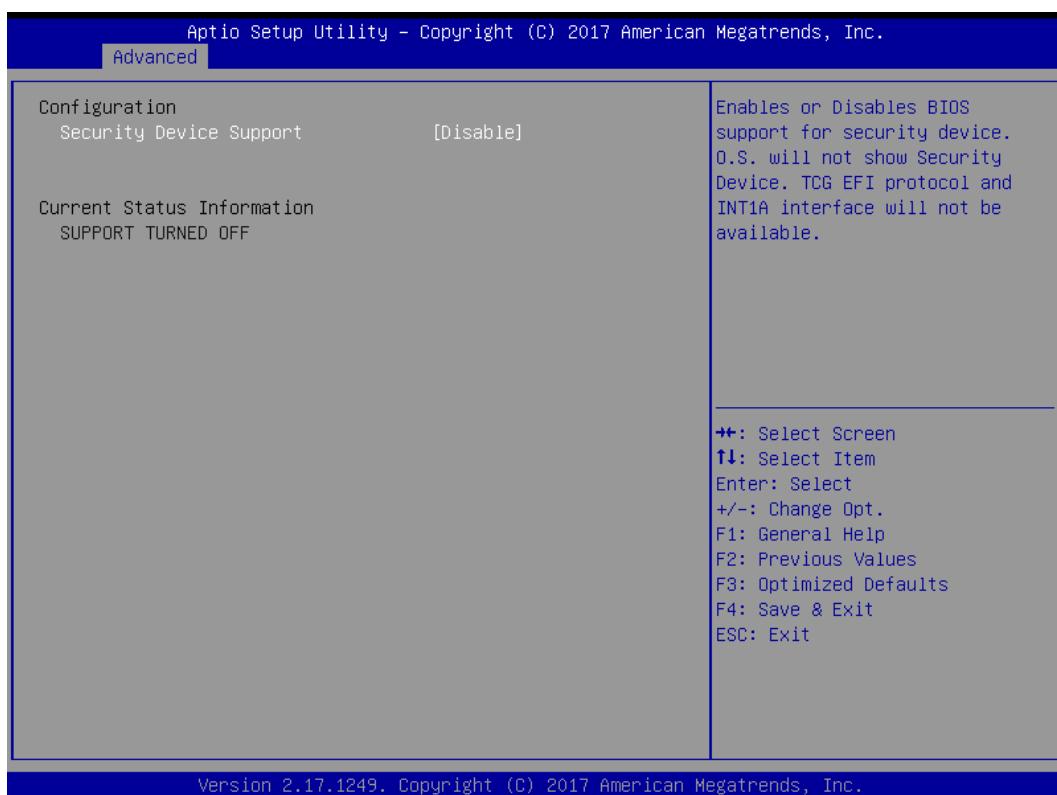

■ Security Device Support

Enable or disable TPM function

5.3.2 ACPI Settings

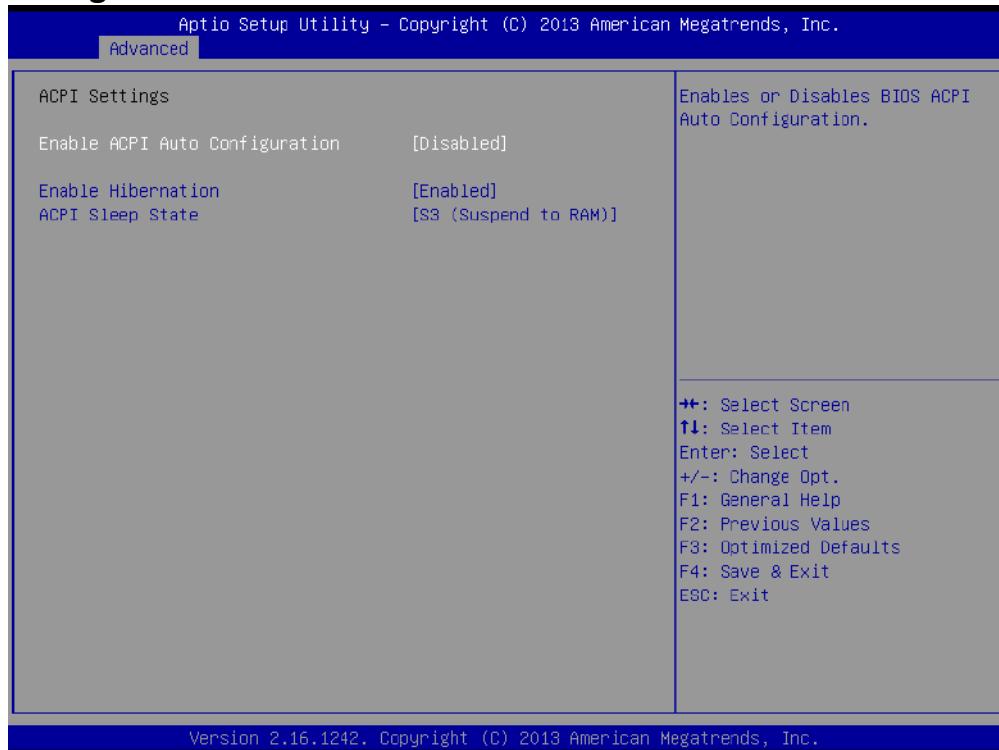

■ Enable ACPI Auto Configuration

This item allows you to enable or disable BIOS ACPI Auto Configuration.

■ Enable Hibernation


This item allows you to enable or disable system ability to hibernate.

■ ACPI Sleep State


This item selects the highest ACPI sleep state the system will enter when the suspend button is pressed. Select <Suspend Disabled> or <S3 (Suspend to RAM)>.

5.3.3 Super IO Configuration

This setting allows you to select options for the Super IO Configuration, and change the value of the selected option.

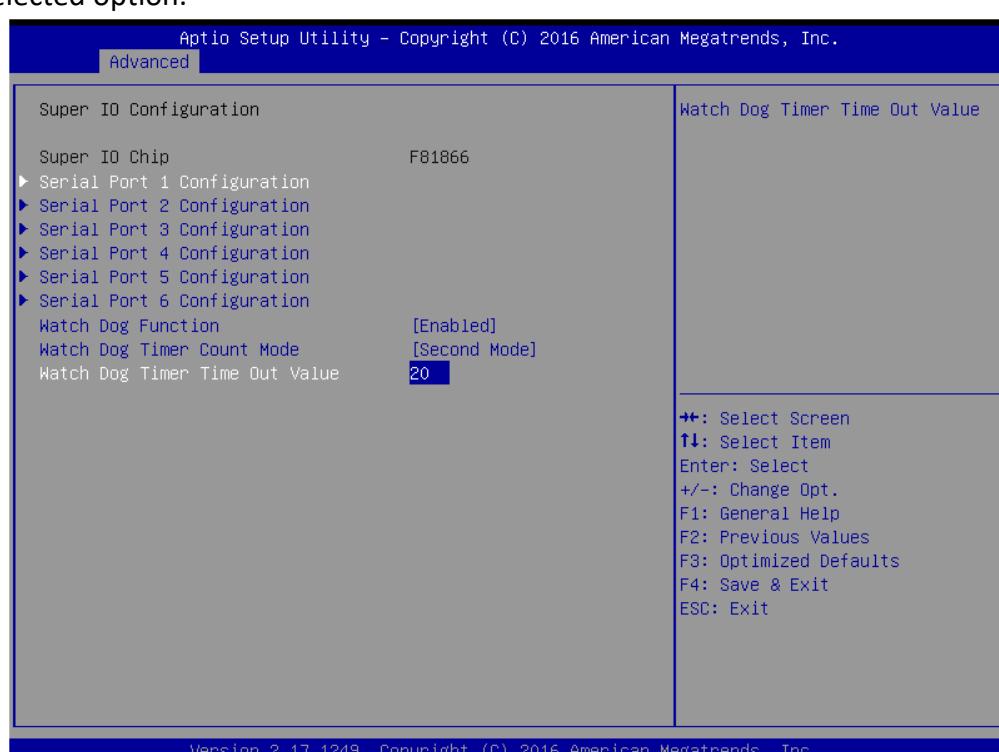

■ Serial Port 1 Configuration

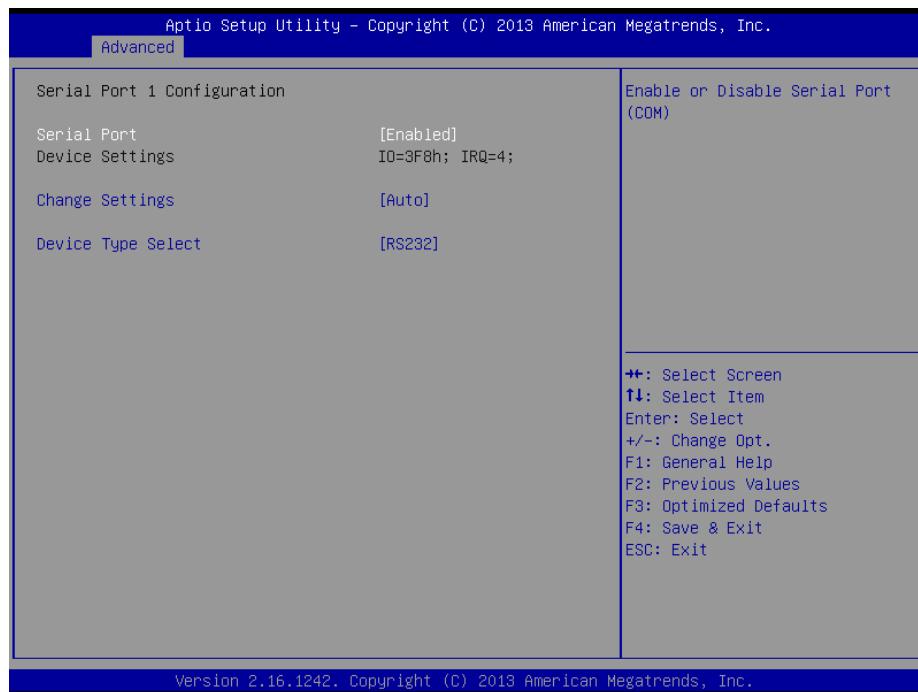

- **Serial Port**

This item allows you to enable or disable serial port.


- **Change Settings**

This item allows you to change the address & IRQ settings of the specified serial port.

- **Device Type Select**

Change the Serial interface. Select <RS232> ,<RS422 Full Duplex> or <RS485 Half Duplex> interface.

■ Serial Port 2 Configuration

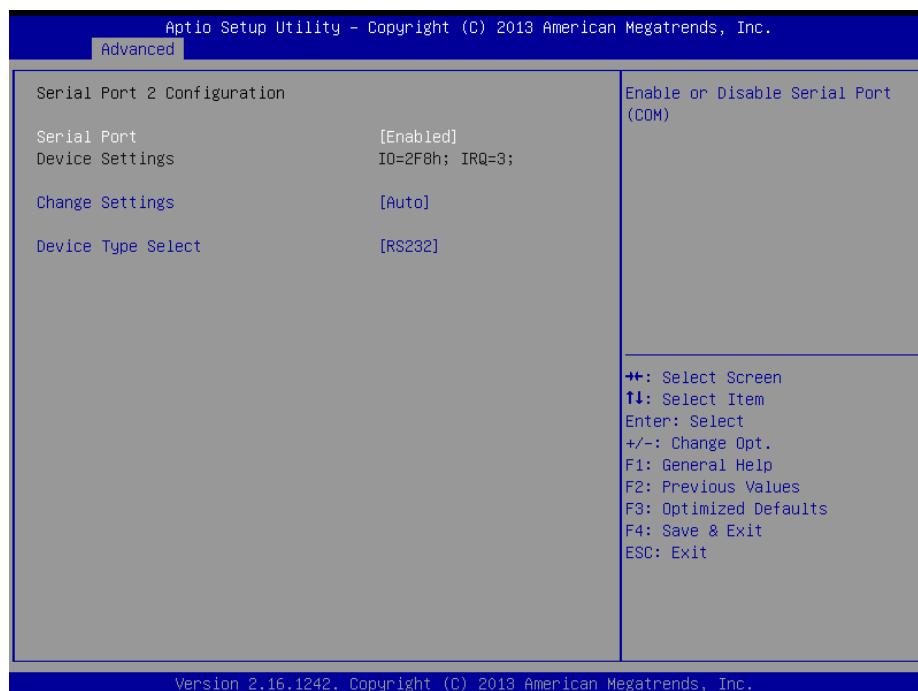

- **Serial Port**

This item allows you to enable or disable serial port.


- **Change Settings**

This item allows you to change the address & IRQ settings of the specified serial port.

- **Device Type Select**

Change the Serial interface. Select <RS232> ,<RS422 Full Duplex> or <RS485 Half Duplex> interface.

■ Serial Port 3 Configuration

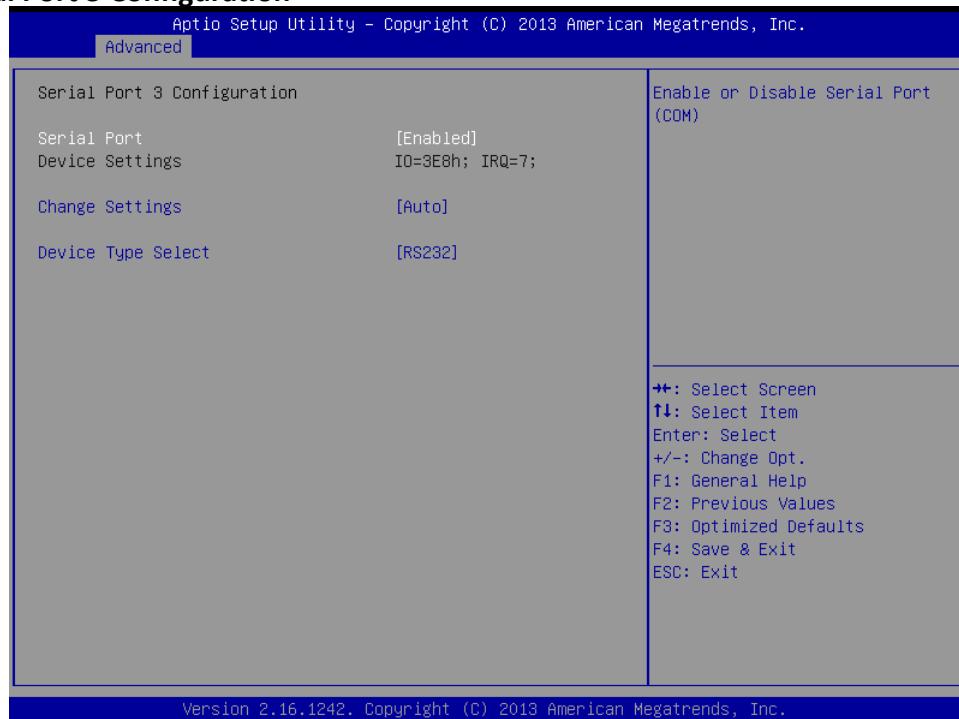

● Serial Port

This item allows you to enable or disable serial port.


● Change Settings

This item allows you to change the address & IRQ settings of the specified serial port.

● Device Type Select

Change the Serial interface. Select <RS232> ,<RS422 Full Duplex> or <RS485 Half Duplex> interface.

■ Serial Port 4 Configuration

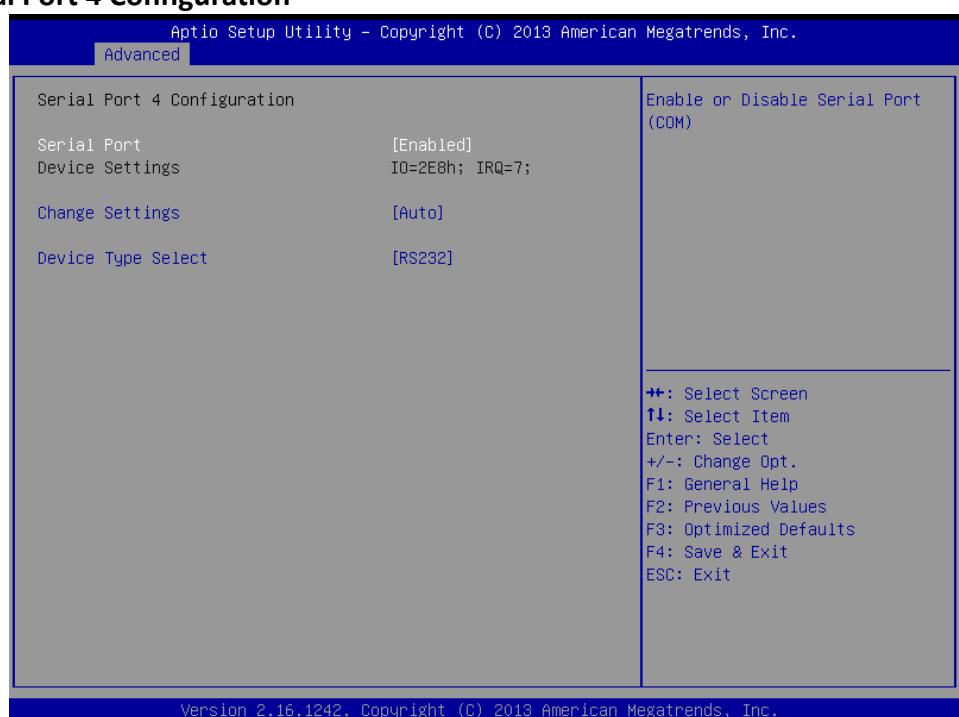

● Serial Port

This item allows you to enable or disable serial port.


● Change Settings

This item allows you to change the address & IRQ settings of the specified serial port.

● Device Type Select

Change the Serial interface. Select <RS232> ,<RS422 Full Duplex> or <RS485 Half Duplex> interface.

■ Serial Port 5 Configuration

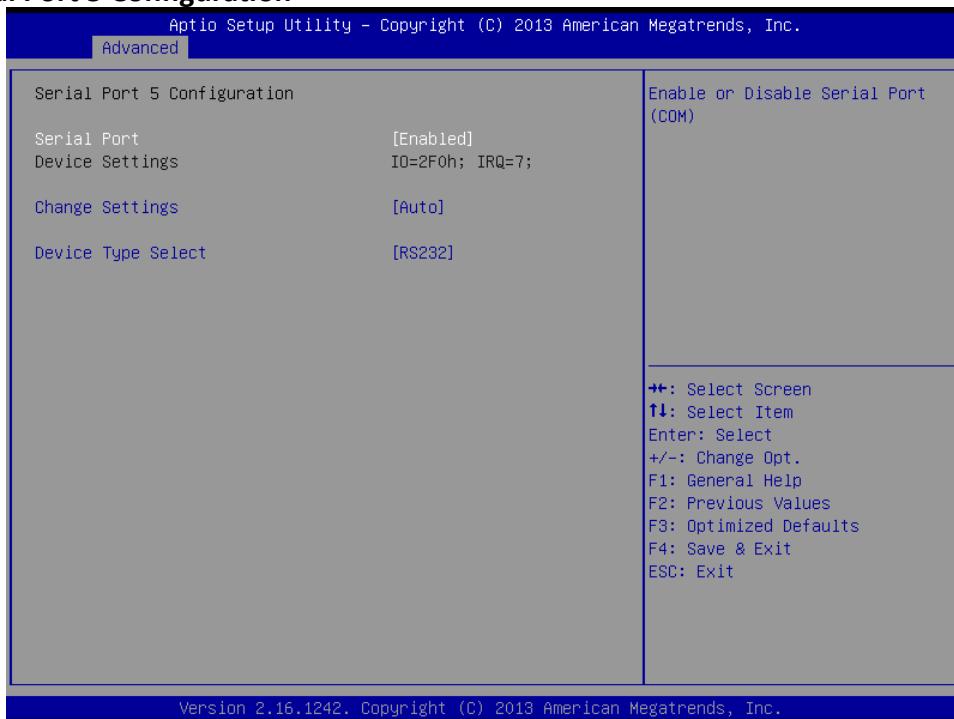

● Serial Port

This item allows you to enable or disable serial port.

● Change Settings

This item allows you to change the address & IRQ settings of the specified serial port.

● Device Type Select

Change the Serial interface. Select <RS232> ,<RS422 Full Duplex> or <RS485 Half Duplex> interface.

■ Serial Port 6 Configuration



● Serial Port

This item allows you to enable or disable serial port.

● Change Settings

This item allows you to change the address & IRQ settings of the specified serial port.

● Device Type Select

Change the Serial interface. Select <RS232> ,<RS422 Full Duplex> or <RS485 Half Duplex> interface.

■ Watch Dog Function

This setting allows you to setup the system watch-dog timer, a hardware timer that generates a reset when the software that it monitors does not respond as expected each time the watch dog polls it.

● Watch Dog Timer Count Mode


Change the Watch dog mode. Select <Second Mode> or <Minute Mode> mode.

● Watch Dog Timer Time Out Value


User can set a value in the range of 20 to 255.

5.3.4 Hardware Monitor

These items display the current status of all monitored hardware devices/ components such as voltages and temperatures.

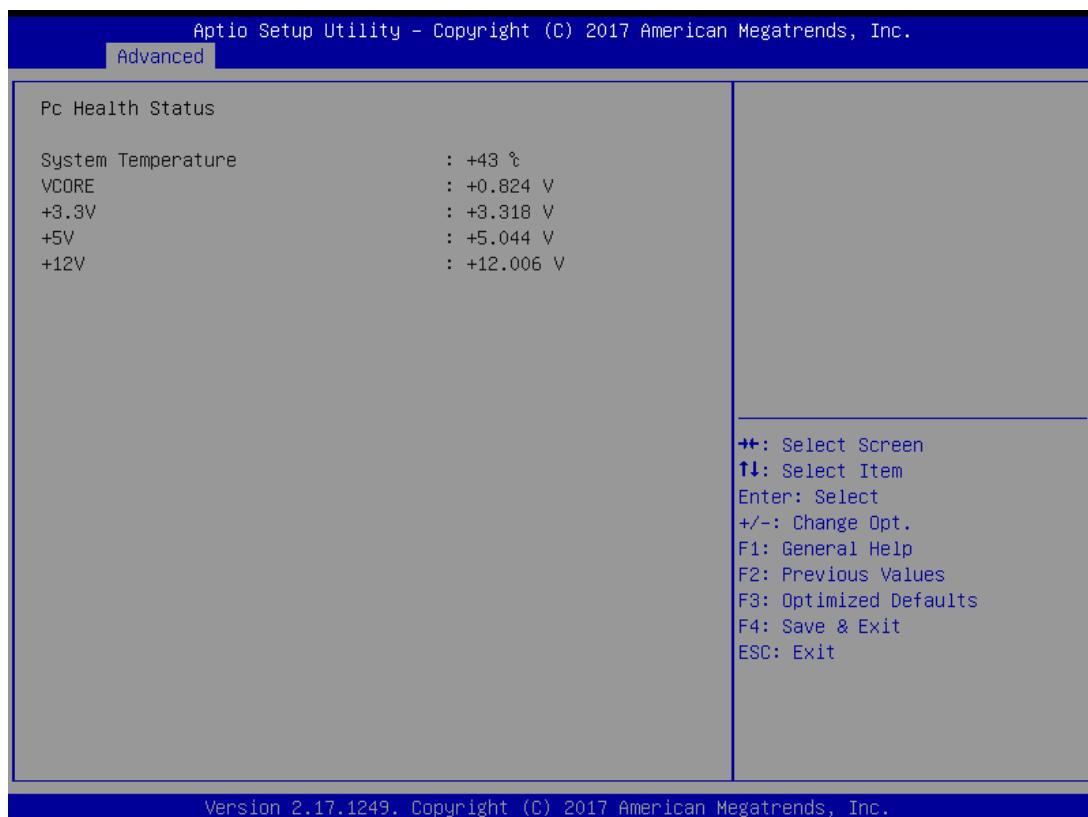

5.3.5 Serial Port Console Redirection

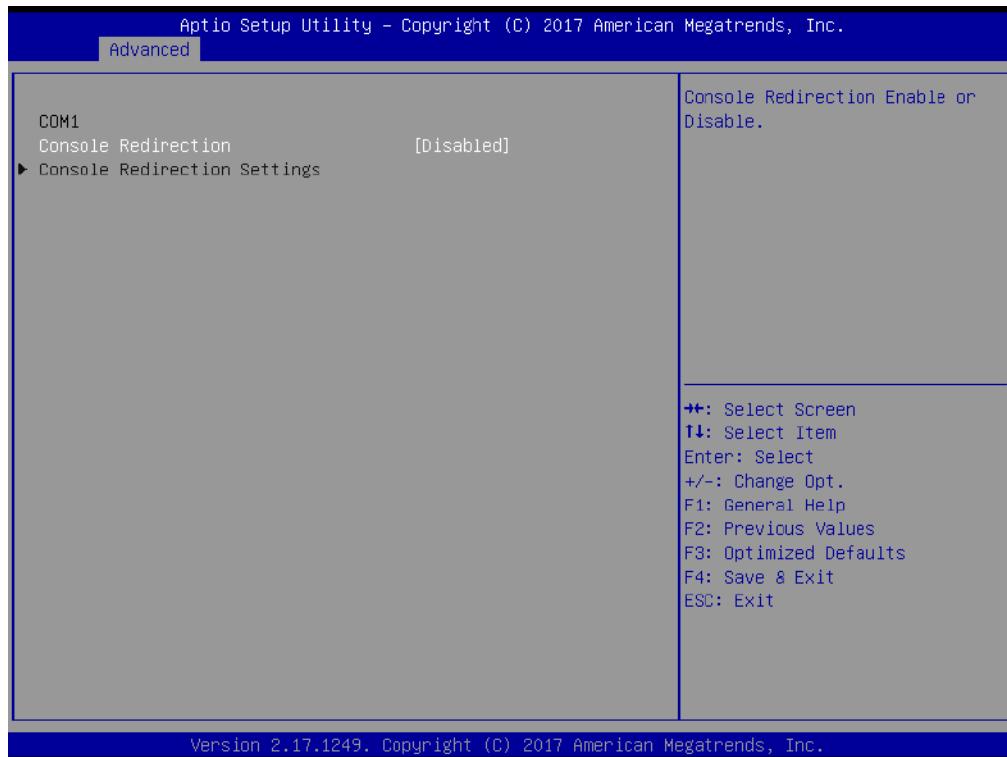


Version 2.17.1249. Copyright (C) 2017 American Megatrends, Inc.

Console Redirection

These items allows you to enable or disable COM1 console redirection.

5.3.6 CPU Configuration

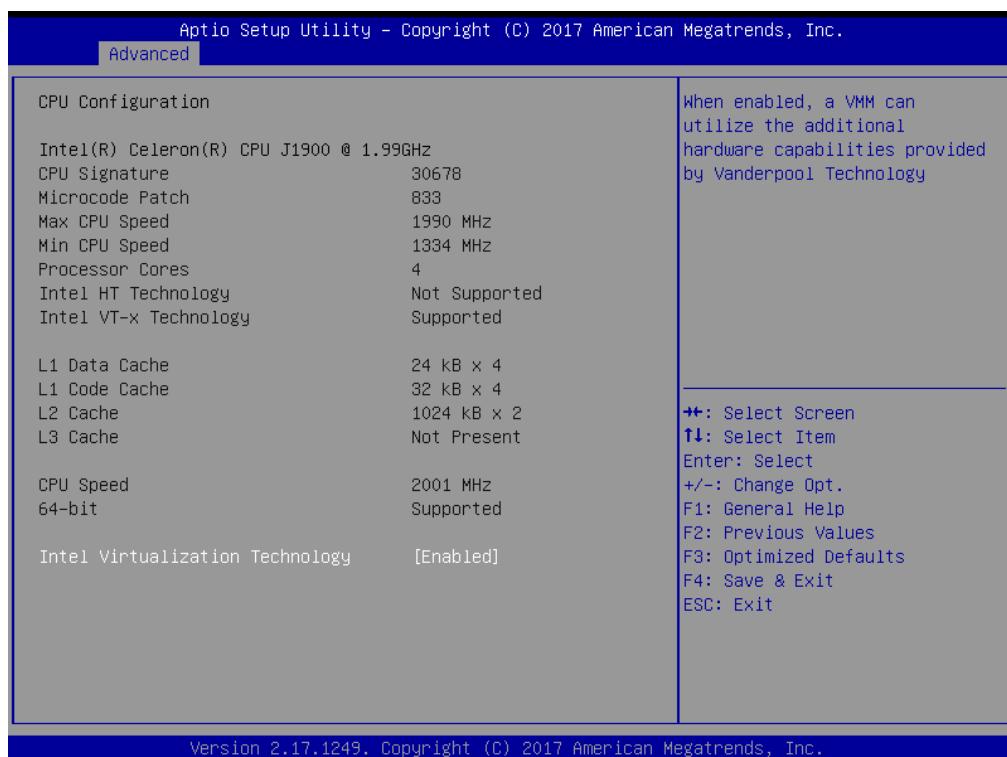


Version 2.17.1249. Copyright (C) 2017 American Megatrends, Inc.

Intel Virtualization Technology

Virtualization enhanced by Intel Virtualization Technology will allow a platform to run multiple operating systems and applications in independent partitions. With virtualization, one computer system can function as multiple Virtual systems.

5.3.7 SATA Configuration

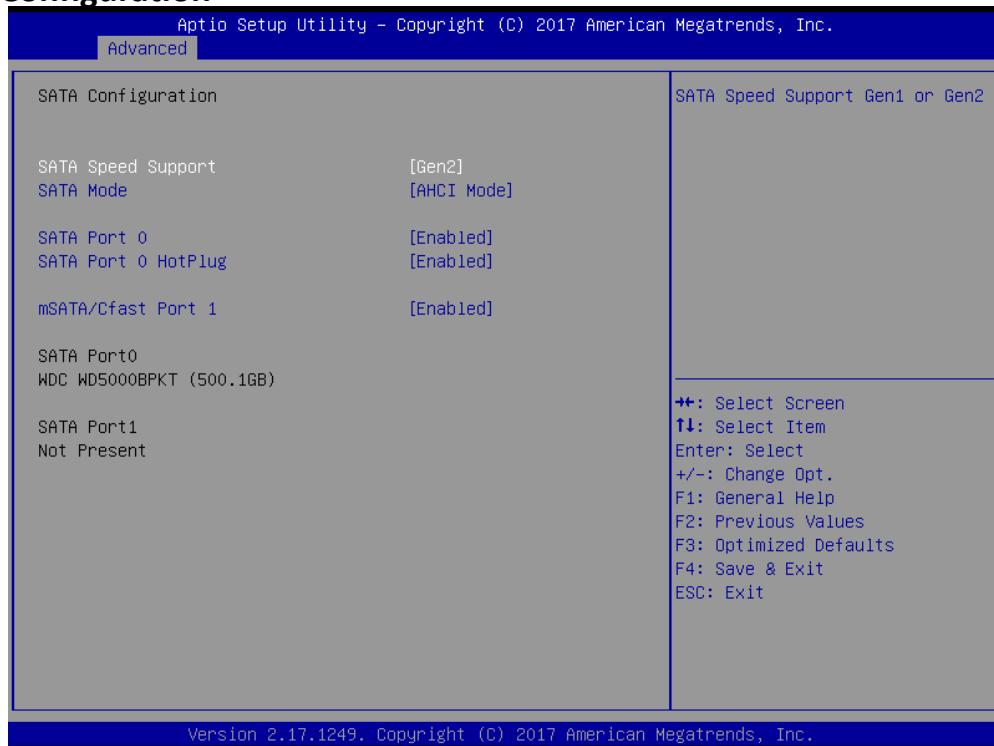

■ SATA Speed Support

Change the SATA Speed. Select <Gen1> or <Gen2> speed.

■ SATA Mode

This item allows you to select IDE or AHCI Mode.

■ SATA Port 0

This item allows you to enable or disable SATA Port 0.

■ SATA Port 0 HotPlug

This item allows you to enable or disable SATA Port 0 hot plug function.


■ SATA Port 1/mSATA/Cfast

This item allows you to enable or disable SATA Port 1/mSATA/Cfast.

5.3.8 OS Selection



5.3.9 CSM Configuration

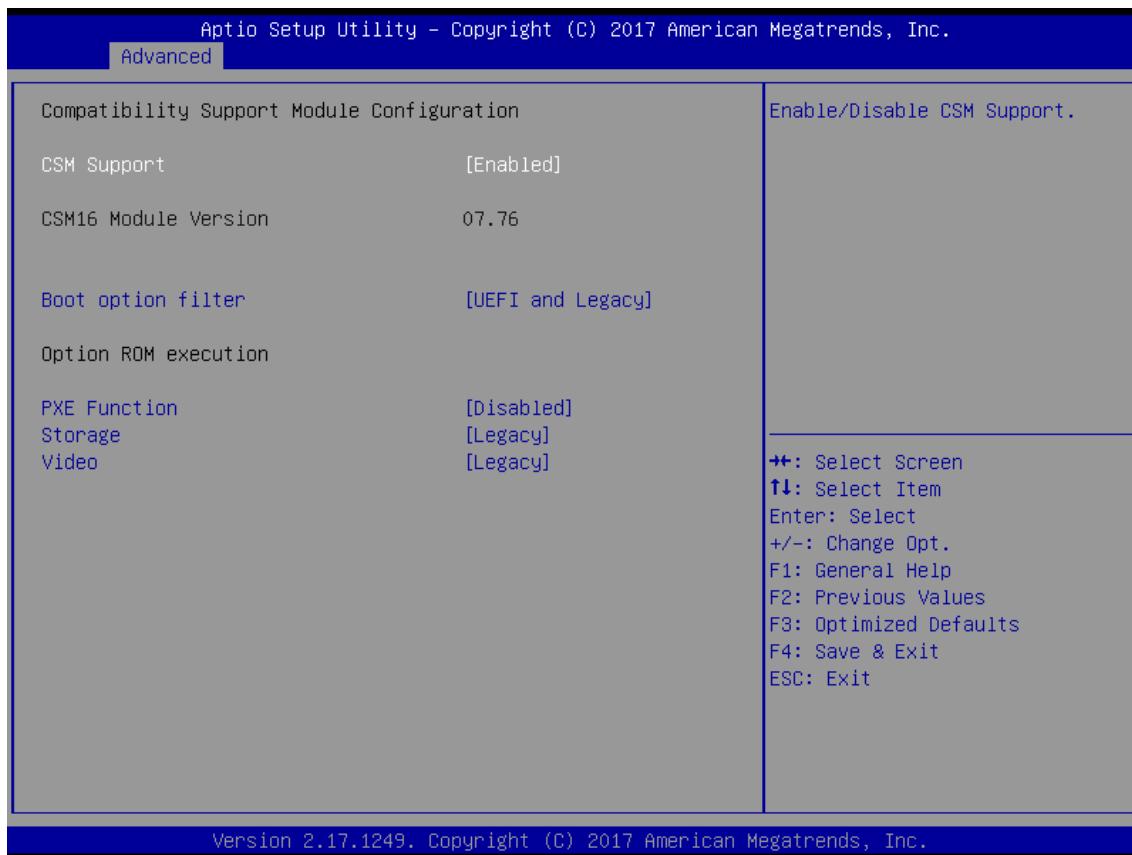

■ CSM Support

Enables or disables UEFI CSM (Compatibility Support Module) to support a legacy PC boot process.

■ Boot option filter

This item allows you to select which type of operating system to boot.

UEFI and Legacy: Allows booting from operating systems that support legacy option ROM or UEFI option ROM.

Legacy only: Allows booting from operating systems that only support legacy option ROM.

UEFI only: Allows booting from operating systems that only support UEFI option ROM.

This item is configurable only when CSM Support is set to Enabled.

■ PXE Function

This item allows you to enable or disable PXE function.

■ Storage

This setting allows you to select whether to enable the UEFI or legacy option ROM for the storage device controller.

Do not launch: Disables option ROM.

UEFI only: Enables UEFI option ROM only.

Legacy only: Enables legacy option ROM only.

■ Video


This item allows you to select whether to enable the UEFI or legacy option ROM for the storage device controller.

Do not launch: Disables option ROM.

UEFI only: Enables UEFI option ROM only.

Legacy only: Enables legacy option ROM only.

5.3.10 USB Configuration

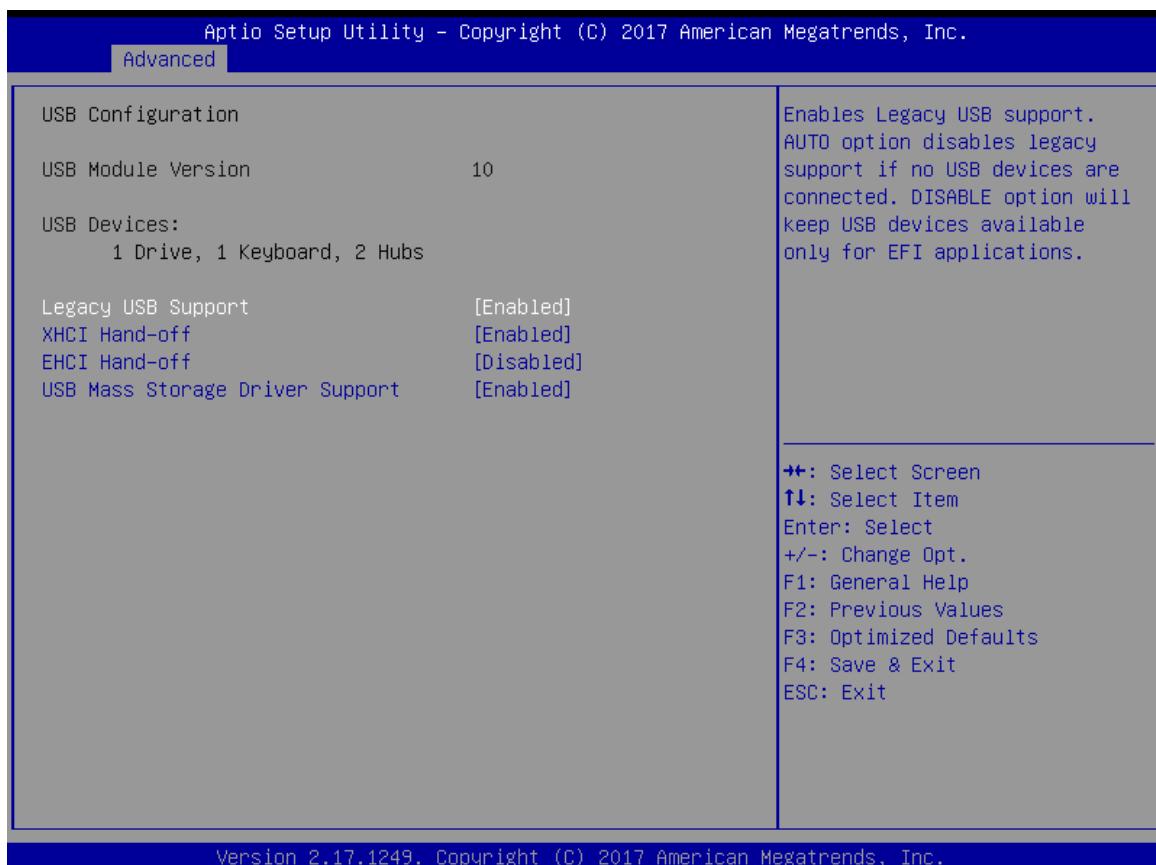

■ Legacy USB Support

Allows USB keyboard/ mouse to be used in MS-DOS.

■ XHCI Hand-off

Determines whether to enable XHCI (USB3.0) Hand-off feature for an operating system without XHCI (USB3.0) Hand-off support.


■ EHCI Hand-off

Determines whether to enable EHCI Hand-off feature for an operating system without EHCI Hand-off support.

■ USB Mass Storage Driver Support

Enables or disables support for USB storage devices.

5.3.11 Intel® I210 Gigabit Network Connection- XX:XX:XX:XX:XX:XX

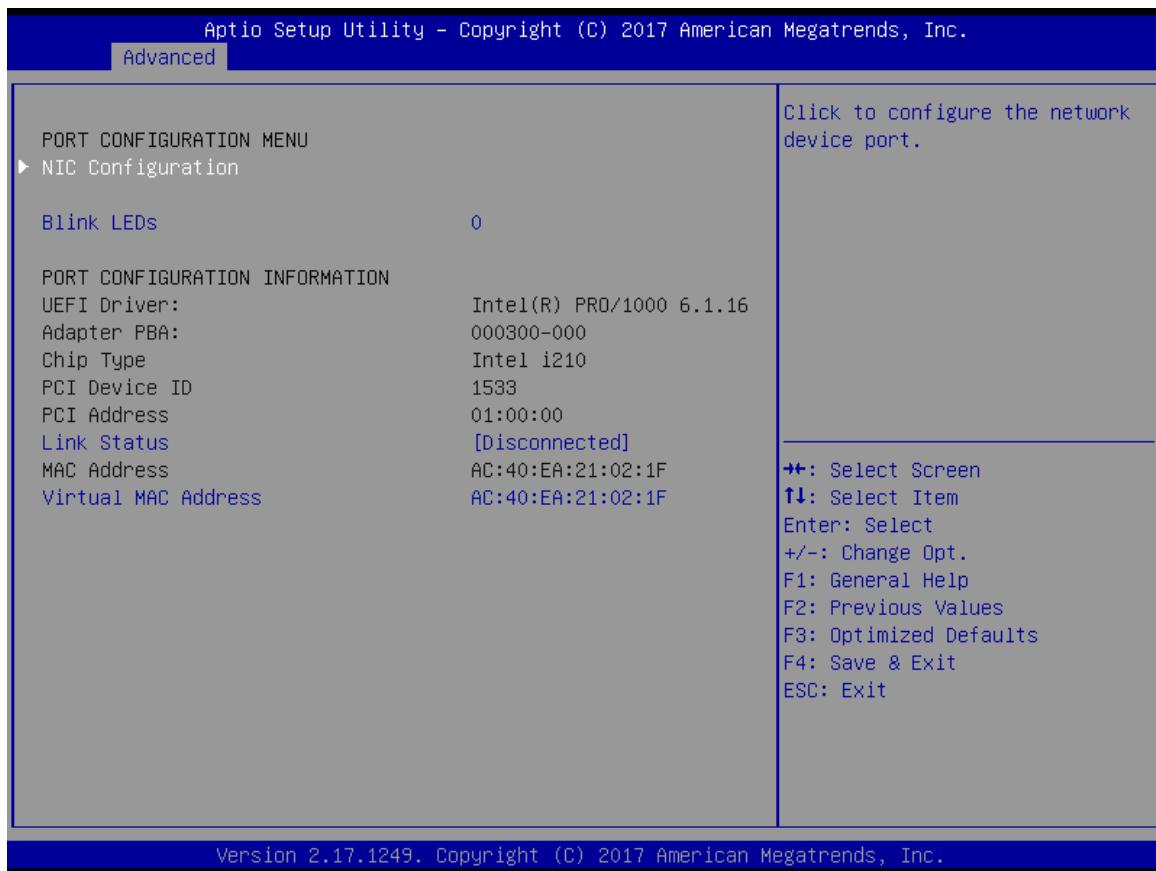

■ NIC Configuration

Press enter to configure the network device port.

● Link Speed

Use this item to specify the port speed used for the selected boot protocol. Select <Auto Negotiated>, <10 Mbps Half>, <10 Mbps Full>, <100Mbps Half> or <100 Mbps Full>.

● Wake On LAN

Enables the server to be powered on using an in-band magic packet.

■ Blink LEDs

Use this item to identify the physical network port by blinking the associated LED.


■ Link Status

Use this item to specify the port speed used for the selected boot protocol. Select <Auto Negotiated>, <10 Mbps Half>, <10 Mbps Full>, <100Mbps Half> or <100 Mbps Full>.

■ Virtual MAC Address


Displays the programmatically assignable MAC Address.

5.4 Chipset

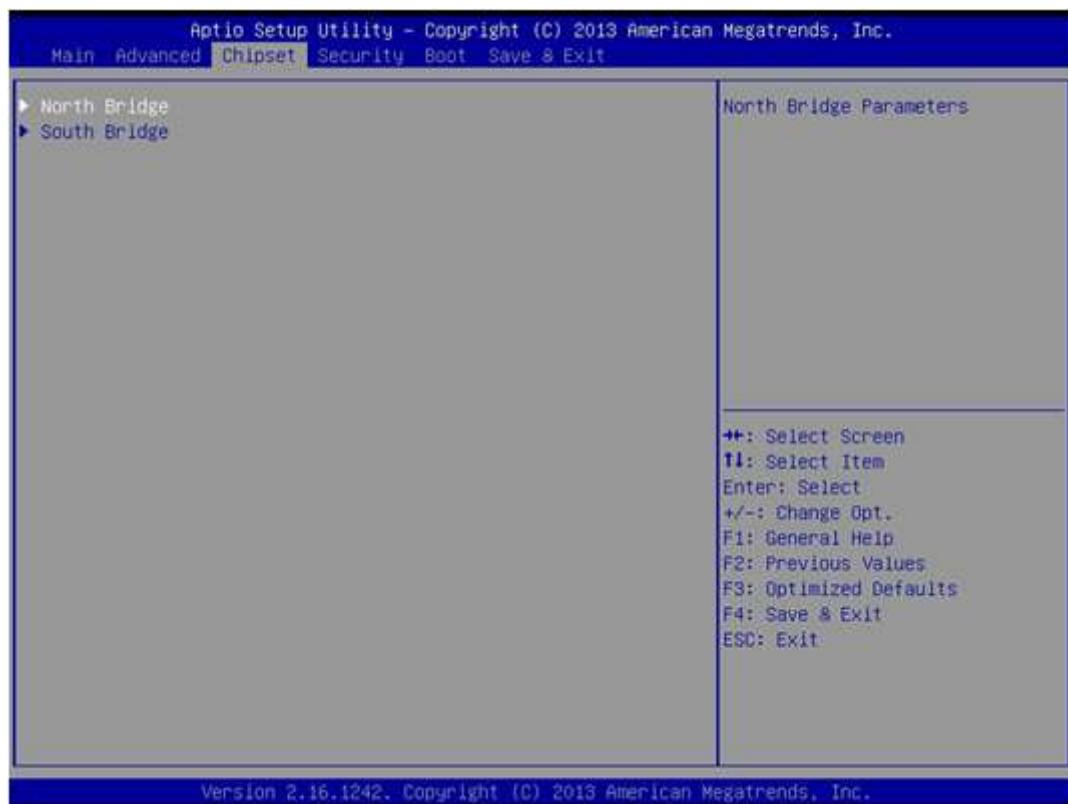


5.4.1 North Bridge

This section provides information on the installed memory size and memory/onboard graphics-related configuration options.

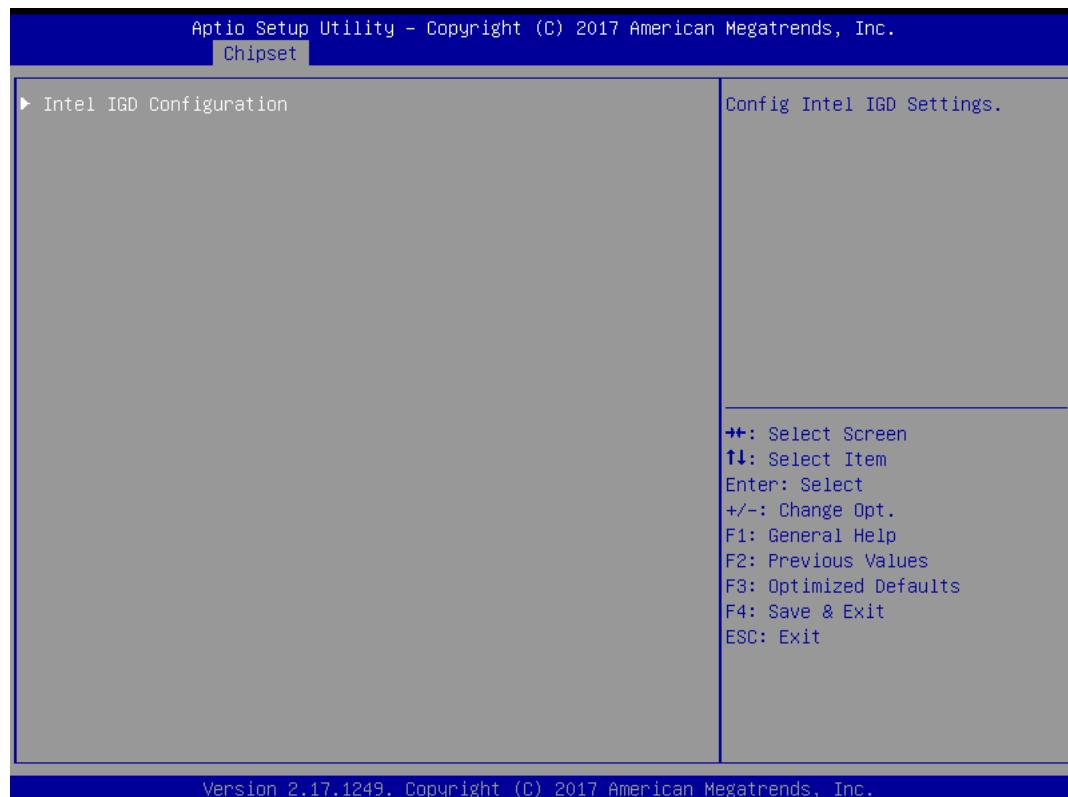

■ Intel IGD Configuration

This section provides onboard graphics-related configuration options.

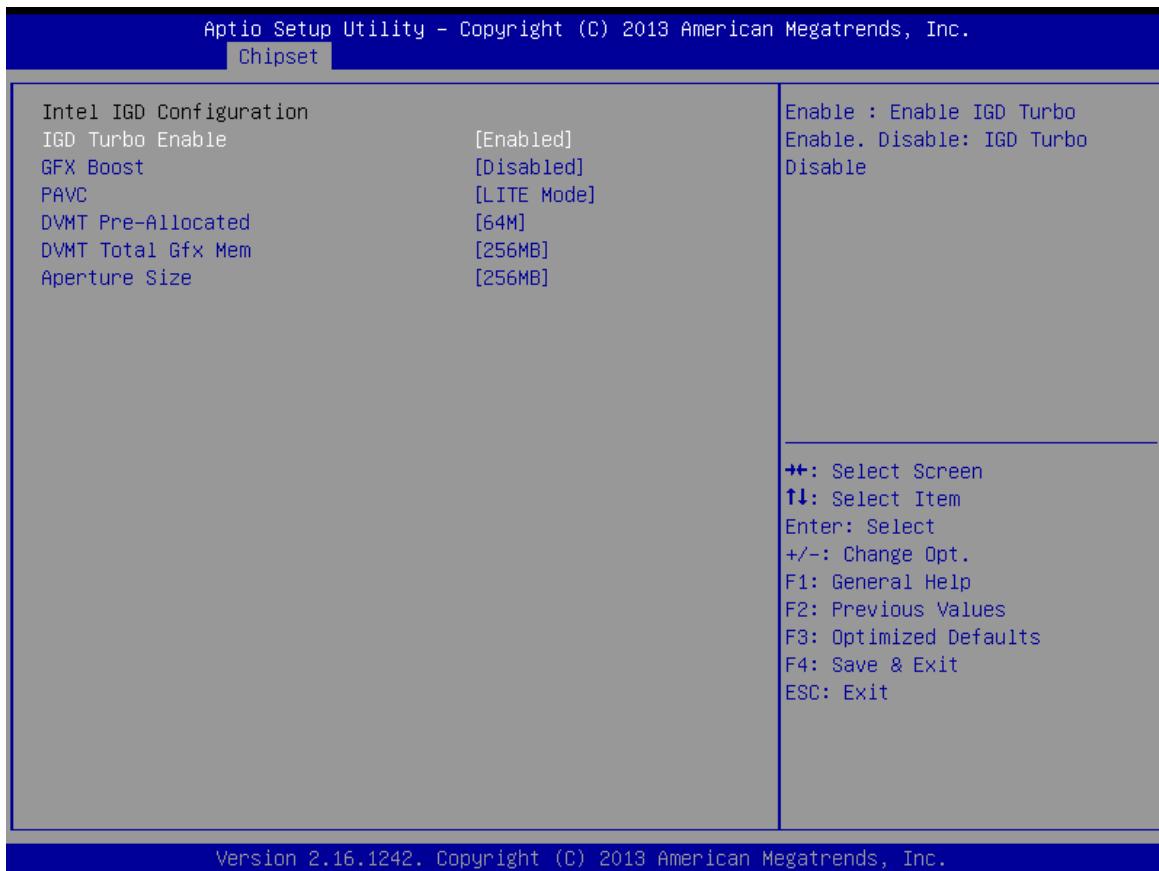

● IGD Turbo Enable

This item allows you to enable or disable IGD Turbo.

● GFX Boost

This item allows you to enable or disable GFX Boost.

● PAVC

This item enables/disables Protected Audio Video Control. Select <Disabled>, <LITE Mode> or <SERPENT Mode>.

● DVMT Pre-Allocated

This item selects DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device. . Select <64M>, <96M>, <128M>, <160M>, <192M>, <224M>, <256M>, <288M>, <320M>, <352M>, <384M>, <416M>, <448M>, <480M> or <512M>.


● DVMT Total Gfx Mem

This item selects DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device. Select <128MB>, <256MB> or <Max>.

● Aperture Size

This item selects the Aperature Size. Select <128MB>, <256MB> or <512MB>.

5.4.2 South Bridge

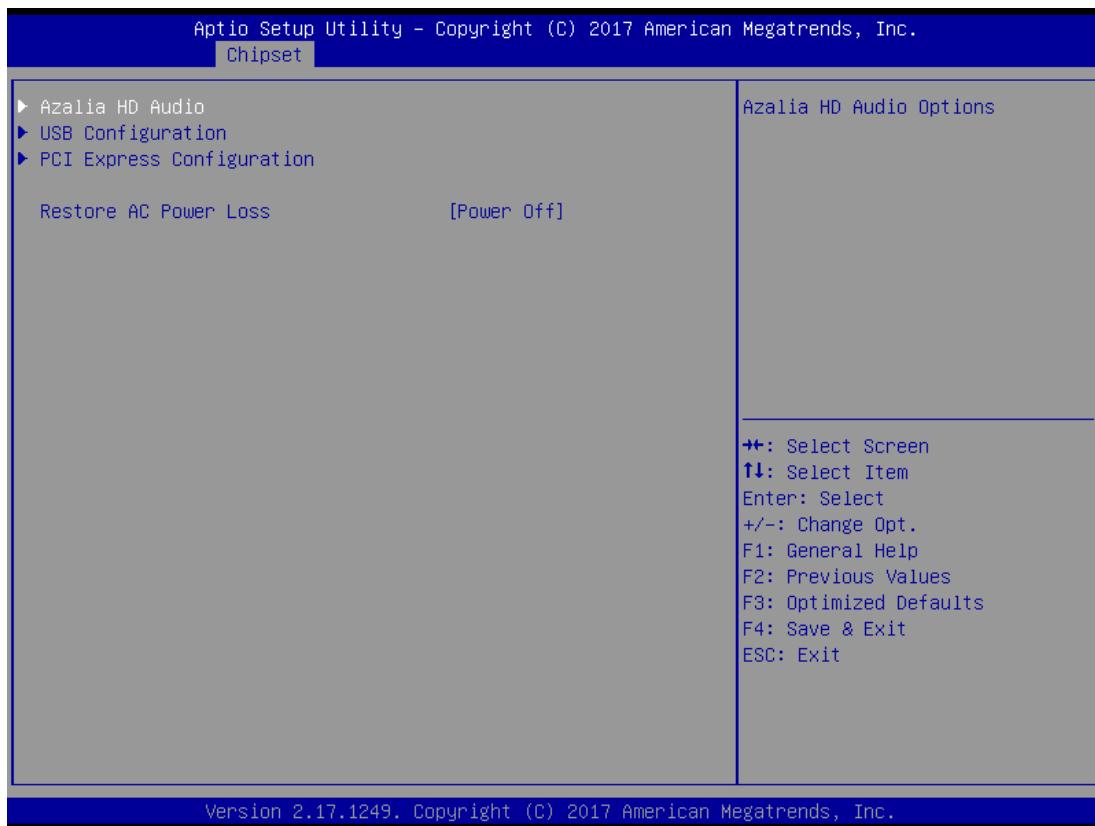

■ Azalia HD Audio

Control detection of the Azalia device.

● Audio Controller

Enabled: Azalia will be unconditionally enabled.

Disabled: Azalia will be unconditionally disabled.

■ USB Configuration


● XHCI Mode

This item allows you to enable or disable the USB XHCI controller.

● USB 2.0 (EHCI) Support

This item allows you to enable or disable the USB EHCI support.

■ PCI Express Configuration

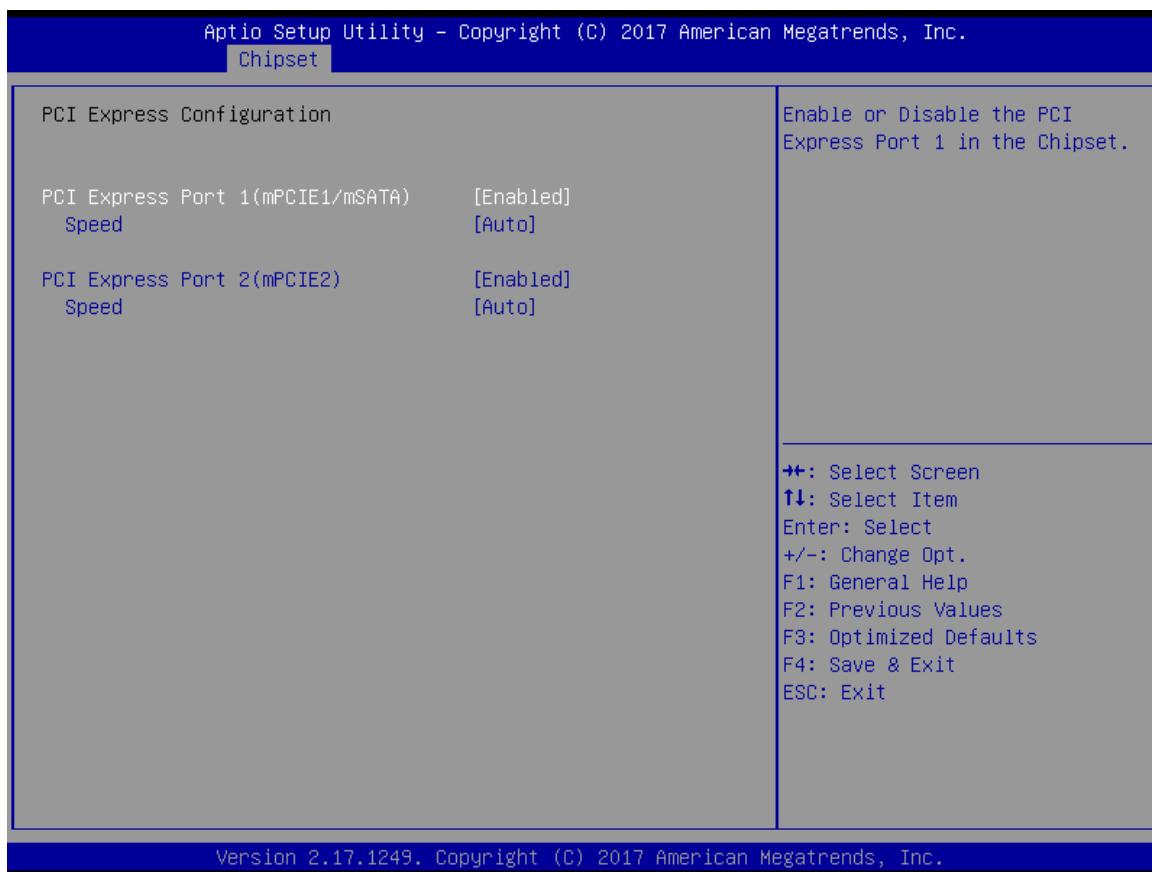

● PCI Express Port 1 (mPCIE1/mSATA)

This item allows you to enable or disable PCI Express Port 1 (Mpcie1/mSATA) in the Chipset.

● Speed

Change the PCIe Port Speed. Select <AUTO> ,<Gen 2> or <Gen 1>

● PCI Express Port 2 (mPCIE2)

This item allows you to enable or disable PCI Express Port 2 (mPCIE2) in the Chipset.

● Speed

Change the PCIe Port Speed. Select <AUTO> ,<Gen 2> or <Gen 1>

■ Restore AC Power Loss

This item specifies whether your system will reboot after a power failure or interrupt occurs.

Available settings are:

Power Off: Leave the computer in the power off state.

Power On: Leave the computer in the power on state.

Last State: Restore the system to the previous status before power failure or interrupt occurred.

5.5 Security

Security menu allow you to change administrator password and user password settings.



5.5.1 Administrator Password


This item allows you to set Administrator Password.

5.5.2 User Password

This item allows you to set User Password.

5.6 Boot

This menu allows you to setup the system boot options.

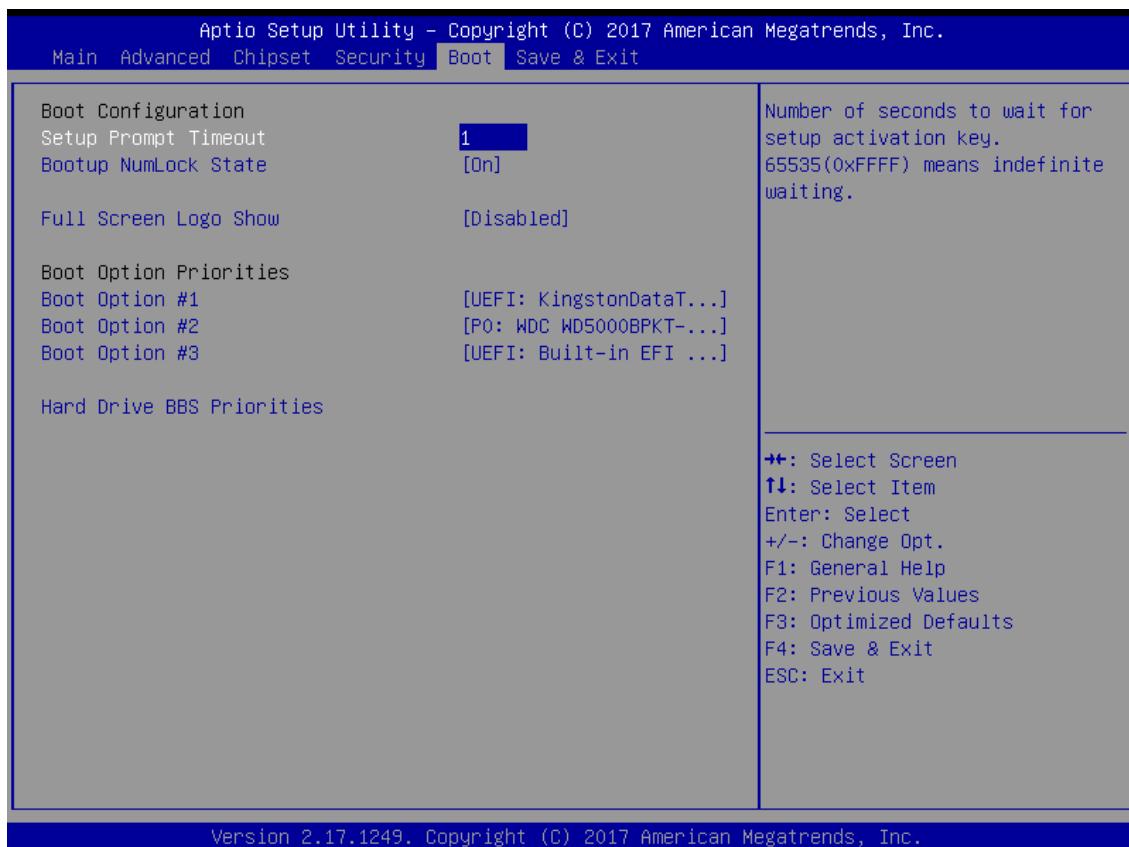

5.6.1 Setup Prompt Timeout

This item sets number of seconds to wait for setup activation key.

5.6.2 Bootup NumLock State

This item selects the keyboard NumLock state. Select <On> or <Off>.

5.6.3 Full Screen Logo Show


This item allows you to enable or disable Full Screen Logo Show function.

5.6.4 Boot Option Priorities

The items specify the boot device priority sequence from the available devices. The number of device items that appears on the screen depends on the number of devices installed in the system.

5.7 Save & Exit

This setting allows you to configure the boot settings.

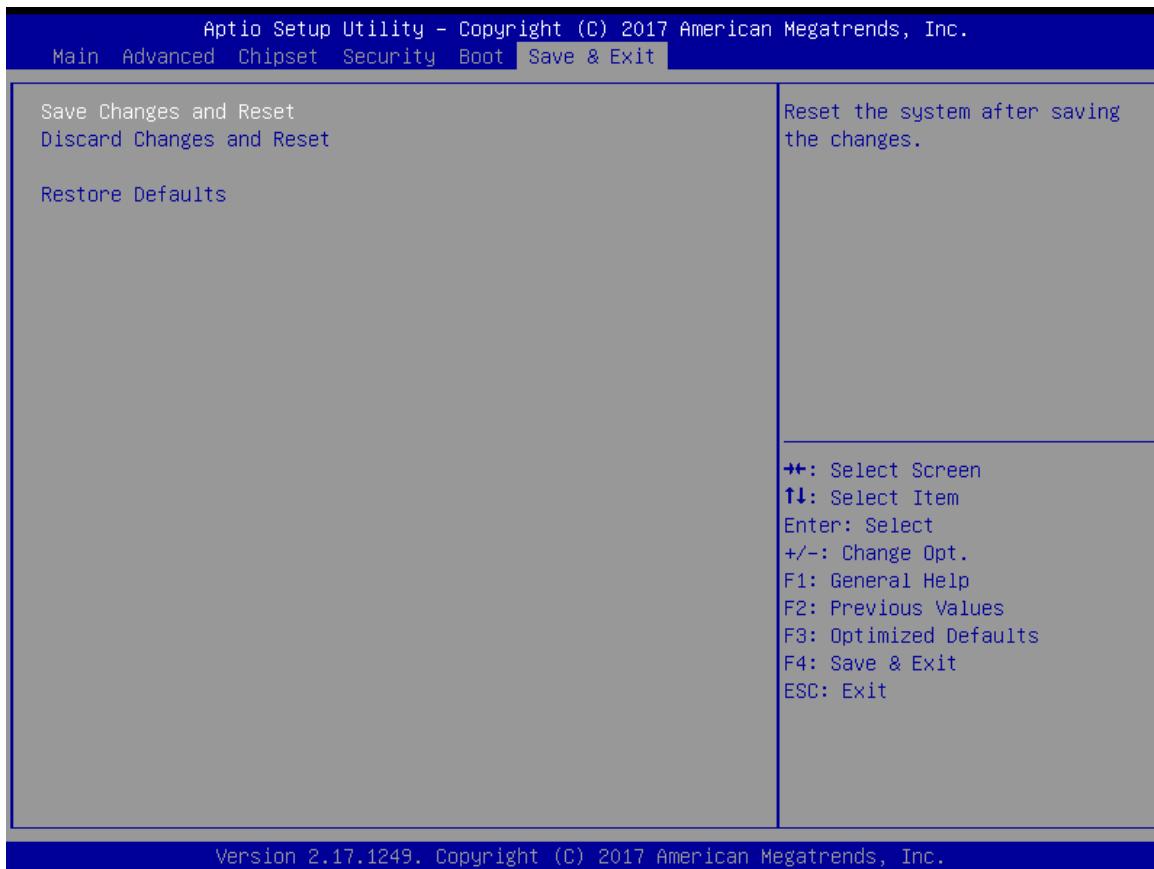

5.7.1 Save Changes and Reset

This item allows you reset the system after saving the changes.

5.7.2 Discard Changes and Reset

Select this option to quit Setup without making any permanent changes to the system configuration.

5.7.3 Restore Defaults

This selection allows you to reload the BIOS when problem occurs during system booting sequence. These configurations are factory settings optimized for this system.

Appendix

WDT & GPIO & Mounting Guide

WDT Sample Code

Sample Code:

Set watchdog timer to 30 seconds

```
AddrPort =0x4e;
DataPort=0x4f;
SIO_UNLOCK_VALUE=0x87;
SIO_LOCK_VALUE=0xaa;
WATCHDOG_LDN=0x07;
WDT_UNIT=0x60; // 0x60=sec, 0x68=min, 0x40=disable watchdog timer
WDT_TIMER= 30;

// Set watchdog timer to 30 seconds
// enable config mode, switch WDT configuration
WriteByte(AddrPort, SIO_UNLOCK_VALUE);
usleep(4000); //delay
WriteByte(AddrPort, SIO_UNLOCK_VALUE);
WriteByte(AddrPort, 0x07);
WriteByte(DataPort, WATCHDOG_LDN);

// activate wdt
WriteByte(AddrPort, 0x30);
data=ReadByte(DataPort);
data=data|0x01;
WriteByte(DataPort, data);

// set timer value
WriteByte(AddrPort, 0xf6);
WriteByte(DataPort, WDT_TIMER);

// set unit
WriteByte(AddrPort, 0xf5);
WriteByte(DataPort, WDT_UNIT);

// enable reset
WriteByte(AddrPort, 0xfa);
data=ReadByte(DataPort);
data=data|0x01;
WriteByte(DataPort, data);

// close config mode
WriteByte(AddrPort, SIO_LOCK_VALUE);
```

GPIO Sample Code

- GPI 0 ~ GPI 3

| | GPI 0 | GPI 1 | GPI 2 | GPI 3 |
|-------------|-------|-------|-------|-------|
| IO Address | 0xA03 | 0xA03 | 0xA03 | 0xA03 |
| Bit | 4 | 5 | 6 | 7 |
| Sample code | #1 | | | |

- GPO 0 ~ GPO 3

| | GPO 0 | GPO 1 | GPO 2 | GPO 3 |
|-------------|-------|-------|-------|-------|
| IO Address | 0xA02 | 0xA02 | 0xA02 | 0xA02 |
| Bit | 0 | 1 | 2 | 3 |
| Sample code | #2 | | | |

Sample Code:

```
GPI_REG = 0xA03;
GPO_REG = 0xA02;
GPO_0 = 0x01; //bit0 is 1
```

```
#1 : Get GPI 0 status
// Get GPI 0 Pin Status
data=.ReadByte(GPI_REG); // data bit0 is GPI 0 status
```

```
#2 : Set GPO 0 status to high
// Set GPO 0 Pin to High
data=.ReadByte(GPO_REG);
data |= GPO_0;
WriteByte(GPO_REG, data); //data bit0 set GPO 0 status to high
```

- GPI 4 ~ GPI 7

| | GPI 4 | GPI 5 | GPI 6 | GPI 7 |
|-------------|-------|-------|-------|-------|
| IO Address | 0xA06 | 0xA06 | 0xA06 | 0xA06 |
| Bit | 0 | 1 | 2 | 3 |
| Sample code | #3 | | | |

- GPO 4 ~ GPO 7

| | GPO 4 | GPO 5 | GPO 6 | GPO 7 |
|-------------|-------|-------|-------|-------|
| IO Address | 0xA06 | 0xA07 | #5 | 0xA04 |
| Bit | 4 | 7 | 0 | 7 |
| Sample code | #4 | | #5 | |

Sample Code:

```
GPI_REG = 0xA06;
GPO_REG = 0xA06;
GPO_4 = 0x10; //bit4 is 1
```

```
#3 : Get GPI 4 status
// Get GPI 4 Pin Status
data=ReadByte(GPI_REG); // data bit0 is GPI 4 status
```

```
#4 : Set GPO 4 status to high
// Set GPO 4 Pin to High
data=ReadByte(GPO_REG);
data |= GPO_4;
WriteByte(GPO_REG, data); //data bit4 set GPO 4 status to high
```

#5 : Set GPO 6 status to high

Ps. GPO 6 must be accessed by gpio configuration (IO address is protected)

```
AddrPort =0x4e;
DataPort=0x4f;
SIO_UNLOCK_VALUE=0x87;
SIO_LOCK_VALUE=0xaa;
SIO_LDN_GPIO =0x06;
GPO_REG=0xd1;
GPO_6 =0x01; //bit0 is 1

// enable config mode, switch GPIO configuration
WriteByte(AddrPort, SIO_UNLOCK_VALUE);
usleep(4000); //delay
WriteByte(AddrPort, SIO_UNLOCK_VALUE);
WriteByte(AddrPort, 0x07);
WriteByte(DataPort, SIO_LDN_GPIO);


// Set GPO 6 Pin to high
WriteByte(AddrPort, GPO_REG);
data=ReadByte(DataPort);
data=data| GPO_6;
WriteByte(DataPort, data); // data bit0 set GPO 6 status to high

// close config mode
WriteByte(AddrPort, SIO_LOCK_VALUE);
```


Mounting Guide

Flush Mount / Panel Mount:


- Cut hole in the wall w/ dimensions according to the screen size you have purchased. Please refer to the next page for the list of cutout dimensions and max wall depths

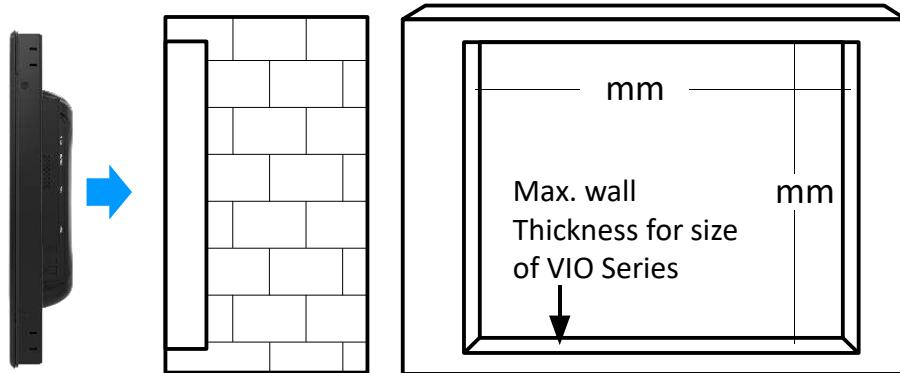

- From the FRONT of the wall, place the VIO Panel PC with its rear (display screen forward) into the measured cutout hole.

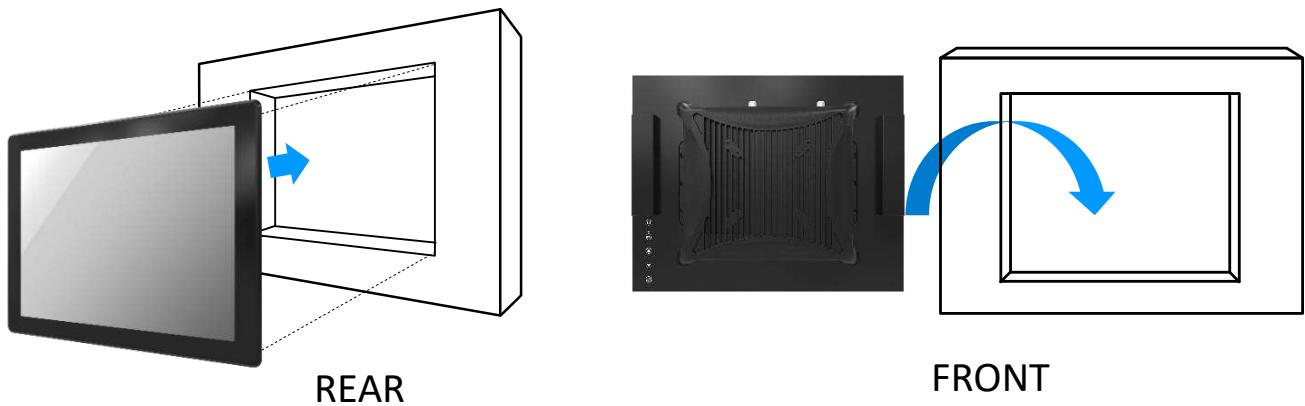

- Install the mounting clips around the VIO and screw them in to secure against the wall. If the wall's thickness is greater than maximum wall thickness allowed, the clips will not fit. Please refer to the next page for the list of max wall depths

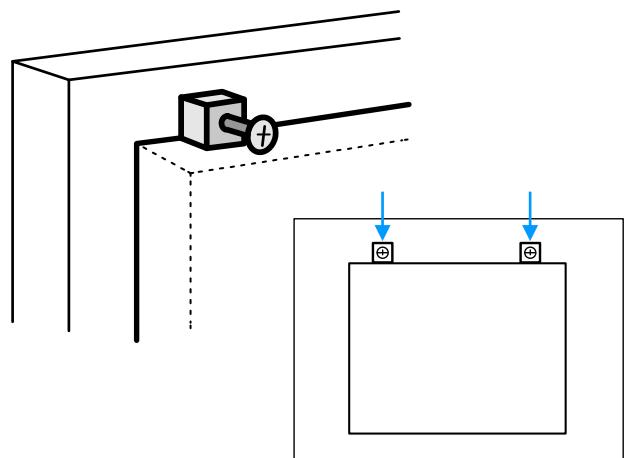

VIO-200-PC100-J1900 Series

| Model | Wall Cut-Out (W x H) Unit: mm | Max Wall Thickness (mm) |
|--------------------------|-------------------------------|-------------------------|
| VIO-212R(C)-PC100-J1900 | 310 x 249 | 8 |
| VIO-215R(C)-PC100-J1900 | 368 x 292.5 | 10 |
| VIO-217R(C)-PC100-J1900 | 400 x 331.5 | 13 |
| VIO-219R(C)-PC100-J1900 | 442 x 367 | 14 |
| VIO-W215R(C)-PC100-J1900 | 389.5 x 238.5 | 10.5 |
| VIO-W221R(C)-PC100-J1900 | 519.5 x 315 | 11 |
| VIO-W224R(C)-PC100-J1900 | 580 x 352 | 11 |

