

USER'S MANUAL

WCO-3000-EHL Series Waterproof Computer



Table of Contents

Prefaces	04
Revision	04
Disclaimer	04
Copyright Notice	04
Trademarks Acknowledgment	04
Environmental Protection Announcement	04
Safety Precautions	05
Technical Support and Assistance	06
Conventions Used in this Manual	06
Package Contents	07
Ordering Information	07
Optional Accessory	07
Chapter 1 Product Introductions	08
1.1 Overview	09
1.1.1 Key Feature	09
1.2 Hardware Specification	10
1.3 System I/O	12
1.4 Mechanical Dimension	14
Chapter 2 Switches and Connectors	15
2.1 Switch and connector Locations	16
2.1.1 Top View	16
2.1.2 Bottom View	17
2.1.3 Daughter board view	18
2.2 Connector / Switch Definition	19
2.3 Switch Definitions	20
Chapter 3 System Setup	33
3.1 Set torque force to 3.5 kgf cm to execute all the screwing and unscrewing	34
3.2 Replace HDD on the internal SATA HDD bay	34
3.3 Installing mini PCIe WiFi card / mSATA	35
3.4 Installing M.2 B Key	36
3.5 Installing antenna	37
3.6 Assemble chassis bottom cover	38
3.7 Assemble waterproof cable	39
Chapter 4 BIOS Setup	41
4.1 BIOS Introduction	42
4.2 Main Setup	43
4.3 Advanced Setup	44
4.3.1 CPU Configuration	45
4.3.2 PCH-FW Configuration	46
4.3.3 SATA and RST Configuration	47
4.3.4 Trusted Computing	48
4.3.5 ACPI Settings	49
4.3.6 Super IO Configuration	50
4.3.7 Hardware Monitor	57

4.3.8	Power IGN Mode	59
4.3.9	S5 RTC Wake Settings	60
4.3.10	Serial Port Console Redirection	61
4.3.11	USB Configuration	62
4.3.12	Network Stack Configuration	63
4.3.13	NVMe Configuration	64
4.4	Chipset	65
4.4.1	System Agent (SA) Configuration	66
4.4.2	PCH-IO Configuration	69
4.5	Security	74
4.6	Boot	77
4.7	Save & Exit	78
Appendix WDT & GPIO		79
	WDT Sample Code	80
	GPIO Sample Code	81

Prefaces

Revision

Revision	Description	Date
1.0	Manual Released	2023/12/26

Disclaimer

All specifications and information in this User's Manual are believed to be accurate and up to date. Premio Inc. does not guarantee that the contents herein are complete, true, accurate or non-misleading. The information in this document is subject to change without notice and does not represent a commitment on the part of Premio Inc.

Premio Inc. disclaims all warranties, express or implied, including, without limitation, those of merchantability, fitness for a particular purpose with respect to contents of this User's Manual. Users must take full responsibility for the application of the product.

Copyright Notice

All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, without the prior written permission of Premio Inc. Copyright © Premio Inc.

Trademarks Acknowledgment

Intel®, Celeron® and Pentium® are trademarks of Intel Corporation.

Windows® is registered trademark of Microsoft Corporation.


AMI is trademark of American Megatrend Inc.

IBM, XT, AT, PS/2 and Personal System/2 are trademarks of International Business Machines Corporation

All other products and trademarks mentioned in this manual are trademarks of their respective owners.

Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. Please recycle to minimize pollution and ensure environment protection.

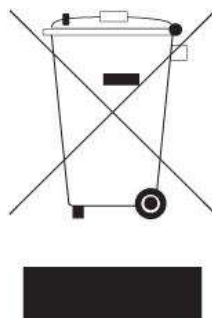

Safety Precautions

Before installing and using the equipment, please read the following precautions:

- Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
- The power outlet shall be installed near the equipment and shall be easily accessible.
- Turn off the system power and disconnect the power cord from its source before making any installation. Be sure both the system and the external devices are turned OFF. Sudden surge
- of power could ruin sensitive components. Make sure the equipment is properly grounded.
- When the power is connected, never open the equipment. The equipment should be opened only by qualified service personnel.
- Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- Disconnect this equipment from the power before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- Avoid the dusty, humidity and temperature extremes.
- Do not place heavy objects on the equipment.
- If the equipment is not used for long time, disconnect it from the power to avoid being damaged by transient over-voltage.
- The storage temperature shall be above -40°C and below 85°C .
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- If one of the following situation arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or it cannot work according the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.

Technical Support and Assistance

1. Visit the Premio Inc website at www.premioinc.com where you can find the latest information about the product.
2. Contact your distributor, our technical support team or sales representative for technical support if you need additional assistance. Please have following information ready before you call:
 - Model name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Conventions Used in this Manual



WARNING

This indication alerts operators to an operation that, if not strictly observed, may result in severe injury.



CAUTION

This indication alerts operators to an operation that, if not strictly observed, may result in safety hazards to personnel or damage to equipment.



NOTE

This indication provides additional information to complete a task easily.

Package Contents

Before installation, please ensure all the items listed in the following table are included in the package.

Item	Description	Q'ty
1	WCO-3000-EHL Waterproof Computer	1
2	Wall Mount KIT	1
3	Waterproof Connector Cover Set	1

Ordering Information

Model No.	Product Description
WCO-3000-EHL-J6413	IP69K Waterproof System with Intel Celeron Processor J6413, 8GB RAM, 256GB SSD, 1x DP, 2x LAN, 2x USB 3.2 Gen 2, DC IN 9-36V
WCO-3000-EHL-J6413-110V	IP69K Waterproof System with Intel Celeron Processor J6413, 8GB RAM, 256GB SSD, 1x DP, 2x LAN, 2x USB 3.2 Gen 2, DC IN 48-110V

Optional Accessories

Model No.	Product Description
1-E09A08002	Adapter AC/DC 12V 6.67A 80W with 3pin Terminal Block Plug 5.0mm Pitch
1-E09A06008	Adapter AC/DC 12V 5A 60W with 3pin Terminal Block Plug 5.0mm Pitch
SFICBL022	Power Cord, 3-pin US Type, 180cm
1-TPCD00001	Power Cord, 3-pin UK Type, 180cm
1-TPCD00002	Power Cord, European Type, 180cm
1-TDPP00003	External M12 DisplayPort Cable (CT-DPC14-1/ODS)
1-TXXX00012	External M12 S-CODE 4P PWR Cable(CT-M12CF04S-PWR/ODS)
1-TUSB00016	External Waterproof USB 3.0 Cable(CT-USB30UA-C-J-2/ODS)
1-TCOM00011	External M12 A-CODE 8P COM Cable(CT-M12CF08-A-DB9M-1/ODS)
1-TLAN00006	External M12 X-CODE 8P LAN Cable(CT-M12CM08-X-RJJ-1/ODS)
1-THDM00002	External M12 HDMI Cable(CON-HDMIAM-P01/ODS)

Chapter 1

Product Introductions

1.1 Overview

Based on Intel® Celeron® Processor J6413, WCO-3000-EHL series IP69K waterproof system are designed for wet conditions applications such as food & beverage processing, outdoor digital signage and surveillance applications. These systems are built with an extremely rugged enclosure, as well as the industrial-grade components, making these units dustproof and waterproof. WCO-3000-EHL series offers modularize flexible I/O, wide range (9~36V) DC power input, and high reliability even operating in temperature extremes (-40°C to 60°C).



1.1.1 Key Features

- Support Intel Celeron® Processor
- 1x 260-pin DDR4 SODIMM. Max up to 32GB
- Single display supported by 1x DisplayPort
- 2x LAN by M12 X-Code
- 1x RS-232/422/485 by M12 A-Code, 2x USB 3.2 Gen 2(waterproof connector)
- 1x 2.5" SATA HDD bay and 1x mSATA (shared by 1x Mini PCIe)
- 1x Full-size mini PCIe for communication or expansion modules, 2x internal SIM socket
- Full system IP69 level dustproof & waterproof
- 9 to 36VDC wide range power input supporting AT/ATX mode
- -40°C to 60°C extended operating temperature
- TPM 2.0 Supported
- 2x M12 Waterproof Cover for I/O Expansion

1.2 Hardware Specification

System	
Processor	Support Intel® EHL Processor (Up to 10W TDP) <ul style="list-style-type: none"> Intel® Celeron® Processor J6413, Quad Core, 1.5 MB Cache, 1.8 GHz, TDP 10W
System Chipset	SoC integrated
LAN Chipset	<ul style="list-style-type: none"> 1 GbE1: Intel I210 (Support Wake-on-LAN and PXE) 2.5 GbE2: Intel I225 (Support Wake-on-LAN and PXE)
Audio Codec	Realtek ALC888S
System Memory	1x 260-Pin DDR4 2400/2667/3200MT/s SODIMM. Max. up to 32 GB (In-Band ECC/non-ECC)
Graphics	Intel® UHD Graphics
BIOS	AMI 256Mbit SPI BIOS
Watchdog	Software Programmable Supports 1~255 sec. System Reset
TPM	TPM 2.0
Display	
DisplayPort	1x DisplayPort 1.4, DP++ (4096 x 2160@60Hz) or 1x HDMI (Optional)
Multiple Display	Single Display
Storage	
mSATA	1x mSATA shared by 1x Mini PCI Express
SSD/HDD	1x Internal 2.5" SATA HDD Bay
Expansion	
M.2	1x M.2 (B Key, 3042/3052, PCIe x 1 + USB 3.2 Gen2, Support 4G/5G/Hailo AI Module)
SIM Socket	2x External SIM socket
Mini PCIe	1x Full-size Mini PCIe
Operating System	
Windows	Windows 10
Linux	Linux kernel 5.X

I/O	
Audio	Internal 1x Mic-in, 1x Line-out
CAN	2x CAN 2.0 A/B 2-pin Internal header
COM	1x RS-232/422/485 by M12 A-Code
LAN	2x RJ45 by M12 X-Code
Universal I/O Bracket	2x M12 Waterproof Cover for I/O Expansion
USB	2x USB 3.2 Gen 2 Type A (Waterproof)
Others	5x WiFi Antenna Holes 1x Power Switch 1x AT/ATX Switch, Internal 1x Remote Power On/Off, Internal 1x Internal CMOS Battery Cable
Power	
Power Mode	AT, ATX (Default ATX)
Power Supply Voltage	DC IN 9~36V DC IN 48~110V, Optional
Power Ignition Sensing	Power Ignition Management (Optional)
Power Connector	M12 S-Code 4-Pin
Power Adaptor	Optional AC/DC 12V/5A, 60W Optional AC/DC 12V/6.67A, 80W for PoE
Power Protection	OVP (Over Voltage Protection) OCP (Over Current Protection) Reverse Protection
Environment	
Operating Temp.	-40°C to 60°C
Storage Temp.	-40°C to 85°C
Relative Humidity	10% to 95% (non-condensing)
Vibration	<ul style="list-style-type: none"> with SSD: 5 Grms, 5 - 500 Hz, 0.5 hr/axis with HDD: 1 Grms, 5 - 500 Hz, 0.5 hr/axis
Shock	with SSD: 50G, half sine, 11ms
Standards / Certification	CE, FCC Class A, E-Mark, IP69k
Physical	
Construction	Extruded Aluminum with Heavy Duty Metal
Dimension	<ul style="list-style-type: none"> 231 (W) x 292 (D) x 57 (H) mm
Mounting	<ul style="list-style-type: none"> Wall Mounting

*Considering that the system meets the IP69K waterproof rating, we recommend that customers allow Premio to install the required device before shipping to avoid damage to the device and ensure its waterproof and dustproof effect.

1.3 System I/O


WCO-3000-EHL

Front Panel

- **ATX power on/off switch**
Press to power-on or power-off the system
- **Antenna hole**
Used to connect an antenna for optional Wi-Fi / 5G / GPS
- **Universal I/O Bracket**
2x M12 Waterproof Cover for I/O Expansion

Front Panel


2x M12 Waterproof Cover for I/O Expansion

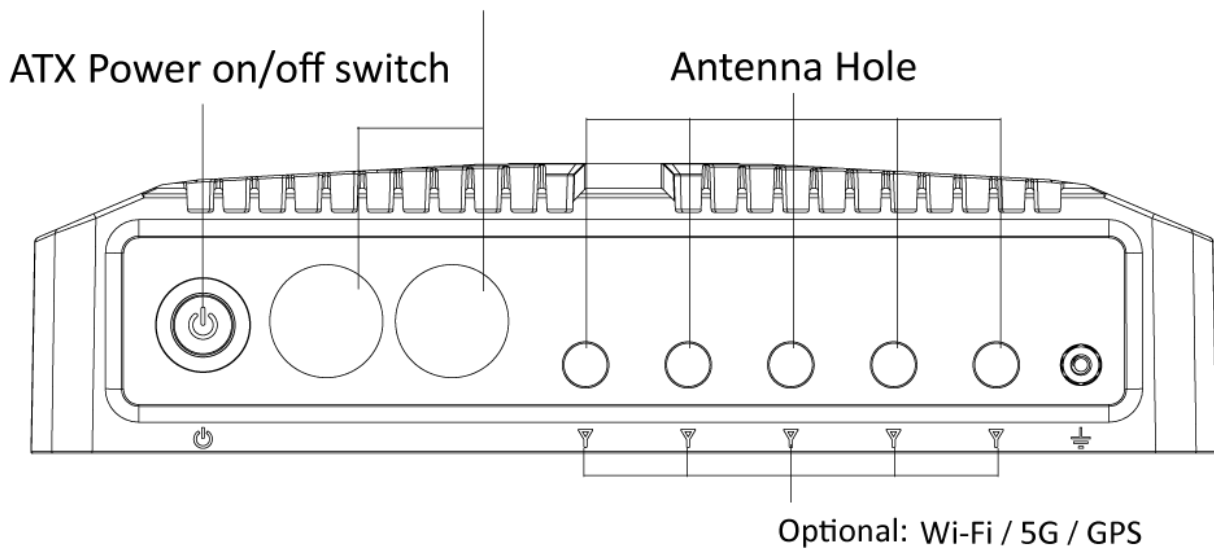

Rear Panel

- **DC IN 9-36V (M12 S-Coded)**
Optional: 48~110C
 Used to plug a DC power input with terminal block
- **DisplayPort**
 Used to connect a DisplayPort monitor
- **COM Port**
 RS-232/422/485 (M12 A-Coded)
- **LAN Port**
 2x RJ45 by M12 X-Code
- **USB Port**
 2x USB 3.2 Gen 2 Type A (Waterproof)

Rear Panel

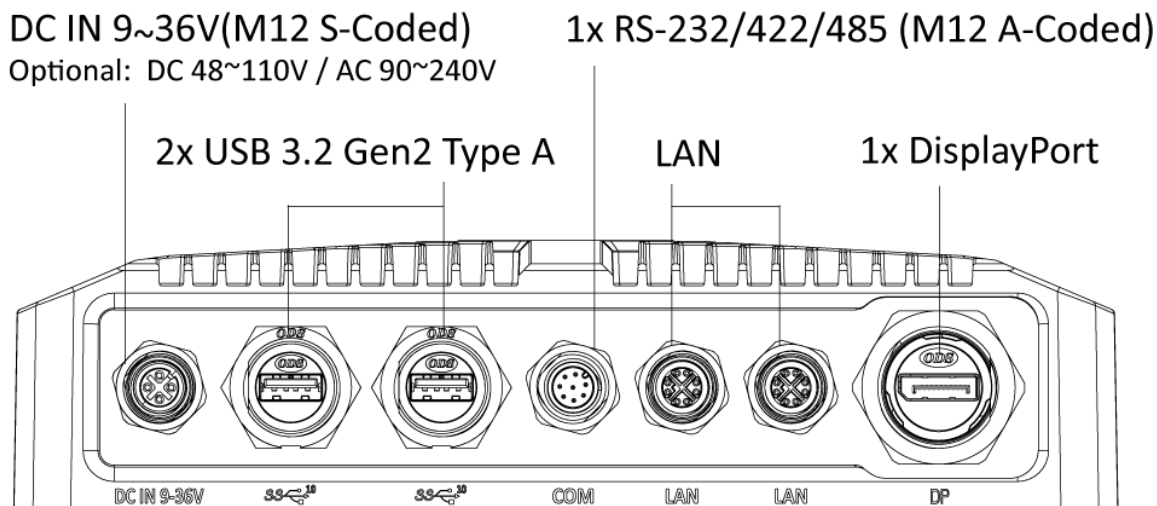


Option Summary

Model	HDMI	2 PoE	2 LAN	2 Isolated RS422 or RS485	Isolated 2 LAN	AI Hallo	5G	IGN
WCO-3000-EHL	•	•				•		•
	•	•					•	•
	•		•			•		•
	•		•			•		•
	•			•			•	•
	•			•		•		•
WCO-3000-EHL-110V	•		•			•		•
	•		•			•		•
	•			•			•	•
	•			•		•		•
	•	•				•		•
	•	•					•	•

1.4 Mechanical Dimensions

WCO-3000-EHL

Unit: mm

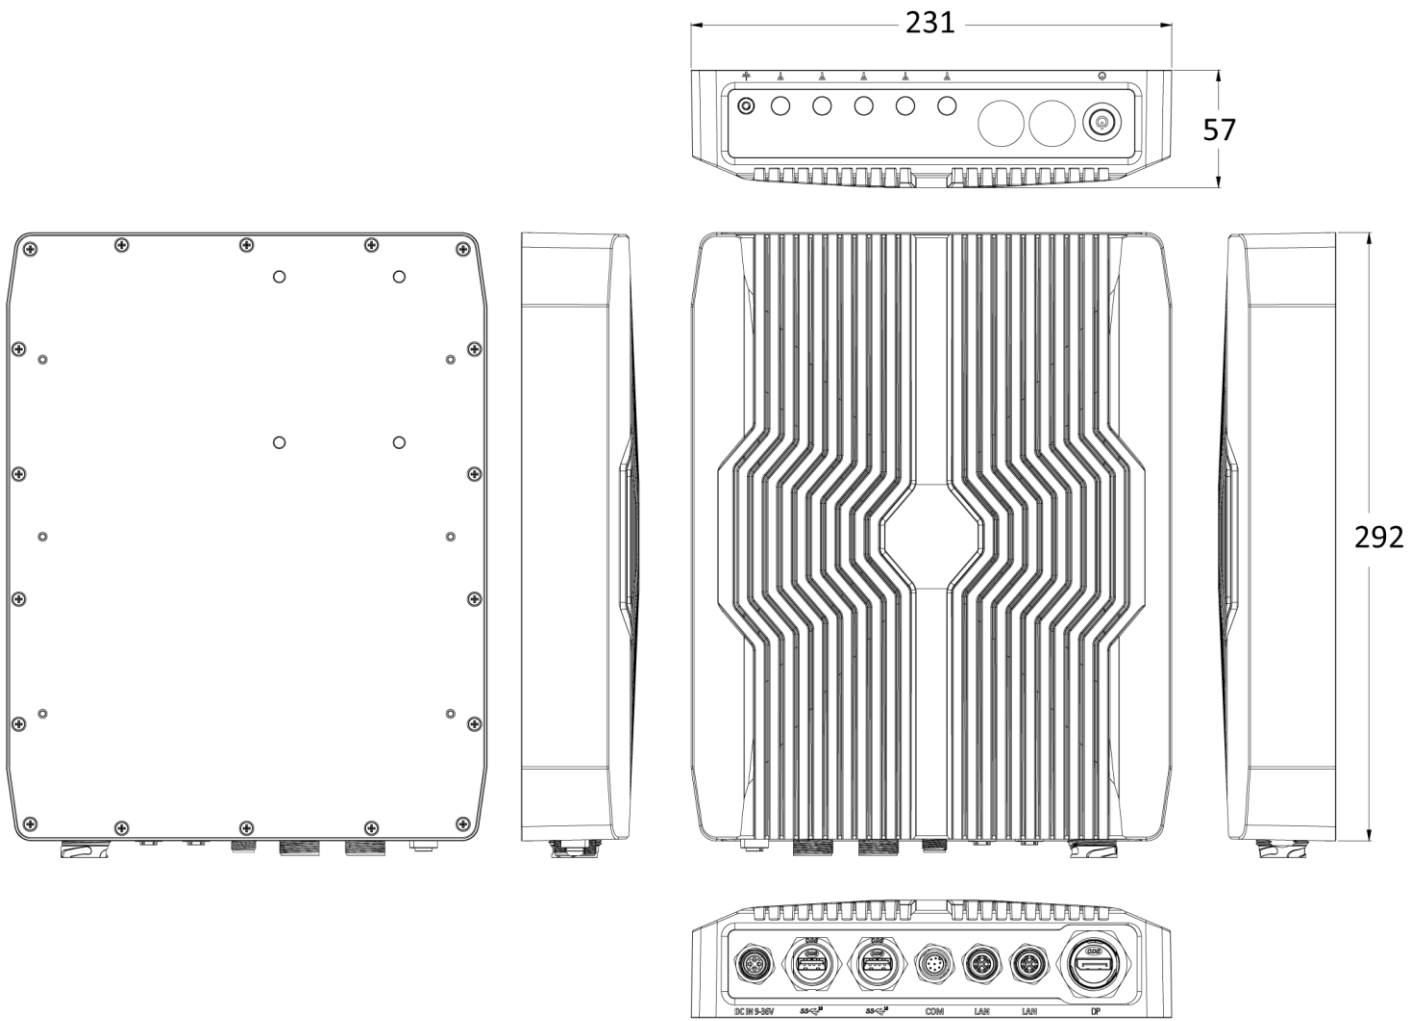


Chapter 2


Switches and Connectors

2.1 Switch and Connector Locations


2.1.1 Top View

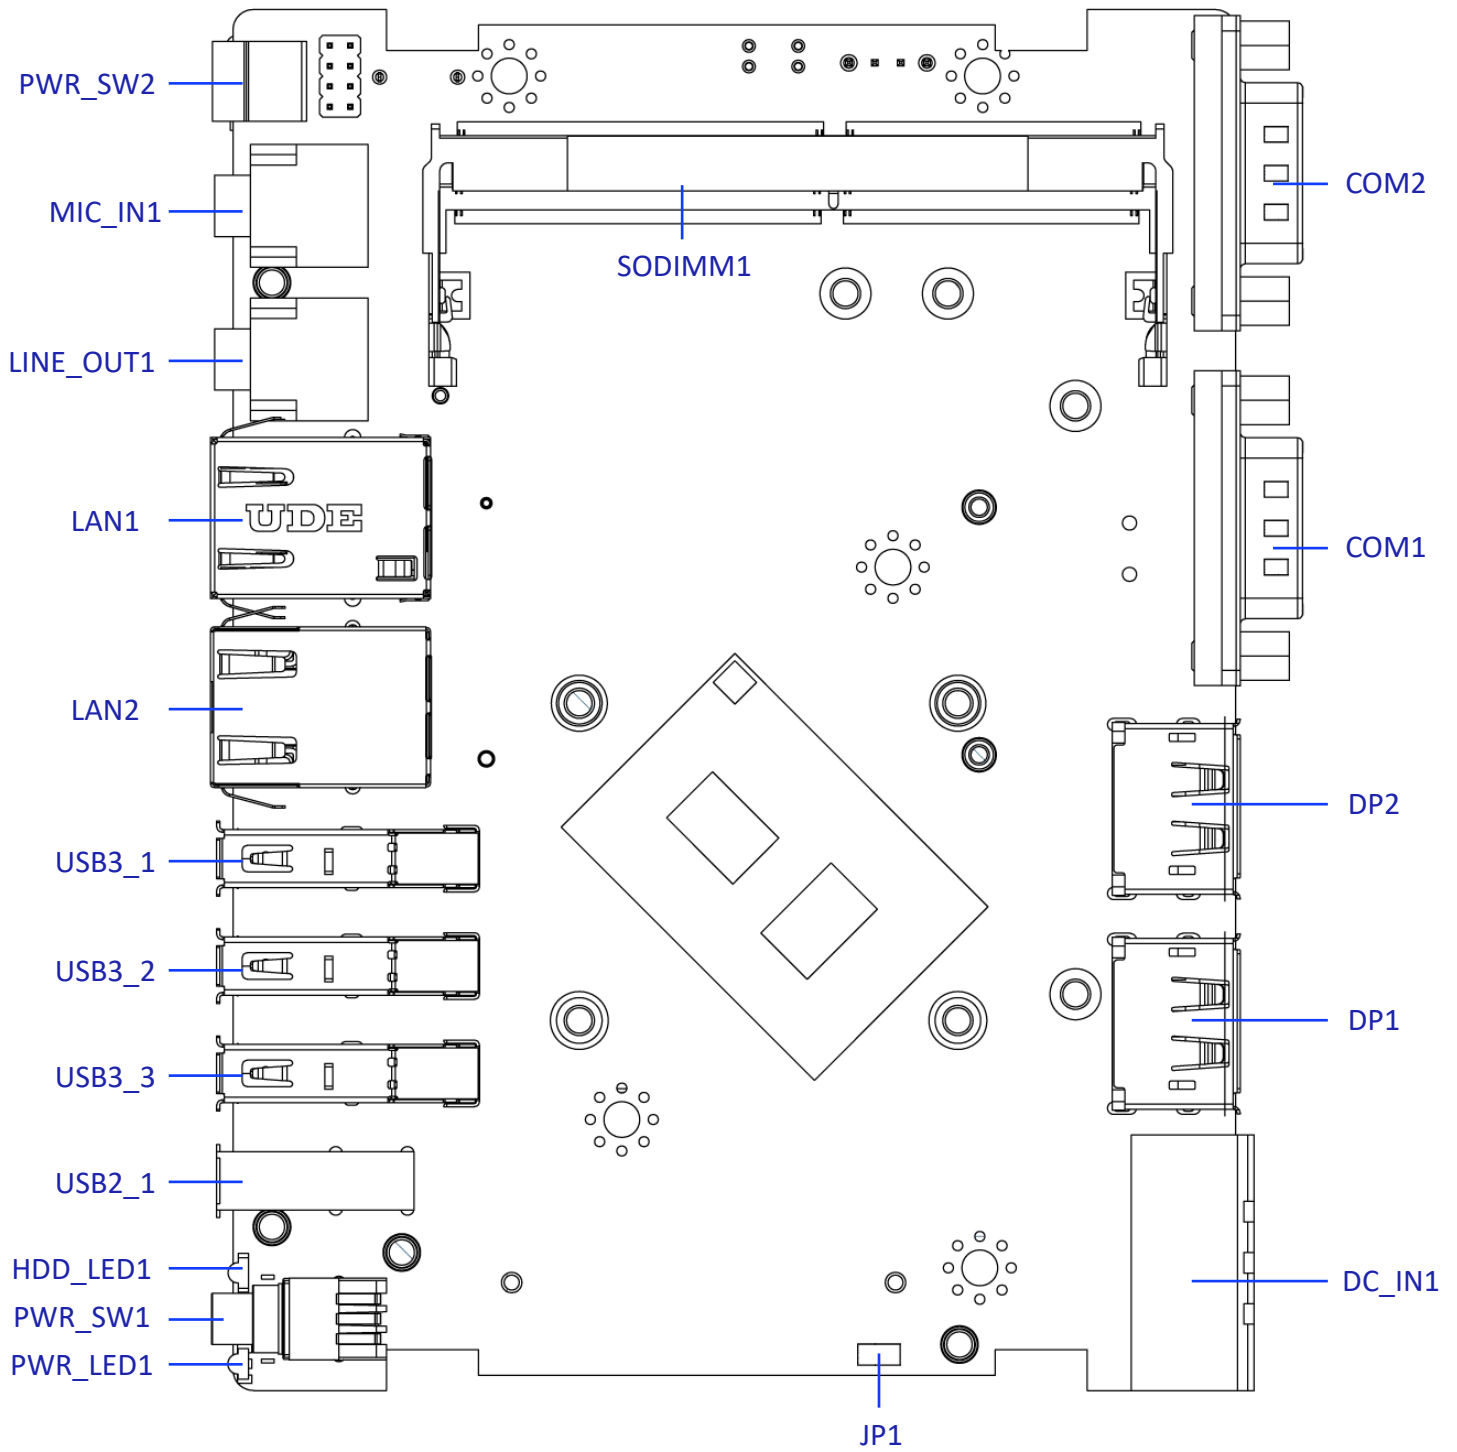

2.1.2 Bottom View

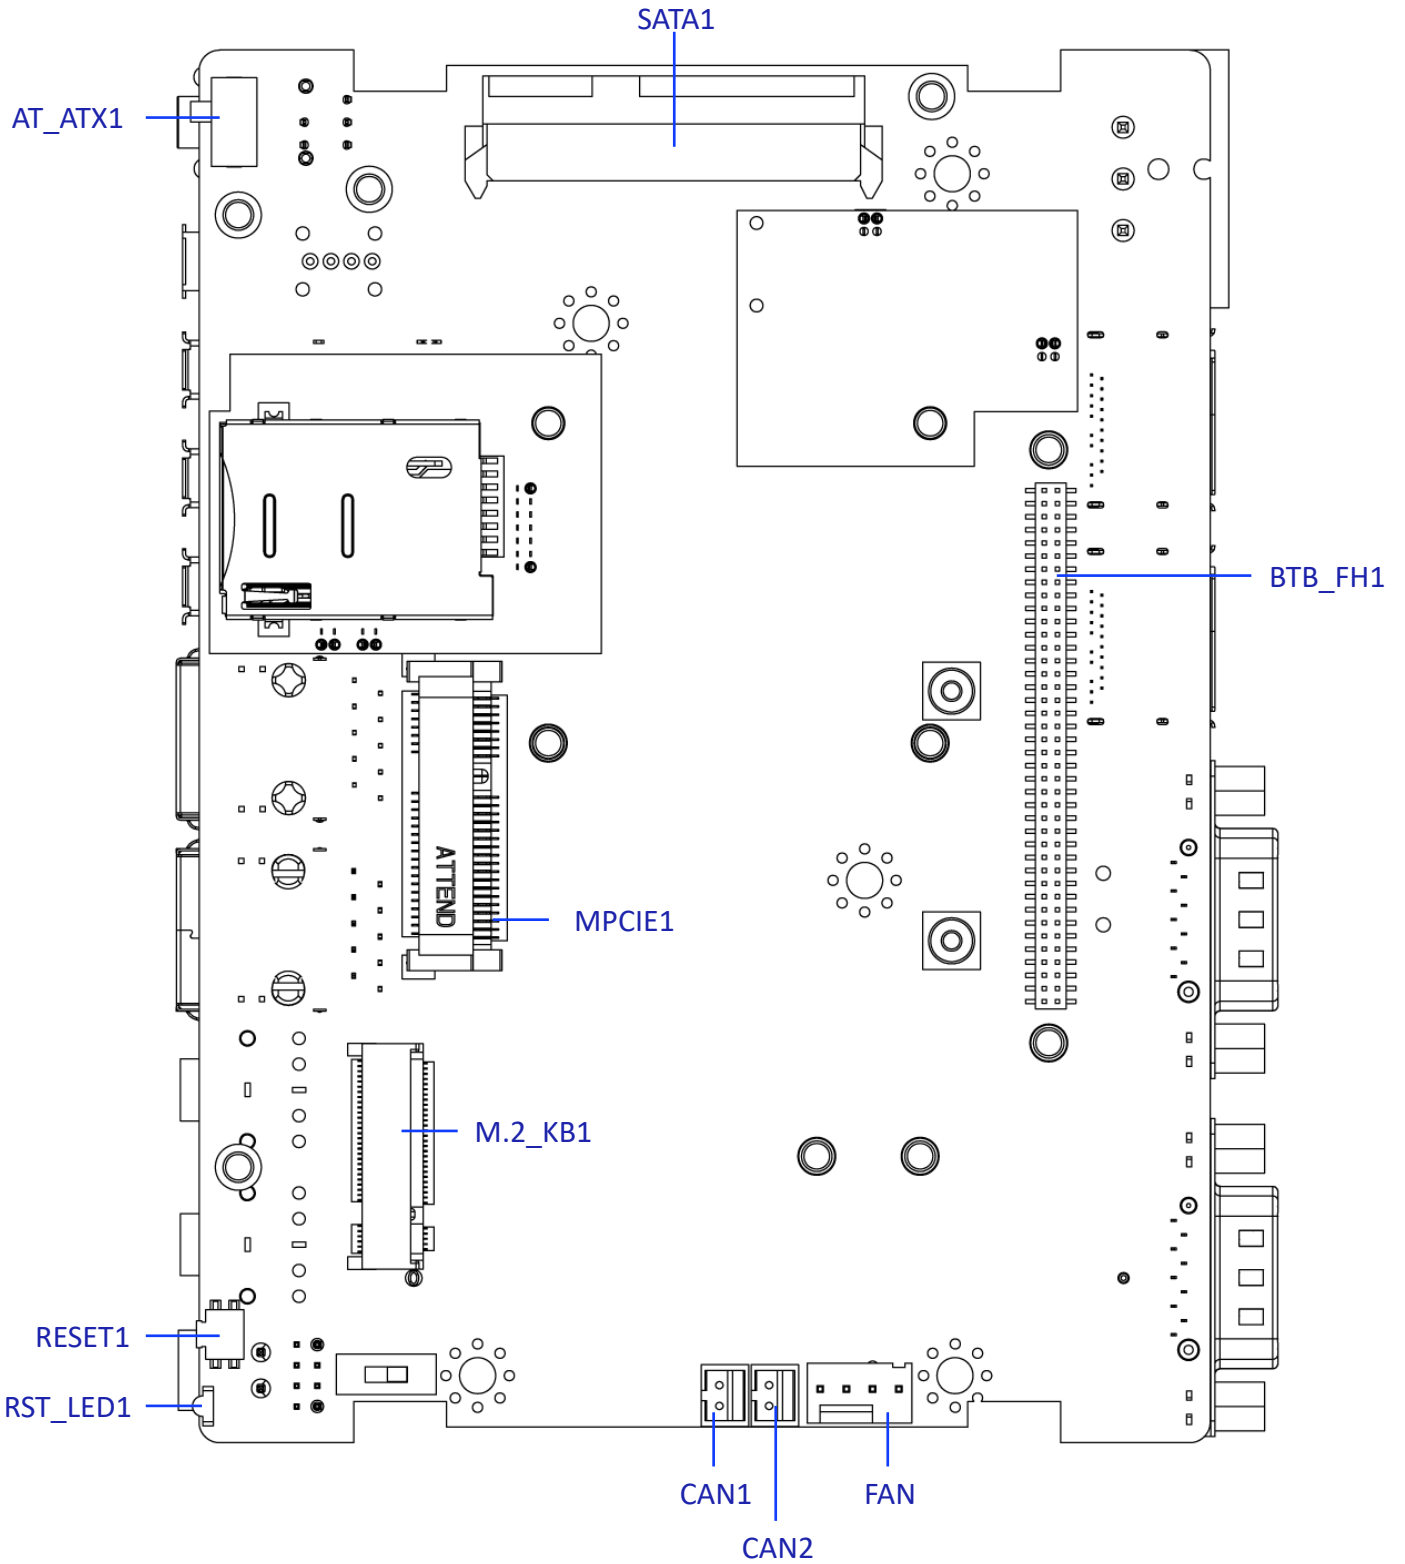

2.1.3 Daughter board view

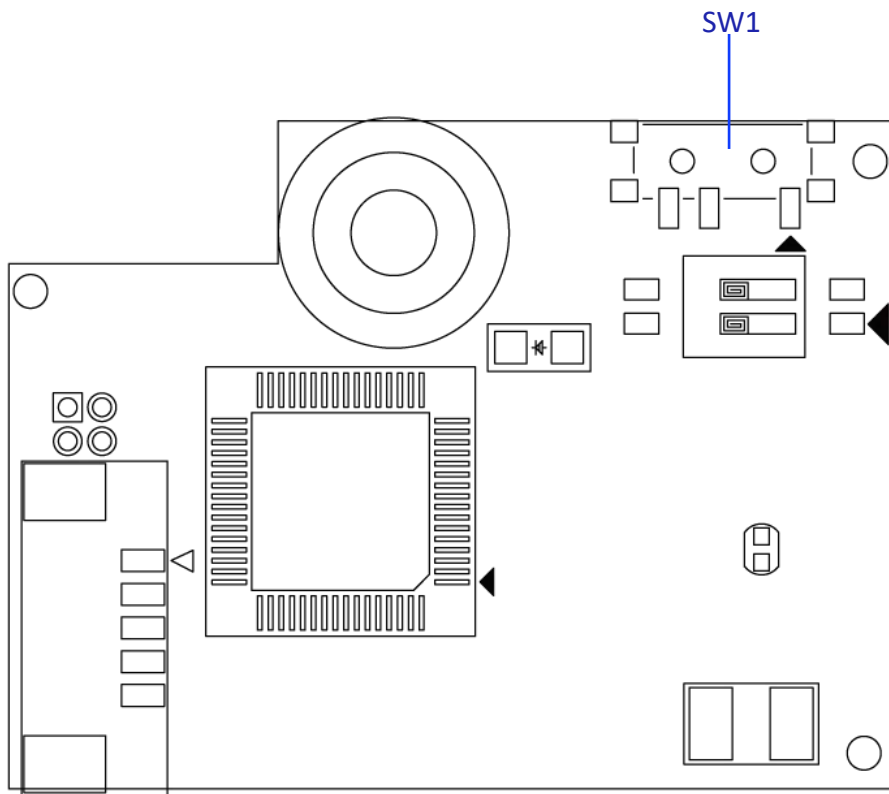

2.2 Connector / Switch Definition

List of Connector / Switch

Connector Location	Definition
DC_IN1	3-pin DC +9~36V Power Input Connector
PWR_SW1	Power Switch
PWR_SW2	Remote Power Switch
DP1 - 2	Display Port
COM1 - 2	RS232 / RS422 / RS485 Connector
USB2_1	USB2.0 Port
USB3_1 - 3	USB 3.2 Gen 2 Port
LAN1	1G bit/s LAN Port
LAN2	2.5G bit/s LAN Port
MIC_IN1	Mic-in Jack
LINE_OUT1	LINE-OUT Jack
PWR_LED1	Power LED Status
HDD_LED1	HDD Access LED Status
AT_ATX1	AT / ATX Power Mode Switch
SATA1	SATA with Power Connector
FAN	Smart FAN Connector
CAN1 - 2	CAN Bus Connector
MPCIE1	Mini PCI-Express Socket
M.2_KB1	M.2 B-Key Socket
RESET1	Reset Switch
RST_LED1	Reset LED Status
SIM1, SIM2	SIM Card Socket
DIO1	4DI/DO Connector
CN1 - 2	RS232 / RS422 / RS485 Connector
SW1	PC mode / CAR mode select



2.3 Switches Definitions

2.3.1 DC Power Input Connector (+9~36V)

DC_IN1

Connector Type: Terminal Block 1X3 3-pin, 5.0mm pitch


Switch	Definition
1	9~36 VIN
3	GND

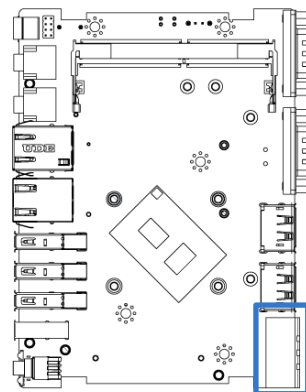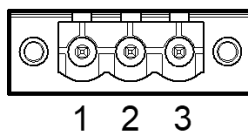

2.3.2 Power Button

PWR_SW1

Pin	Definition	Pin	Definition
1	NC	4	GND
2	Power Button	5	NC
3	NC	6	GND

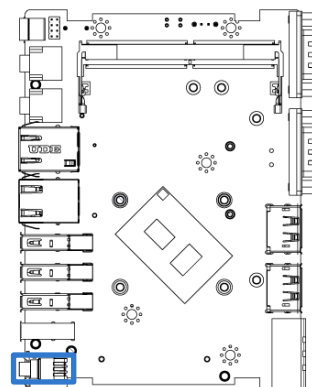


2.3.3 Remote Power Switch



PWR_SW2

Connector Type: Terminal Block 1X2 2-pin, 3.5mm pitch

Pin	Definition
1	Power Button
2	GND

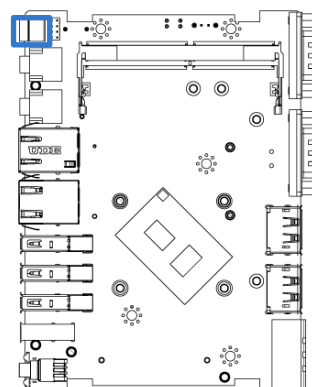



2.3.4 DisplayPort Connector

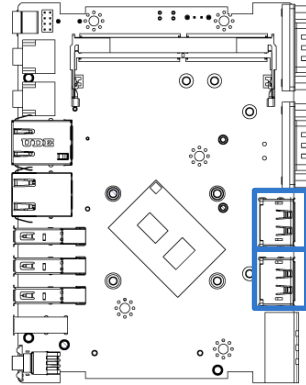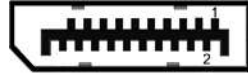

DP1-2

Pin	Definition	Pin	Definition
1	DP_LANE0_P	11	GND
2	GND	12	DP_LANE3_N
3	DP_LANE0_N	13	GND
4	DP_LANE1_P	14	GND
5	GND	15	DP_AUX_P
6	DP_LANE1_N	16	GND
7	DP_LANE2_P	17	DP_AUX_N
8	GND	18	DP_HPD
9	DP_LANE2_N	19	GND
10	DP_LANE3_P	20	DP_PWR

2.3.5 RS232 / RS422 / RS485 Connector

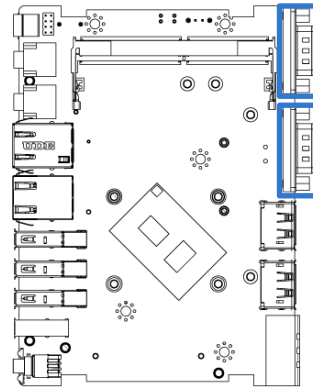

COM1-2



Connector Type: 9-pin D-Sub

Pin	RS232 Definition	RS422 / 485 Full Duplex Definition	RS485 Half Duplex Definition
1	DCD2	TX2-	DATA2-
2	RxD2	TX2+	DATA2+
3	TxD2	RX2+	
4	DTR2	RX2-	
5	GND		
6	DSR2		
7	RTS2		
8	CTS2		
9	RI2		

2.3.6 USB2.0 Connector, Type A

USB2_1



Pin	Definition
1	+5V
2	USB2_D2-
3	USB2_D2+
4	GND

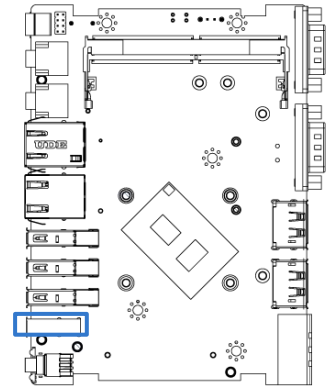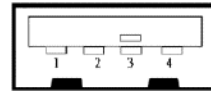

2.3.7 USB 3.2 Connector, Type A

USB3_1-3



Pin	Definition	Pin	Definition
1	+5V	6	USB3_RX+
2	USB2_DATA1-	7	GND
3	USB2_DATA1+	8	USB3_TX-
4	GND	9	USB3_TX+
5	USB3_RX-		

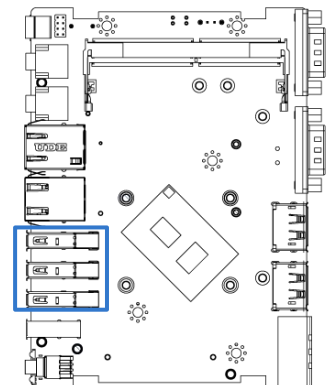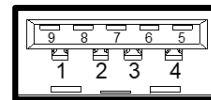

2.3.8 RJ45 with LEDs Port

LAN1



Pin	Definition	Pin	Definition
1	LAN1_MDI0P	5	LAN1_MDI2N
2	LAN1_MDI0N	6	LAN1_MDI1N
3	LAN1_MDI1P	7	LAN1_MDI3P
4	LAN1_MDI2P	8	LAN1_MDI3N

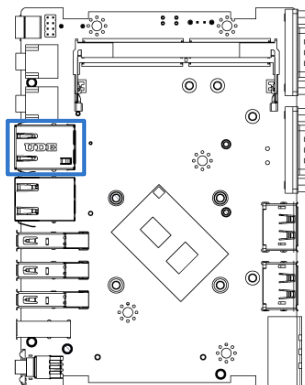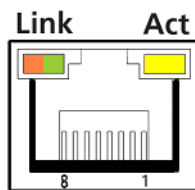

Link LED Status	Definition	Act LED Status	Definition
Steady Orange	1Gbps Network Link	Blinking Yellow	Data Activity
Steady Green	100Mbps Network Link	Off	No Activity
Off	10Mbps Network Link		

LAN2

Pin	Definition	Pin	Definition
1	LAN1_MDI0P	5	LAN1_MDI2N
2	LAN1_MDI0N	6	LAN1_MDI1N
3	LAN1_MDI1P	7	LAN1_MDI3P
4	LAN1_MDI2P	8	LAN1_MDI3N

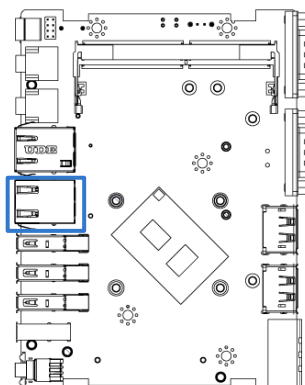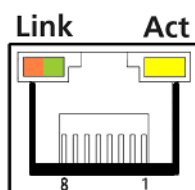


Link LED Status	Definition	Act LED Status	Definition
Steady Orange	1Gbps Network Link	Blinking Yellow	Data Activity
Steady Green	2.5Gbps Network Link	Off	No Activity
Off	10Mbps Network Link		

2.3.9 Microphone Jack (Pink)

MIC_IN1

Connector Type: 5-pin Phone Jack

Pin	Definition
1	GND
2	MIC_R
3	NC
4	GND
5	MIC_L

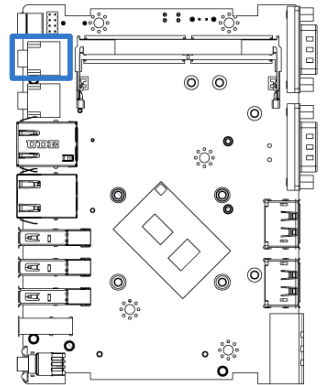


2.3.10 Line-out Jack (Green)

LINE_OUT1

Connector Type: 5-pin Phone Jack

Pin	Definition
1	GND
2	OUT_R
3	NC
4	GND
5	OUT_L

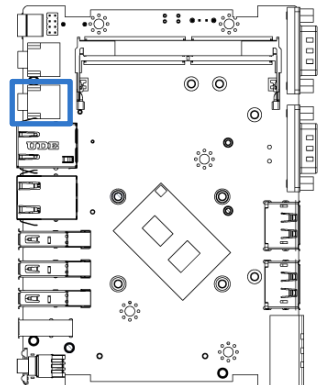

PWR_LED1: Power LED Status

Pin	Definition
1	POWER LED+
2	POWER LED-



HDD_LED1: HDD Access LED Status

Pin	Definition
1	HDD LED+
2	HDD LED-



RESET1 : Reset Button



Pin	Definition
1	RESET
2	GND



RST_LED1: Power LED Status

Pin	Definition
1	RST LED
2	RST LED



2.3.11 AT / ATX Power Mode Switch

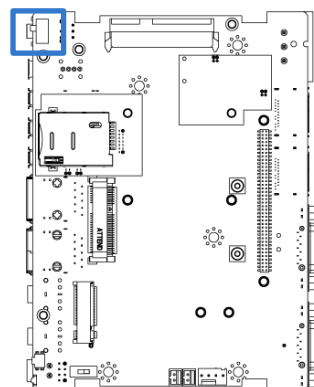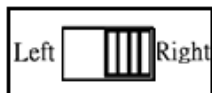

AT_ATX1

Switch	Definition
1-2 (Right)	ATX Power Mode (Default)
2-3 (Left)	AT Power Mode

2.3.12 SATA with Power Connector

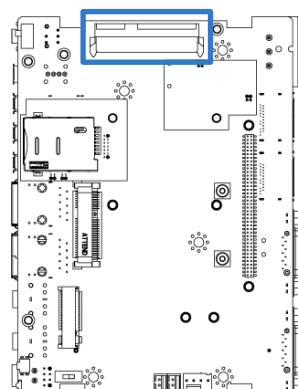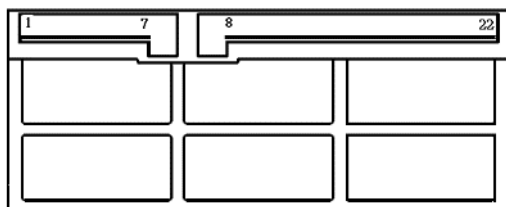



SATA1

Pin	Definition	Pin	Definition
1	GND	12	GND
2	SATA_TXP1	13	GND
3	SATA_TXN1	14	+5V
4	GND	15	+5V
5	SATA_RXN1	16	+5V
6	SATA_RXP1	17	GND
7	GND	18	GND
8	+3.3V	19	GND
9	+3.3V	20	+12V
10	+3.3V	21	+12V
11	GND	22	+12V

2.3.13 Smart FAN Connector

FAN



Pin	Definition
1	GND
2	+12V
3	FANIN
4	FANCTL

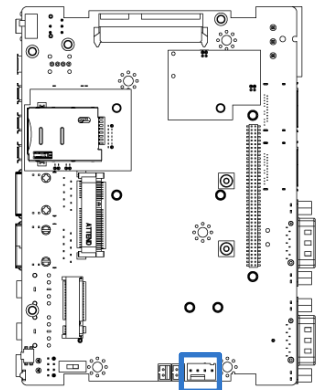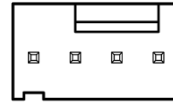


2.3.14 CAN Bus Connector

CAN 1-2

Pin	Definition
1	CAN_H
2	CAN_L

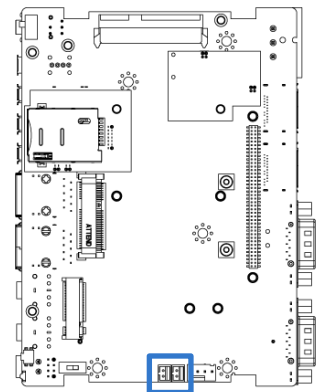



2.3.15 Mini PCI-Express / mSATA Socket

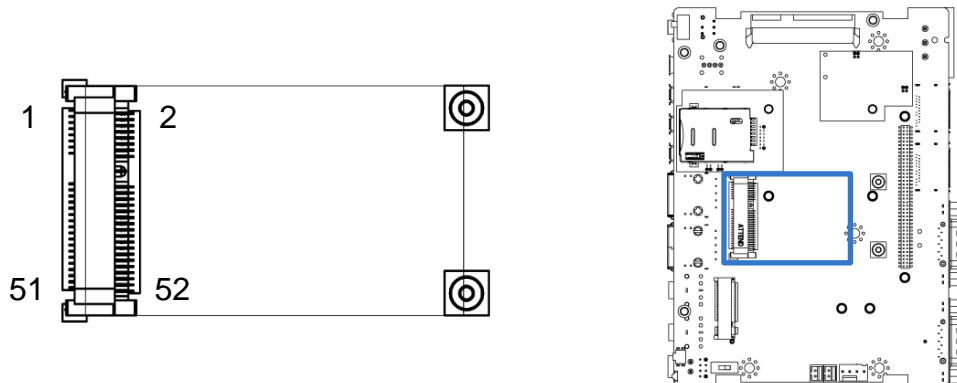

MPCIE1

Pin	Definition	Pin	Definition	Pin	Definition
1	WAKE#	19	NC	37	GND
2	+3.3V	20	+3.3V	38	USB_DP1
3	NC	21	GND	39	+3.3V
4	GND	22	MINIPCIE_RST#	40	GND
5	NC	23	MINIPCIE_RXN1	41	+3.3V
6	+1.5V	24	+3.3V	42	NC
7	CLKREQ1#	25	MINIPCIE_RXP1	43	GND
8	USIM_VCC	26	GND	44	NC
9	GND	27	GND	45	NC
10	USIM_DATA	28	+1.5V	46	NC
11	MINIPCIE_CLKN1	29	GND	47	NC
12	USIM_CLK	30	SMB_CLK	48	+1.5V
13	MINIPCIE_CLKP1	31	MINIPCIE_TXN1	49	NC
14	USIM_RST	32	SMB_DATA	50	GND
15	GND	33	MINIPCIE_TXP1	51	NC
16	USIM_VPP	34	GND	52	+3.3V
17	NC	35	GND		
18	GND	36	USB_DN1		



2.3.16 M.2 B Key Socket

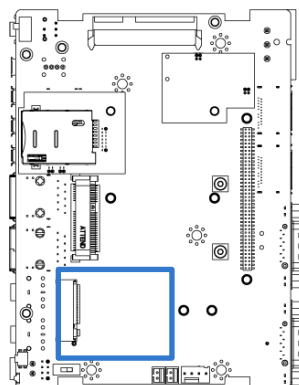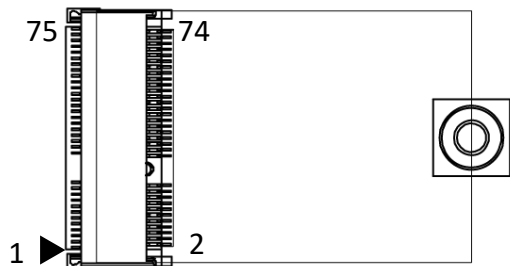

M2_KB1

Pin	Definition	Pin	Definition
1	+3.3V	2	+3.3V
3	GND	4	+3.3V
5	GND	6	+1.8S
7	USB2_D+	8	+3.3V
9	USB2_D-	10	NC
11	GND		
21	+3.3V	20	NC
23	NC	22	NC
25	NC	24	NC
27	GND	26	NC
29	USB_RxNO	28	NC
31	USB_RxPO	30	SIM_RST
33	GND	32	SIM_CLK
35	USB_TxNO	34	SIM_DATA
37	USB_TxPO	36	SIM_VDD
39	GND	38	NC
41	PCIE_RxNO	40	NC
43	PCIE_RxPO	42	NC
45	GND	44	NC
47	PCIE_TxNO	46	NC
49	PCIE_TxPO	48	NC
51	GND	50	PCIE_RST#
53	REFCLK1-	52	CLK_REQ#
55	REFCLK1+	54	PCIE_WAKE#
57	GND	56	NC
59	NC	58	NC
61	NC	60	NC
63	NC	62	NC
65	NC	64	NC
67	NC	66	NC
69	+3.3V	68	NC
71	GND	70	+3.3V
73	GND	72	+3.3V
75	+3.3V	74	+3.3V

2.3.17 SIM Card Socket

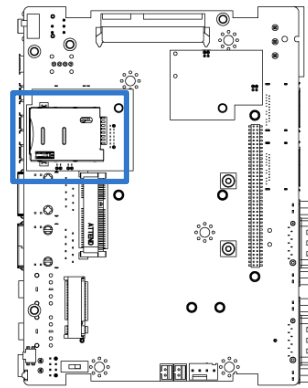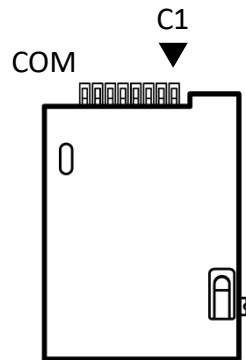

SIM1 - 2


Pin	Definition	Pin	Definition
C1	UIM_PWR	C6	UIM_VPP
C2	UIM_RESET	C7	UIM_DATA
C3	UIM_CLK	CD	NC
C5	GND	COM	GND

2.3.18 Digital Input / Output Connector


DIO1

Connector Type: Terminal Block 1X10 10-pin, 3.5mm pitch


Pin	Definition	Pin	Definition
1	DC INPUT	6	DO1
2	DI1	7	DO2
3	DI2	8	DO3
4	DI3	9	DO4
5	DI4	10	GND

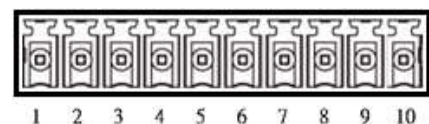


Reference Input Circuit

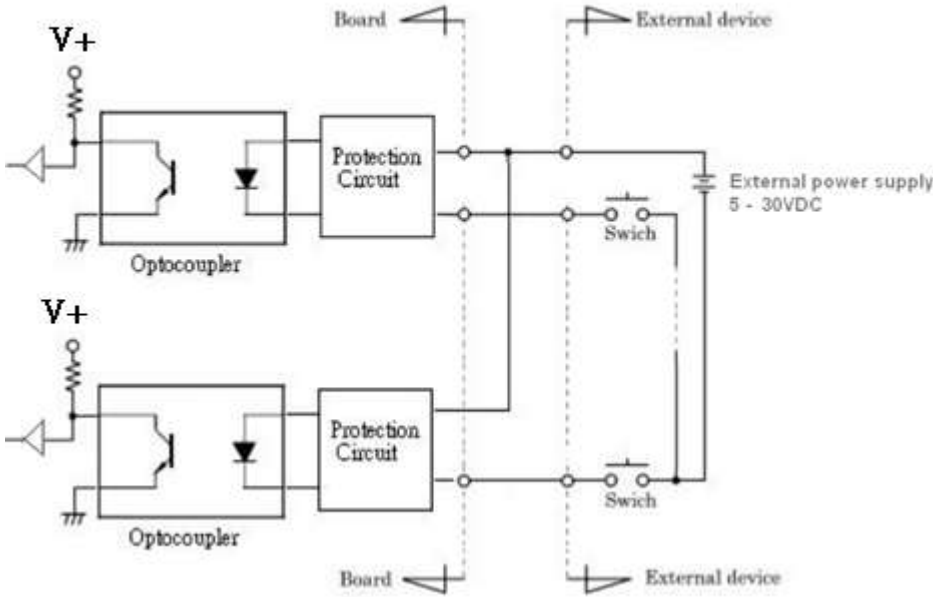


Digital Input Wiring

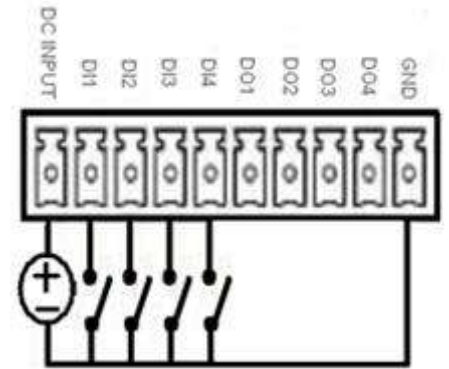

External Output Circuit

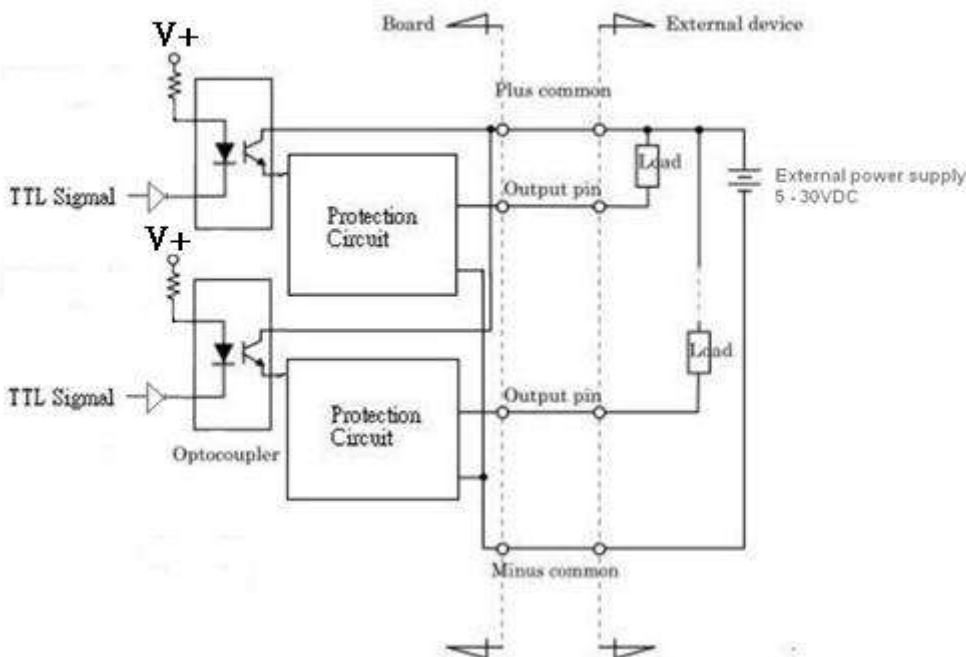

Digital Output Wiring

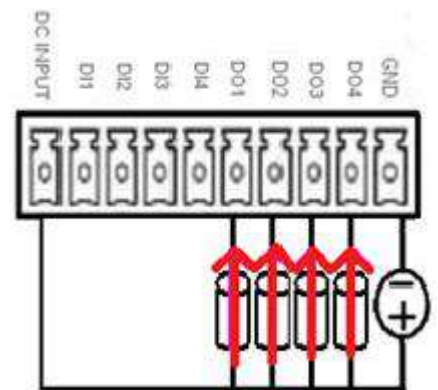


2.3.19 RS232 / RS422 / RS485 Connector


CN1 – 2

Connector Type: 9-pin D-Sub

Pin	RS232 Definition	RS422 / 485 Full Duplex Definition	RS485 Half Duplex Definition
1	DCD3 (DCD5)	TX3- (TX5-)	DATA3- (DATA5-)
2	RxD3 (RxD5)	TX3+ (TX5+)	DATA3+ (DATA5+)
3	TxD3 (TxD5)	RX3+ (RX5+)	
4	DTR3 (DTR5)	RX3- (RX5-)	
5	GND		
6	DSR3 (DSR5)		
7	RTS3 (RTS5)		
8	CTS3 (CTS5)		
9	RI3 (RI5)		



2.3.20 PC / CAR Mode Switch

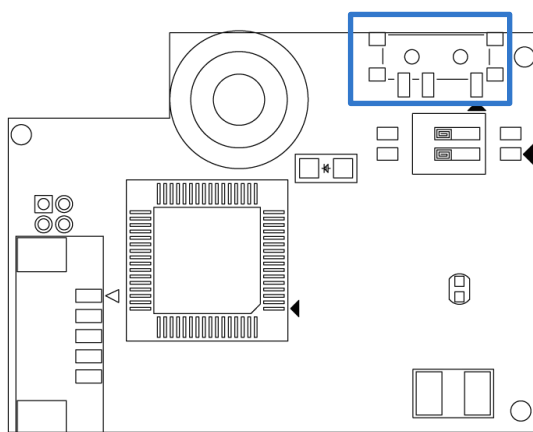

SW1

Pin	Definition
1-2	PC Mode
2-3	CAR Mode

Chapter 3

System Setup

3.1 Set torque force to 3.5 kgf-cm to execute all the screwing and unscrewing.

**WARNING**

In order to prevent electric shock or system damage, before removing the chassis cover, must turn off power and disconnect the unit from power source.

3.2 Replace HDD on the internal SATA HDD bay

1. Turn the computer upside down, remove the chassis bottom cover and unscrew the sixteen screws (3x5L) on the bottom cover.




2. Then remove the bottom cover.



3.3 Installing mini PCIe WiFi card / mSATA


1. One mini PCIe slot is available for the WCO-3000-EHL series. PCIe WiFi card or mSATA module. This installation uses an mSATA card.

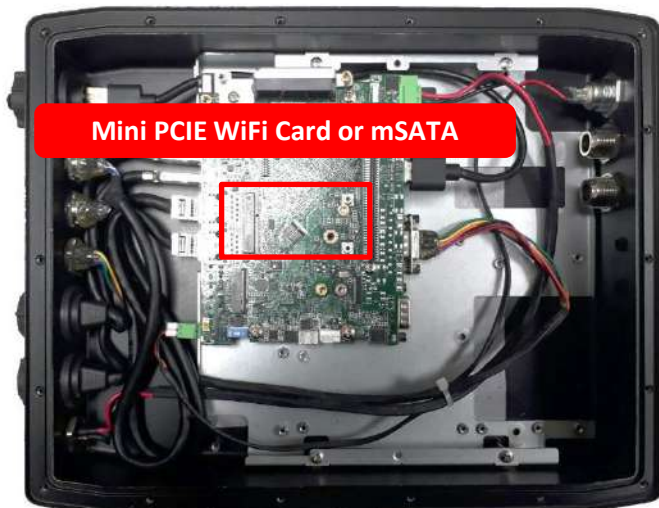

2. Insert a mini PCIe WiFi card or mSATA module from 45-degree direction




3. Press the mini PCIe WiFi card or mSATA module down and lock it with two screws (M2x3.7L).

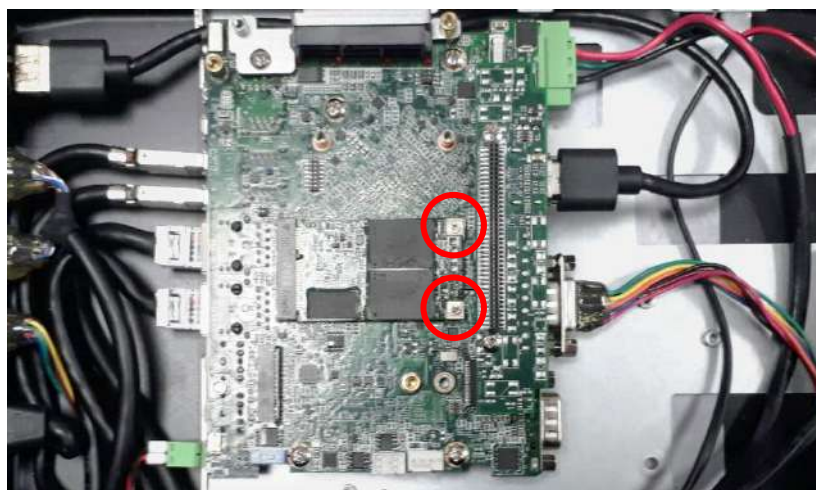


3.4 Installing M.2 B Key


1. . One M.2 B Key slots are available for WCO-3000-EHL series. 5G LTE Card module.

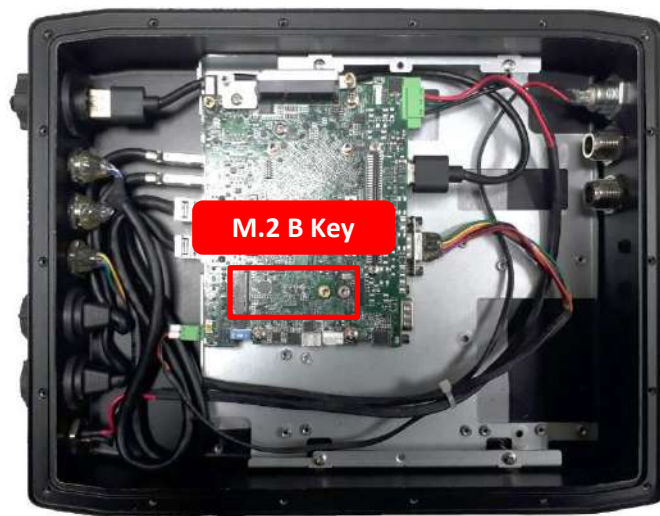

2. Insert 5G LTE card module from 45 degree direction.

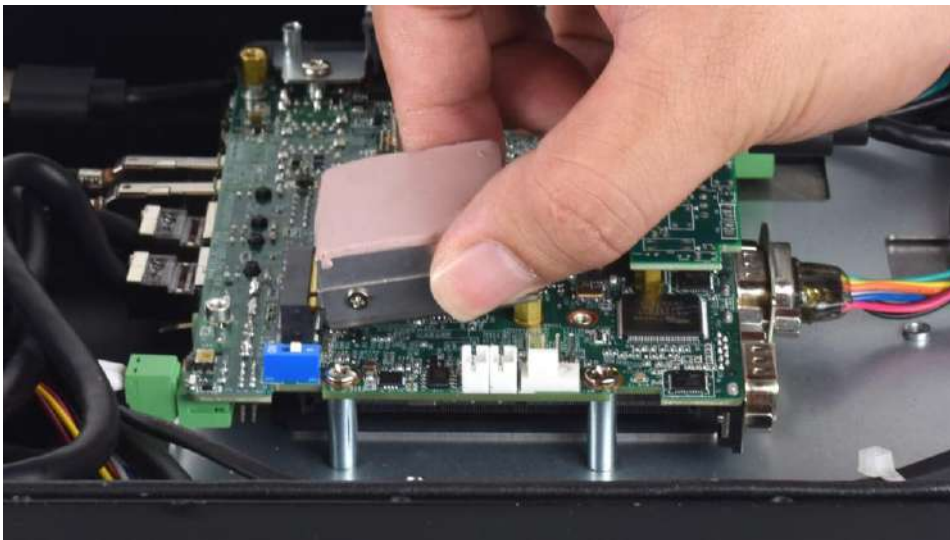


3. Press the 5G LTE card module down and lock it with one screws (M3x4L).

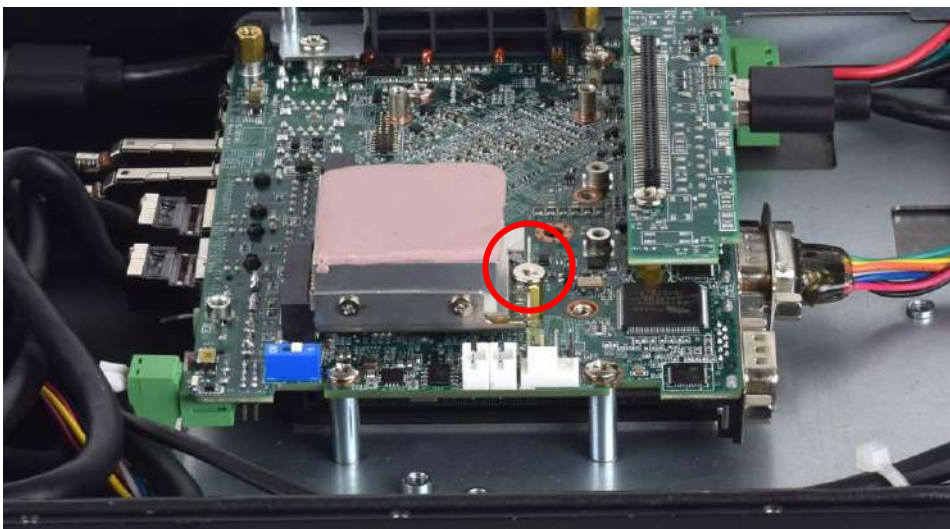


3.5 Installing antenna

1. five antenna holes are available for WCO-3000-EHL series. (WCO-3000-EHL only)

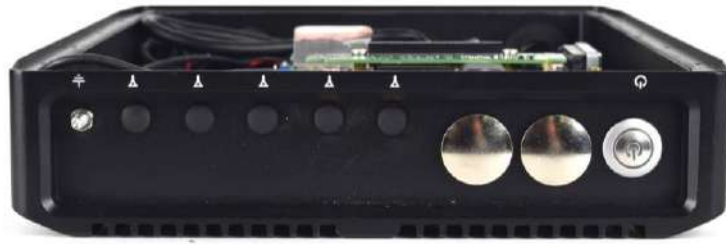


2. Remove the antenna hole cover on the computer

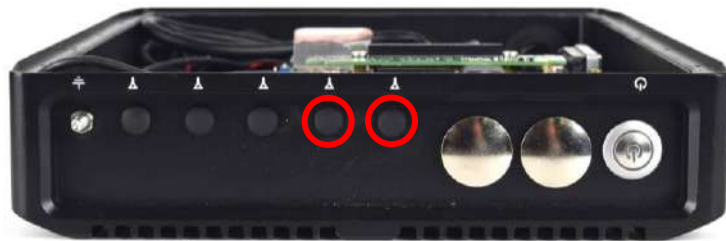

3. Have the antenna jack penetrate through the hole, put on the washer, and fasten the nut with the antenna jack.



4. Attach the RF connector at the cable-end onto the communication module.

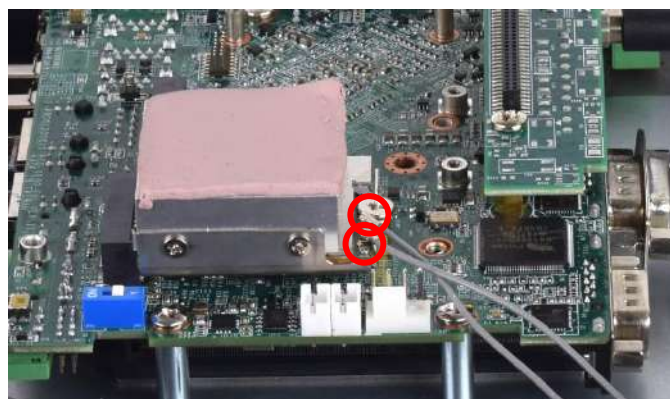

5. Assemble the antenna and antenna jack together.



3.6 Assemble chassis bottom cover

1. Place the bottom cover according to the below direction and make sure the rail is facing inside the system.



2. Lock the bottom cover with the sixteen screws(3X5L).



3.7 Assemble waterproof cable

1. Please remove the external waterproof cover on the connectors that you need to connect to mating waterproof cables.



2. Install external M12 A-CODE 4P power cable. Please align the foolproof opening and tighten the locking ring to secure the waterproof cable.



3. Install two external waterproof USB 3.0 cables. Please align the foolproof opening and tighten the locking ring to secure the waterproof cable.



4. Install external M12 A-CODE 8P COM cable. Please align the connector direction and tighten the locking ring to secure the waterproof cable.



5. Install two external M12 X-CODE 8P LAN cable. Please align the foolproof opening and tighten the locking ring to secure the waterproof cable.



6. Install external HDMI cable. Please align the foolproof opening and tighten the locking ring to secure the waterproof cable.



7. Diagram of the completed waterproof cable installation.



Chapter 4

BIOS Setup

4.1 BIOS Introduction

The BIOS provides an interface to modify the configuration. When the battery is removed, all the parameters will be reset.

BIOS Setup

Power on the embedded system and by pressing immediately allows you to enter the setup screens. If the message disappears before you respond and you still wish to enter the Setup, restart the system by turning it OFF and ON or pressing the RESET button.

You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

Control Keys	
<→> <←>	Select Screen
<↑> <↓>	Select Item
<Enter>	Select
<Page Up/+>	Increases the numeric value or makes changes
<Page Down/->	Decreases the numeric value or makes changes
<F1>	General Help
<F2>	Previous Value
<F3>	Load Optimized Defaults
<F4>	Save Configuration and Exit
<Tab>	Select Setup Fields
<Esc>	Exit BIOS Setup

Main Setup


The main menu lists the setup functions you can make changes to. You can use the arrow keys (↑↓) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

4.2 Main Setup

Press to enter BIOS CMOS Setup Utility. The Main setup screen is showed as following when the setup utility is entered. System Date/Time is set up in the Main Menu.

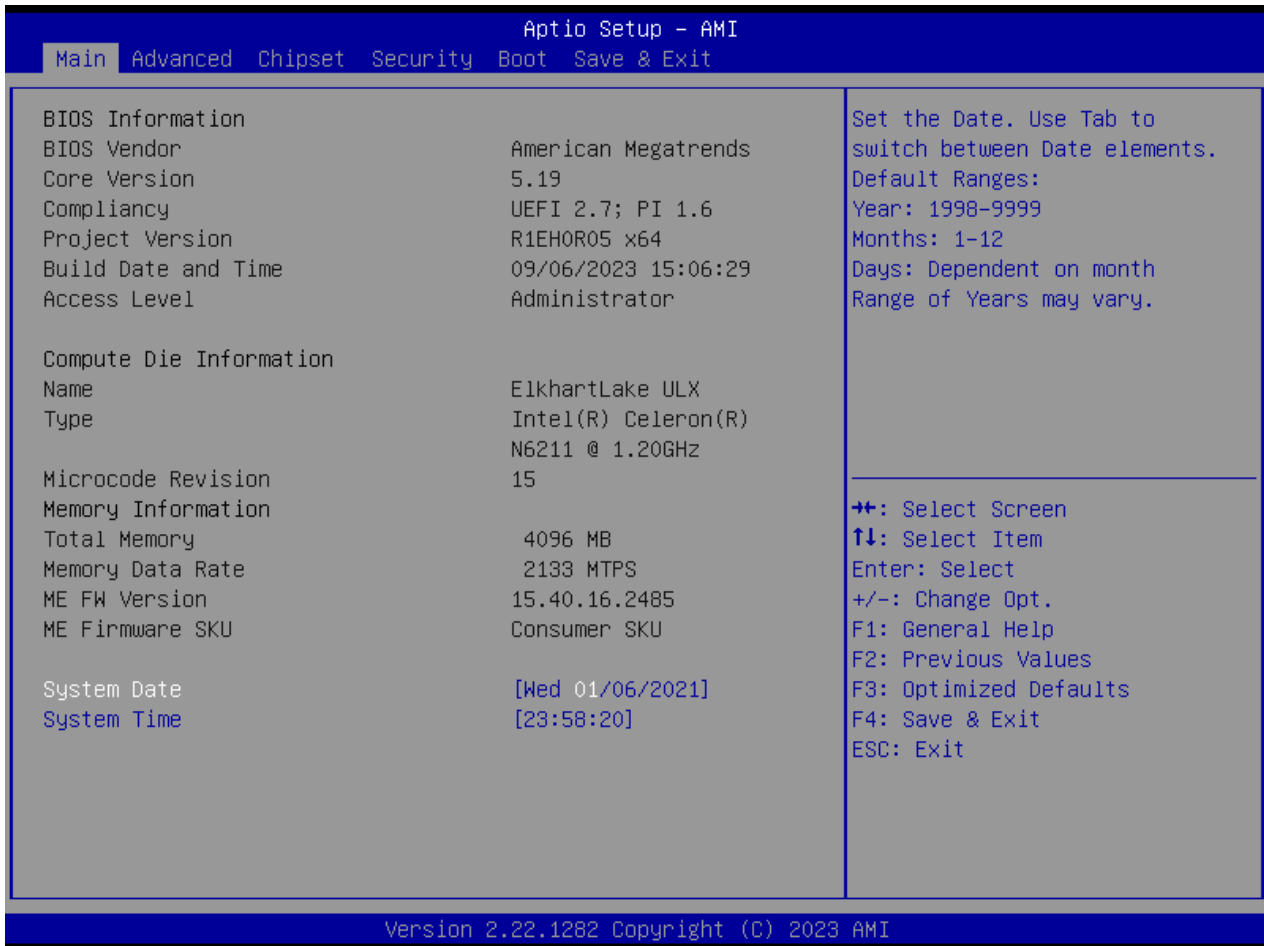


■ System Date

Set the system date. Please use <Tab> to switch between data elements.

■ System Time

Set the system time. Please use <Tab> to switch between time elements.

4.3 Advanced Setup

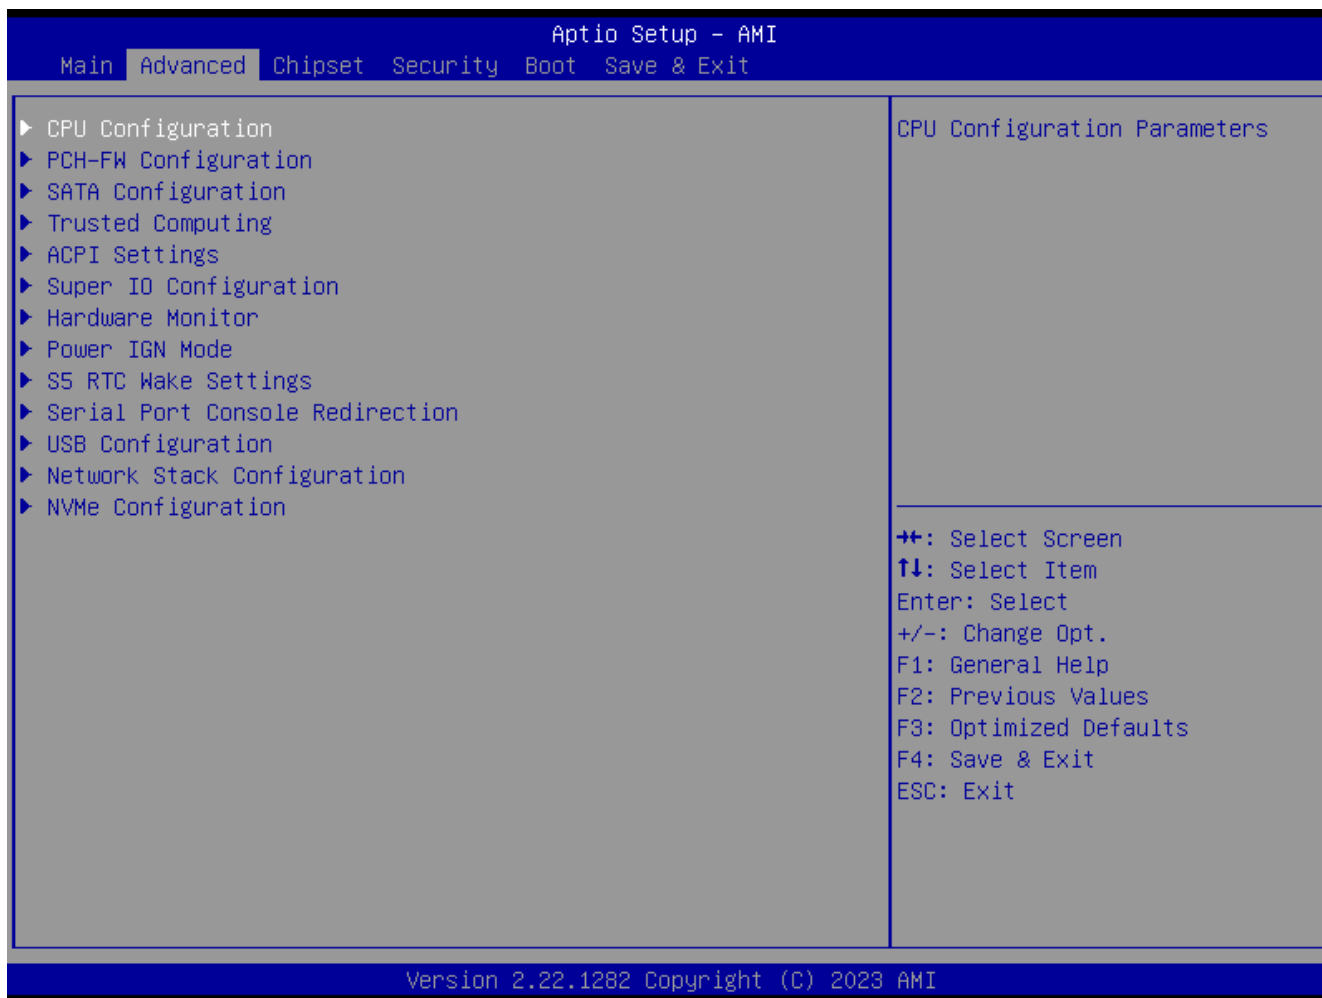

4.3.1 CPU Configuration

Aptio Setup - AMI


Advanced

CPU Configuration		When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
Type	Intel Atom(R) x6425RE Processor @ 1.90GHz	
ID	0x90661	
Speed	1900 MHz	
L1 Data Cache	32 KB x 4	
L1 Instruction Cache	32 KB x 4	
L2 Cache	1536 KB x 4	
L3 Cache	4 MB	
L4 Cache	N/A	
VMX	Supported	
SMX/TXT	Not Supported	++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Intel (VMX) Virtualization Technology	[Enabled]	
Active Processor Cores	[All]	
C states	[Enabled]	


Version 2.22.1282 Copyright (C) 2022 AMI

Item	Options	Description
Intel (VMX) Virtualization Technology	Disabled, Enabled[Default]	When enabled, a VMM can utilize the additional hardware capabilities provided by Virtualization Technology.
Active Processor Cores	All[Default] 1 2 3	Number of cores to enable in each processor package.
C states	Disabled, Enabled[Default]	Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.

4.3.2 PCH-FW Configuration

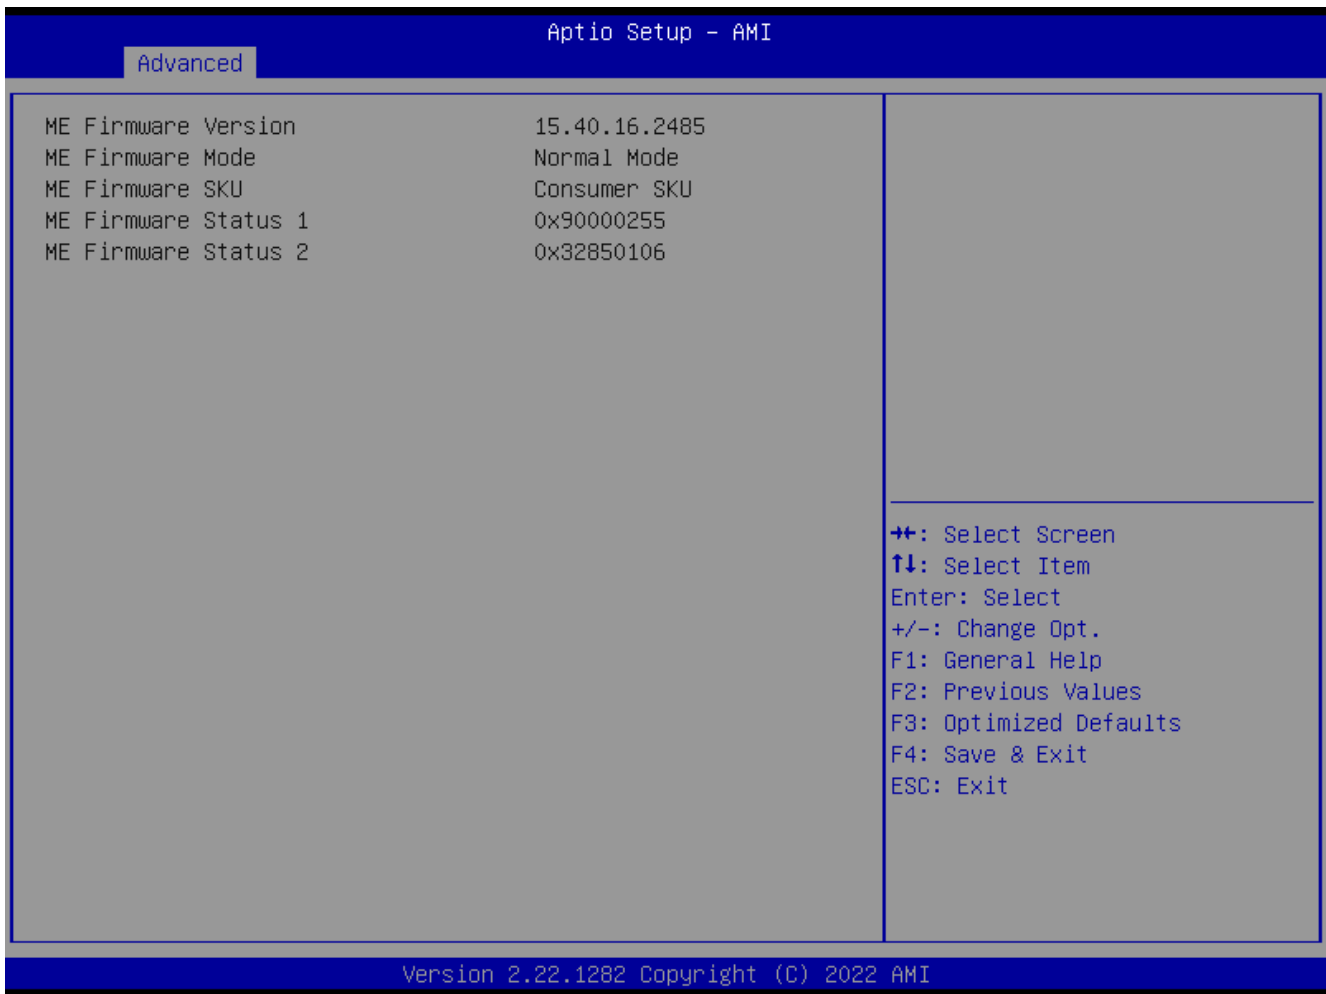

4.3.3 SATA and RST Configuration

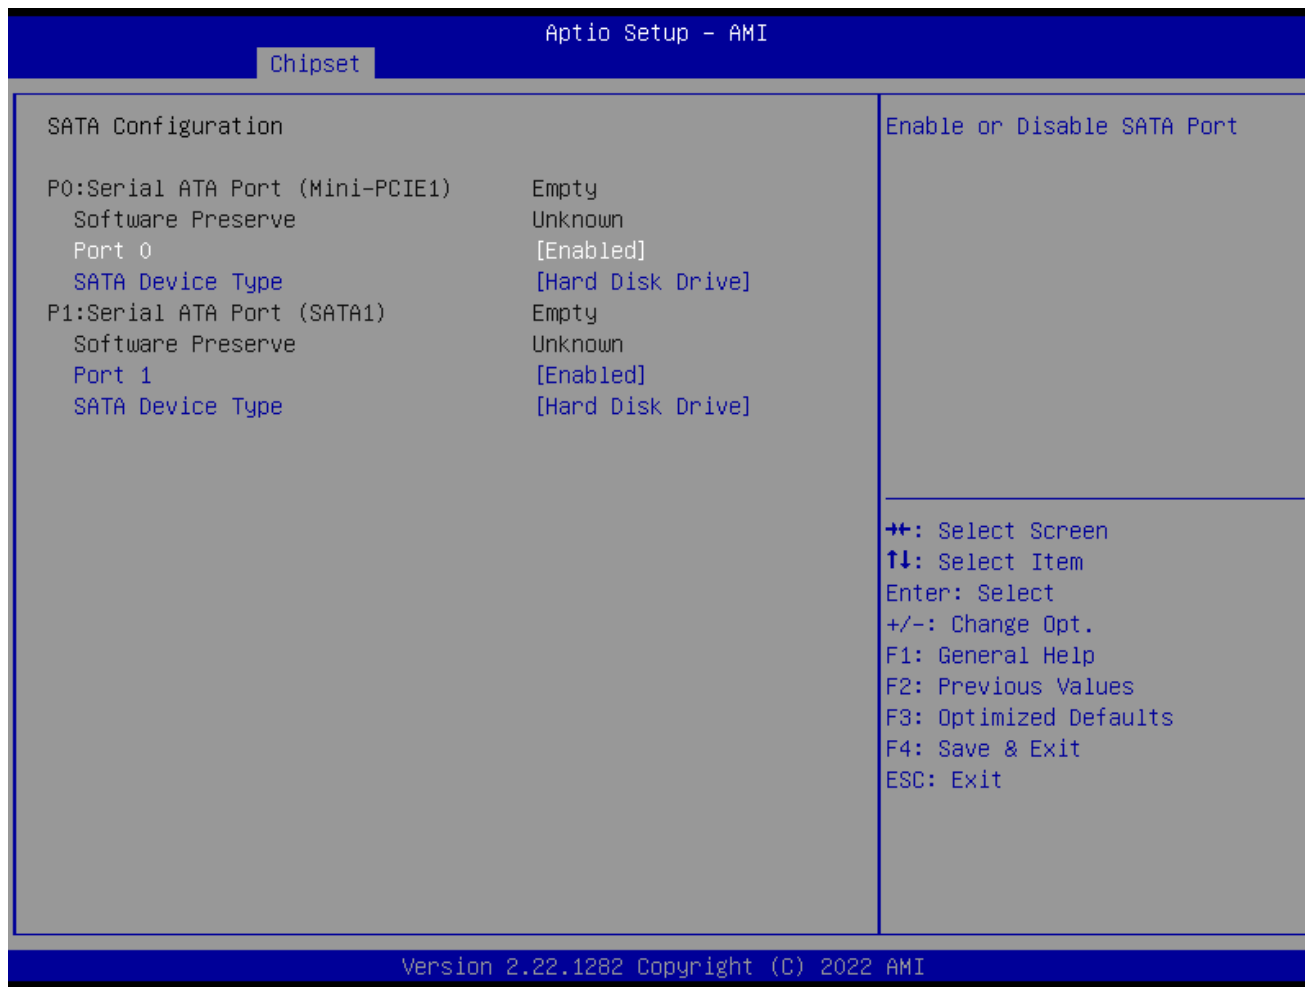

Item	Options	Description
Port0 ~1	Disabled, Enabled [Default]	Enable or Disable SATA Port.
SATA Device Type	Hard Disk Drive [Default] , Solid State Drive	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.

4.3.4 Trusted Computing



Item	Options	Description
Security Device Support	Enabled[Default], Disabled,	Enable/Disable BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.
Pending operation	None[Default], TPM Clear	Schedule an Operation for the Security Device. NOTE: Your Computer will reboot during restart in order to change State of Security Device.

4.3.5 ACPI Settings

Aptio Setup - AMI

Advanced

ACPI Settings		Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some operating systems.
Enable Hibernation	[Enabled]	
ACPI Sleep State	[S3 (Suspend to RAM)]	


++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.22.1282 Copyright (C) 2022 AMI

Item	Options	Description
Enable Hibernation	Disabled , Enabled[Default],	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some operating systems.
ACPI Sleep State	Suspend Disabled, S3 (Suspend to RAM)[Default]	Select the highest ACPI sleep state the system will enter when the SUSPEDN button is pressed.

4.3.6 Super IO Configuration


This setting allows you to select options for the Super IO Configuration, and change the value of the selected option.

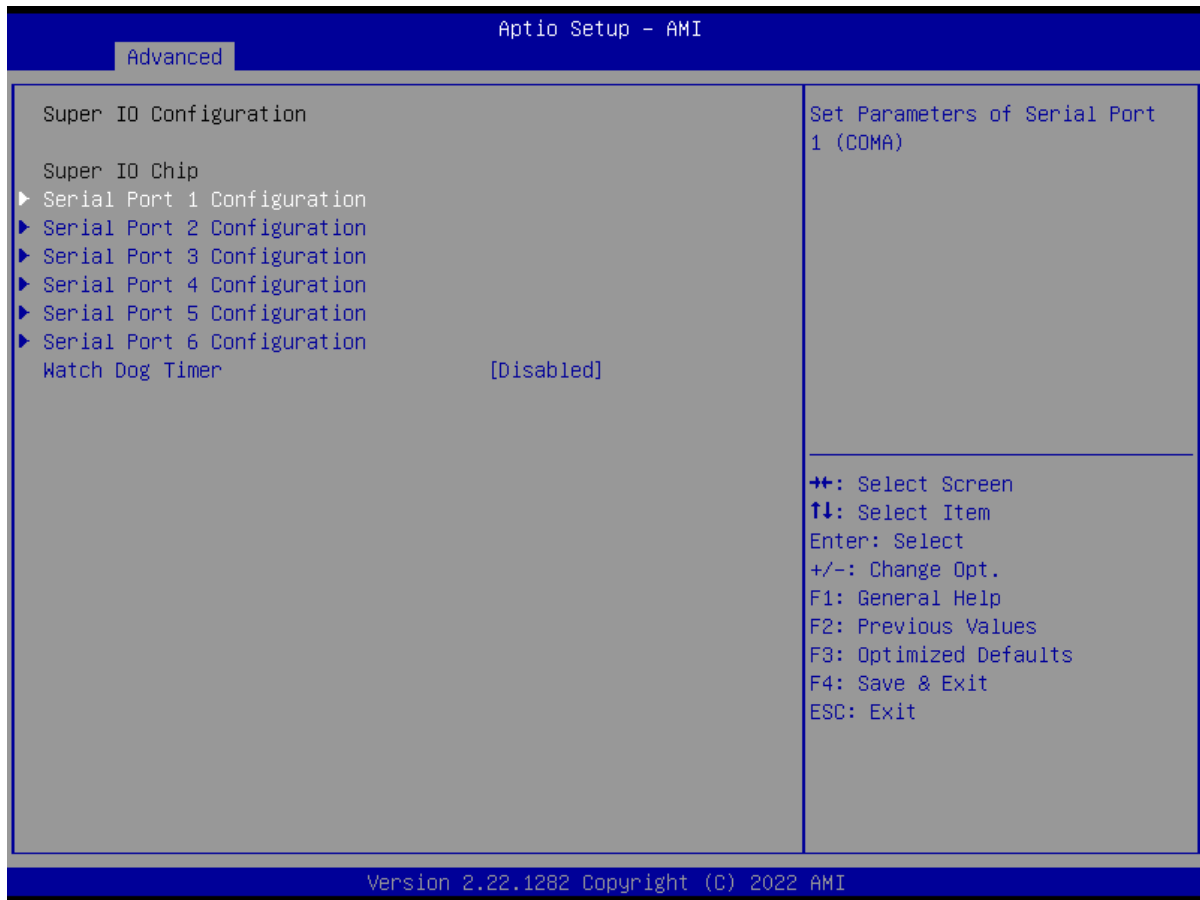

Item	Description
Serial Port 1 Configuration	Set Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Set Parameters of Serial Port 2 (COMB).
Serial Port 3 Configuration	Set Parameters of Serial Port 3 (COMC).
Serial Port 4 Configuration	Set Parameters of Serial Port 4 (COMD).
Serial Port 5 Configuration	Set Parameters of Serial Port 5 (COME).
Serial Port 6 Configuration	Set Parameters of Serial Port 6 (COMF).


Item	Options	Description
Watch Dog Timer	Disabled [Default] , Enabled	Enabled or Disabled Watch Dog Timer function.
Watch Dog Timer Count Mode	Second Mode [Default] , Minute Mode	Select Second Mode or Minute Mode.
Watch Dog Timer Time out Value	20~255(Second) [Default] , 1~255(Minute)	Watch Dog Timer Time out Value.

Serial Port 1 Configuration

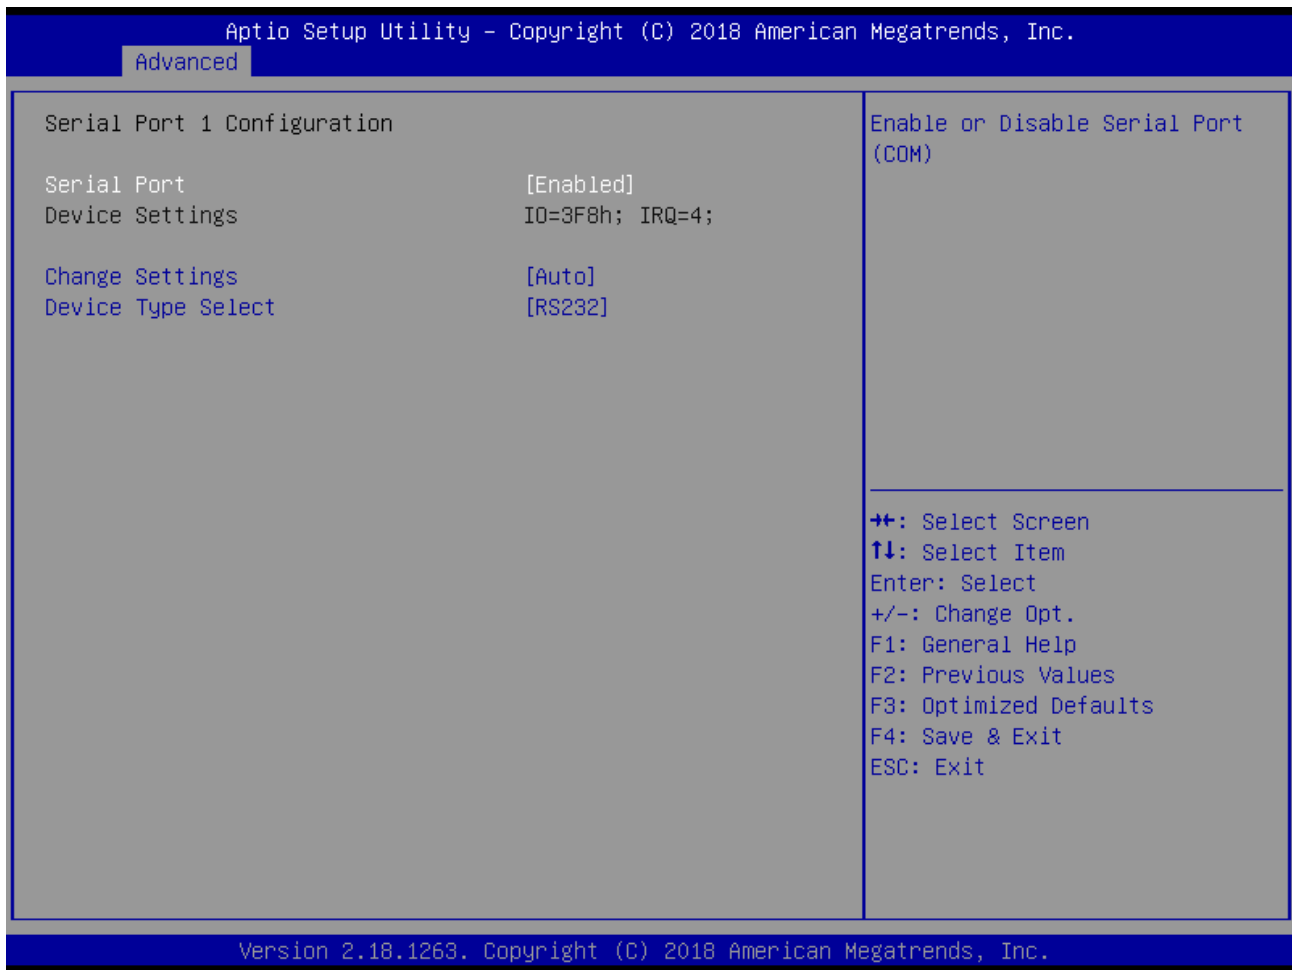


Item	Options	Description
Serial Port	Disabled, Enabled[Default]	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=3F8h; IRQ=4; , IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;	This item allows you to change the address & IRQ settings of the specified serial port.
Device Type Select	UART 232[Default], UART 422, UART 485	Set the Serial Port to RS232 & RS422 & RS485
RS-485 Auto Flow Function	Disabled, Enabled[Default]	Enabled/Disabled RS485 Autoflow Function

Serial Port 2 Configuration

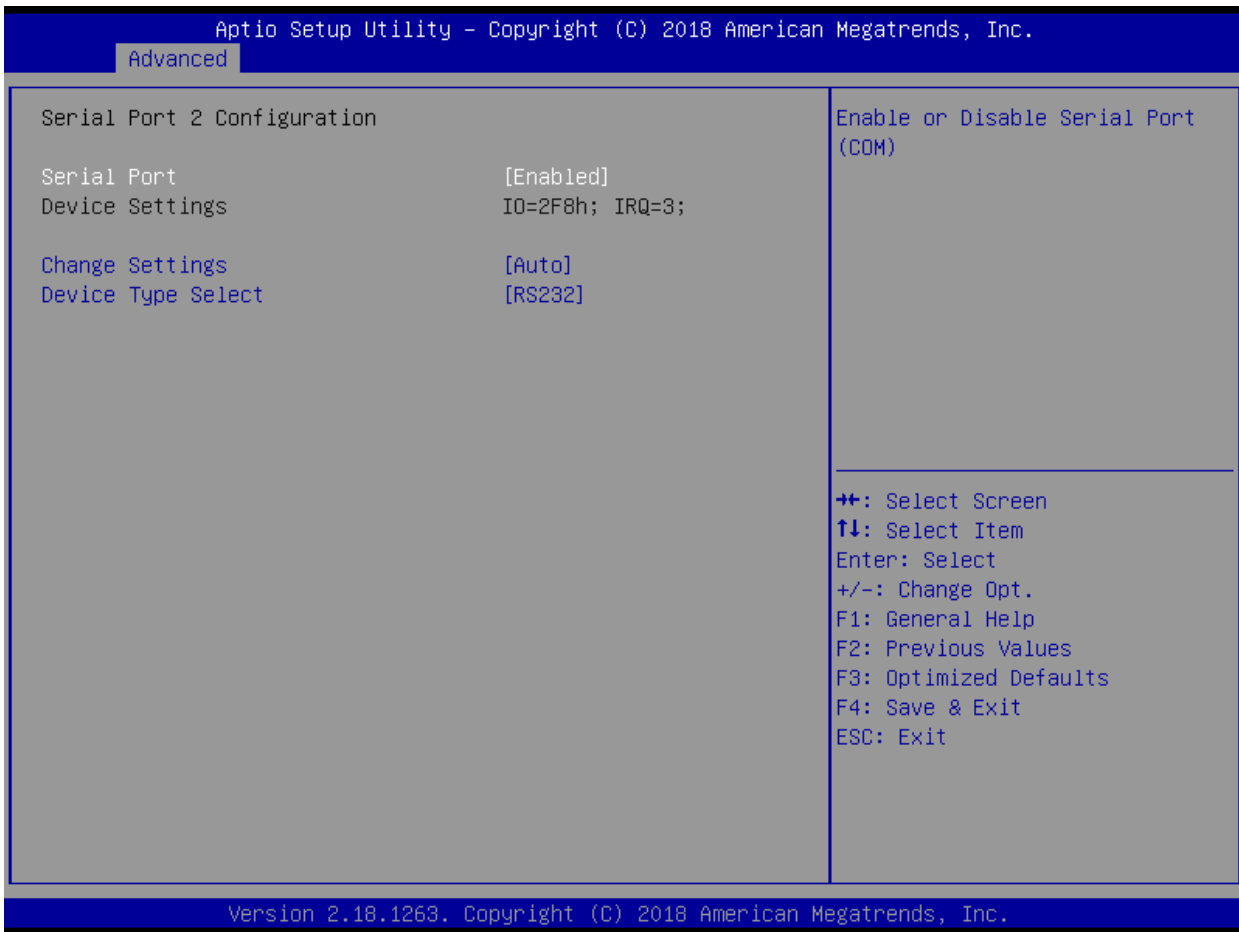


Item	Options	Description
Serial Port	Disabled, Enabled[Default]	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=2F8h; IRQ=3; , IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;, IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;, IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;	This item allows you to change the address & IRQ settings of the specified serial port.
Device Type Select	UART 232[Default], UART 422, UART 485	Set the Serial Port to RS232 & RS422 & RS485
RS-485 Auto Flow Function	Disabled, Enabled[Default]	Enabled/Disabled RS485 Autoflow Function

Serial Port 3 Configuration

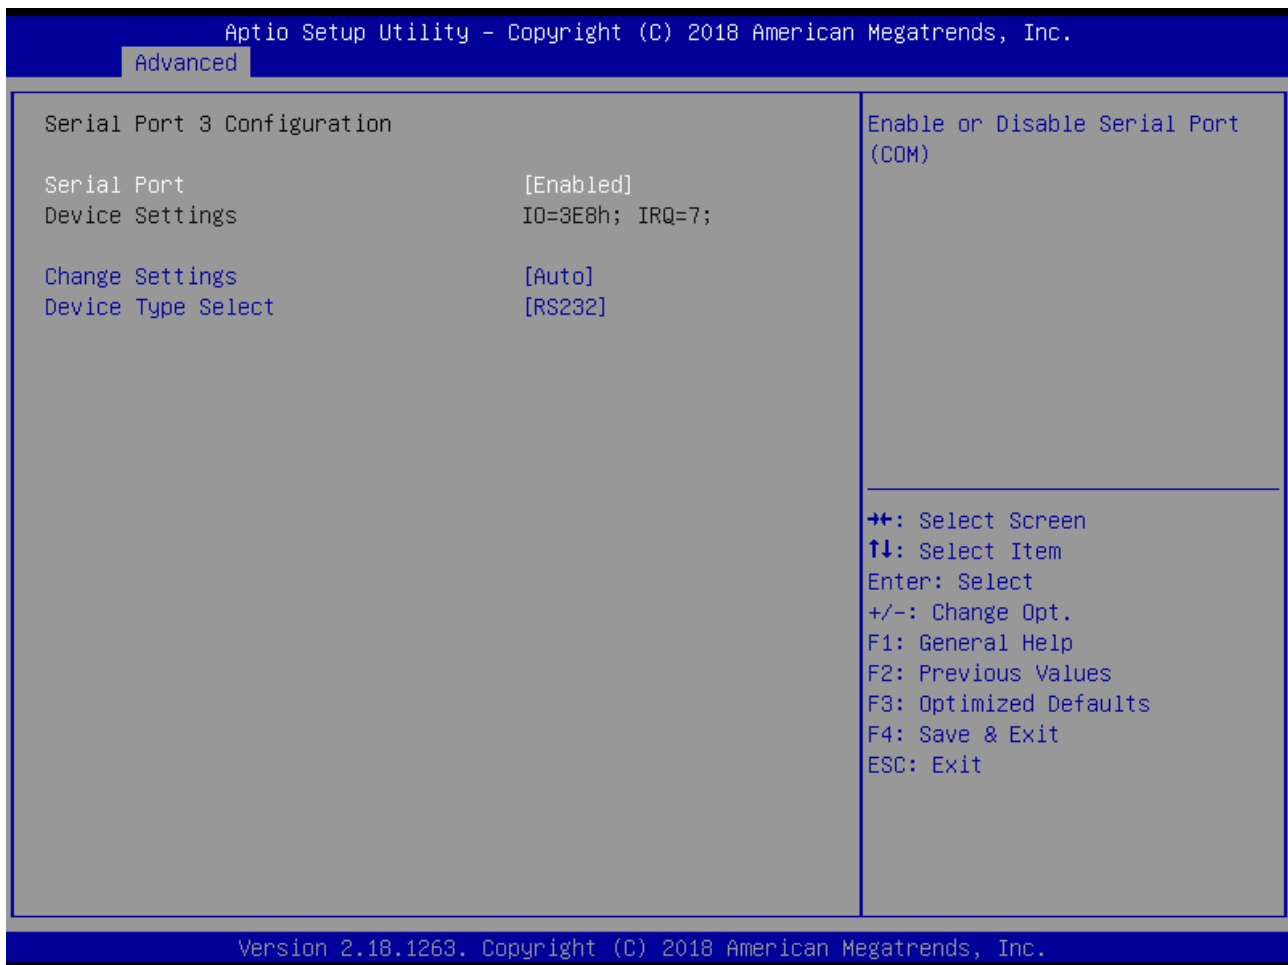

Item	Options	Description
Serial Port	Disabled, Enabled[Default]	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=3E8h; IRQ=7; , IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2F0h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2E0h; IRQ=3,4,5,6,7,9,10,11,12;	This item allows you to change the address & IRQ settings of the specified serial port.
Device Type Select	UART 232[Default], UART 422, UART 485	Set the Serial Port to RS232 & RS422 & RS485
RS-485 Auto Flow Function	Disabled, Enabled[Default]	Enabled/Disabled RS485 Autoflow Function

Serial Port 4 Configuration

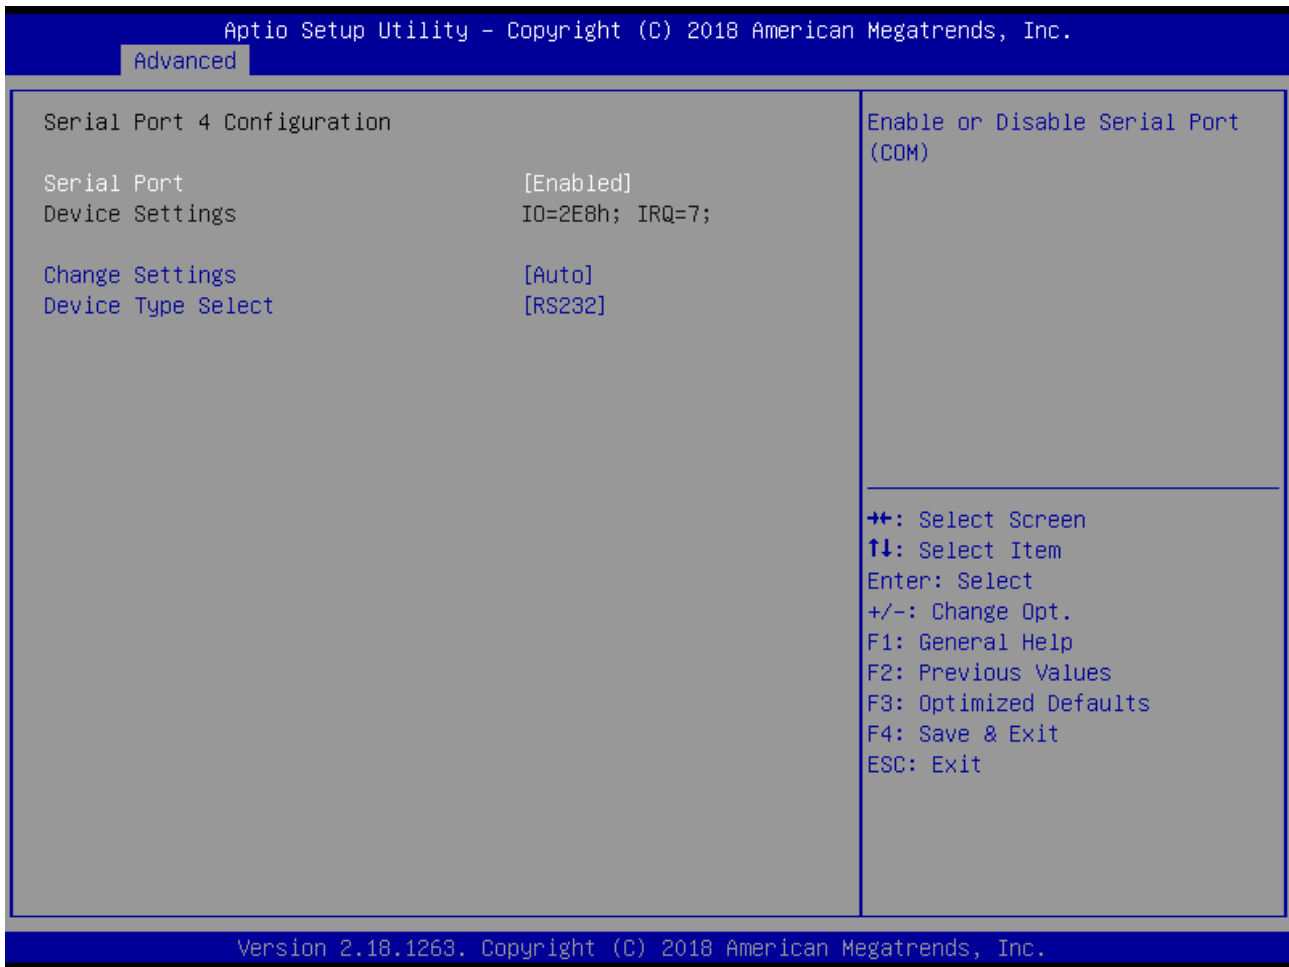

Item	Options	Description
Serial Port	Disabled, Enabled[Default]	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=2E8h; IRQ=7; , IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;; IO=2F0h; IRQ=3,4,5,6,7,9,10,11,12;; IO=2E0h; IRQ=3,4,5,6,7,9,10,11,12;	This item allows you to change the address & IRQ settings of the specified serial port.
Device Type Select	UART 232[Default], UART 422, UART 485	Set the Serial Port to RS232 & RS422 & RS485
RS-485 Auto Flow Function	Disabled, Enabled[Default]	Enabled/Disabled RS485 Autoflow Function

Serial Port 5 Configuration

Aptio Setup - AMI


Advanced

<p>Serial Port 5 Configuration</p> <p>Serial Port [Enabled]</p> <p>Device Settings IO=2F0h; IRQ=7;</p> <p>Change Settings [Auto]</p> <p>Device Type Select [RS232]</p>	<p>Enable or Disable Serial Port (COM)</p> <hr style="border: 0.5px solid black;"/> <p> ⇐: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
--	--

Version 2.22.1282 Copyright (C) 2022 AMI

Item	Options	Description
Serial Port	Disabled, Enabled[Default]	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=2F0h; IRQ=7; , IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;; IO=2F0h; IRQ=3,4,5,6,7,9,10,11,12;; IO=2E0h; IRQ=3,4,5,6,7,9,10,11,12;	This item allows you to change the address & IRQ settings of the specified serial port.
Device Type Select	UART 232[Default], UART 422, UART 485	Set the Serial Port to RS232 & RS422 & RS485
RS-485 Auto Flow Function	Disabled, Enabled[Default]	Enabled/Disabled RS485 Autoflow Function


Serial Port 6 Configuration

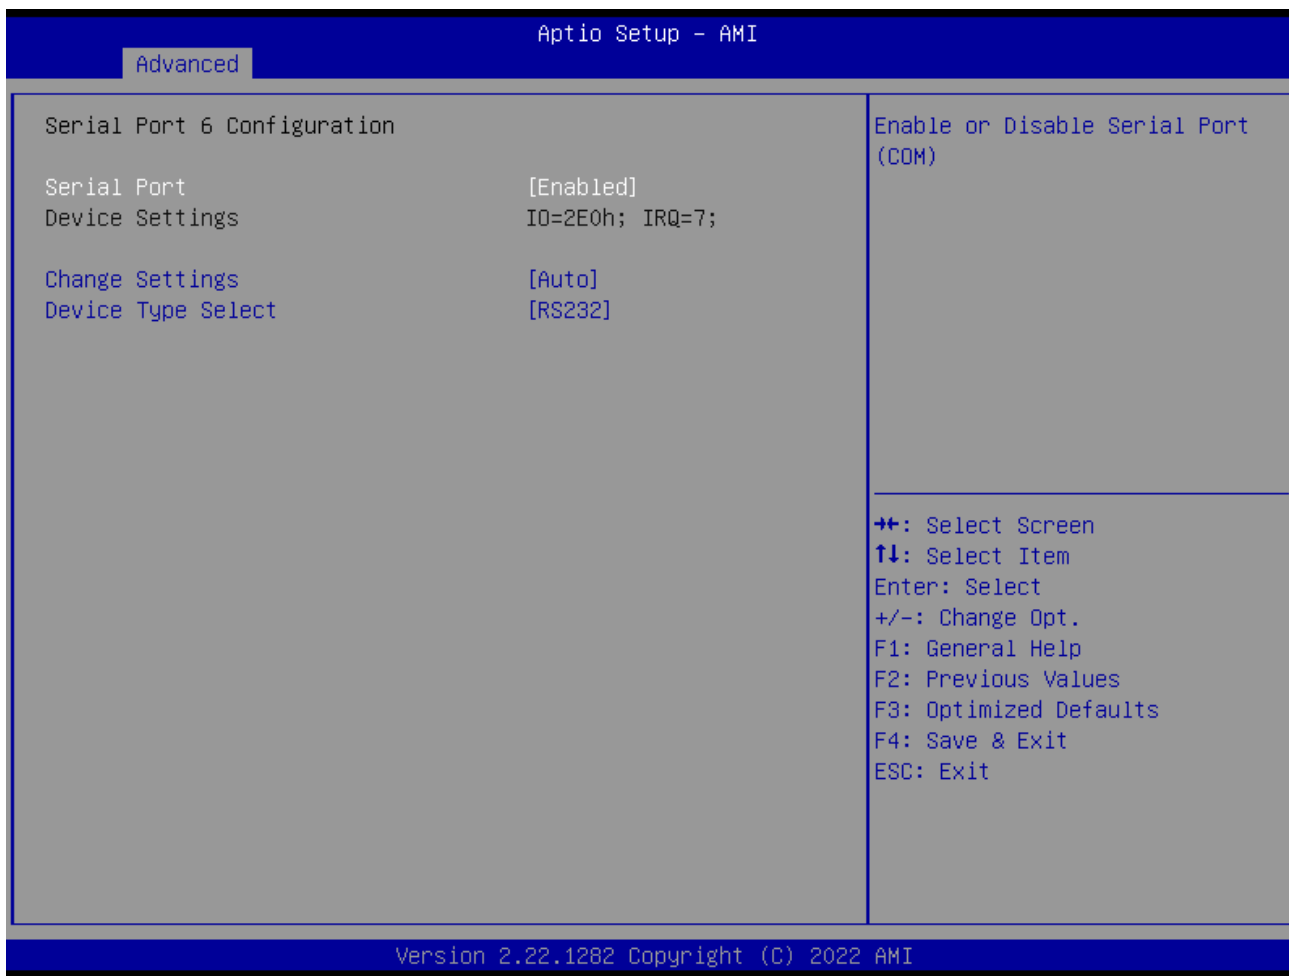

Item	Options	Description
Serial Port	Disabled, Enabled [Default]	Enable or Disable Serial Port (COM).
Change Settings	Auto [Default] , IO=2E0h; IRQ=7; , IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2F0h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2E0h; IRQ=3,4,5,6,7,9,10,11,12;	This item allows you to change the address & IRQ settings of the specified serial port.
Device Type Select	UART 232 [Default] , UART 422, UART 485	Set the Serial Port to RS232 & RS422 & RS485
RS-485 Auto Flow Function	Disabled, Enabled [Default]	Enabled/Disabled RS485 Autoflow Function


4.3.7 Hardware Monitor

These items display the current status of all monitored hardware devices/ components such as voltages and temperatures.

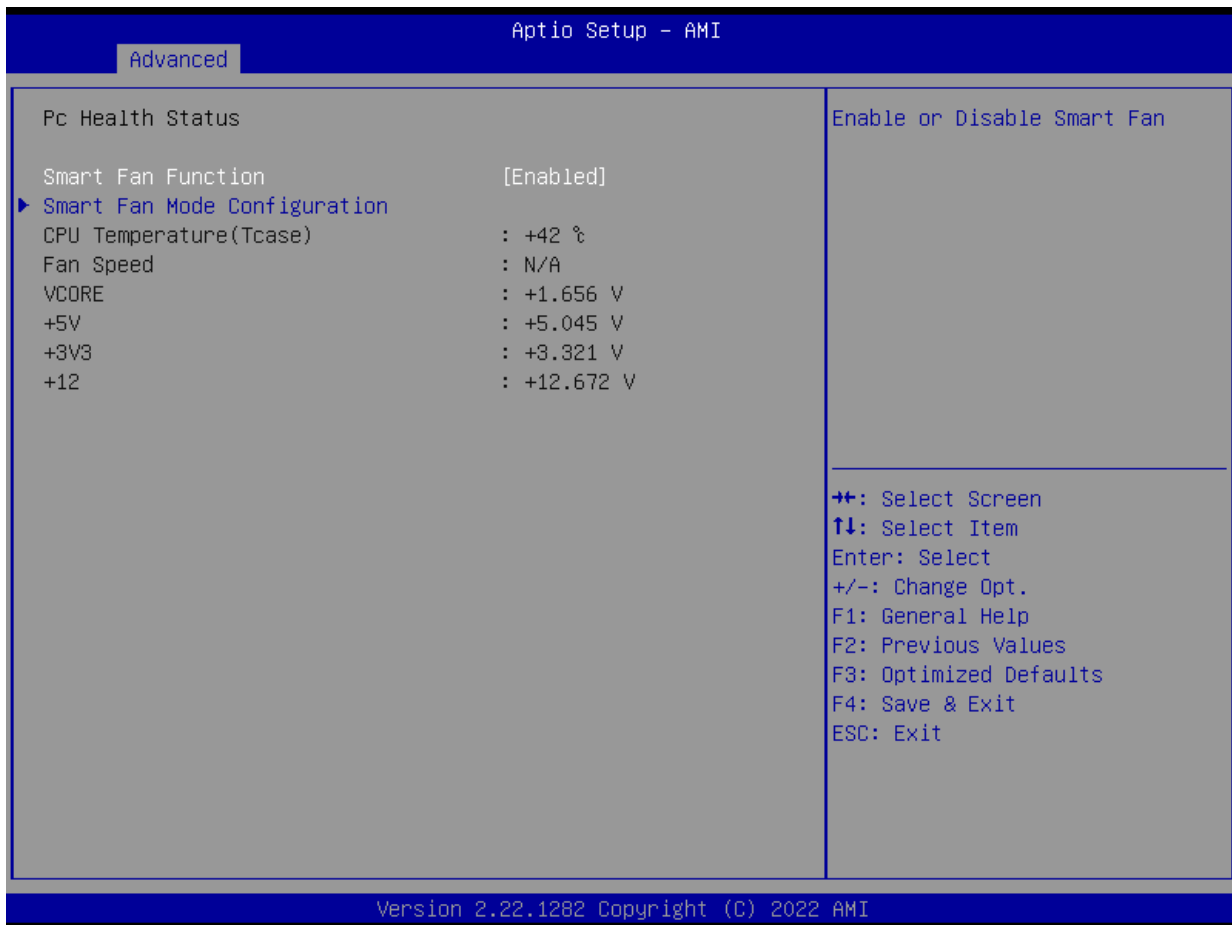


Item	Options	Description
Smart Fan Function	Disabled[Default], Enabled	Enabled or Disable Smart Fan

Smart Fan Mode Configuration

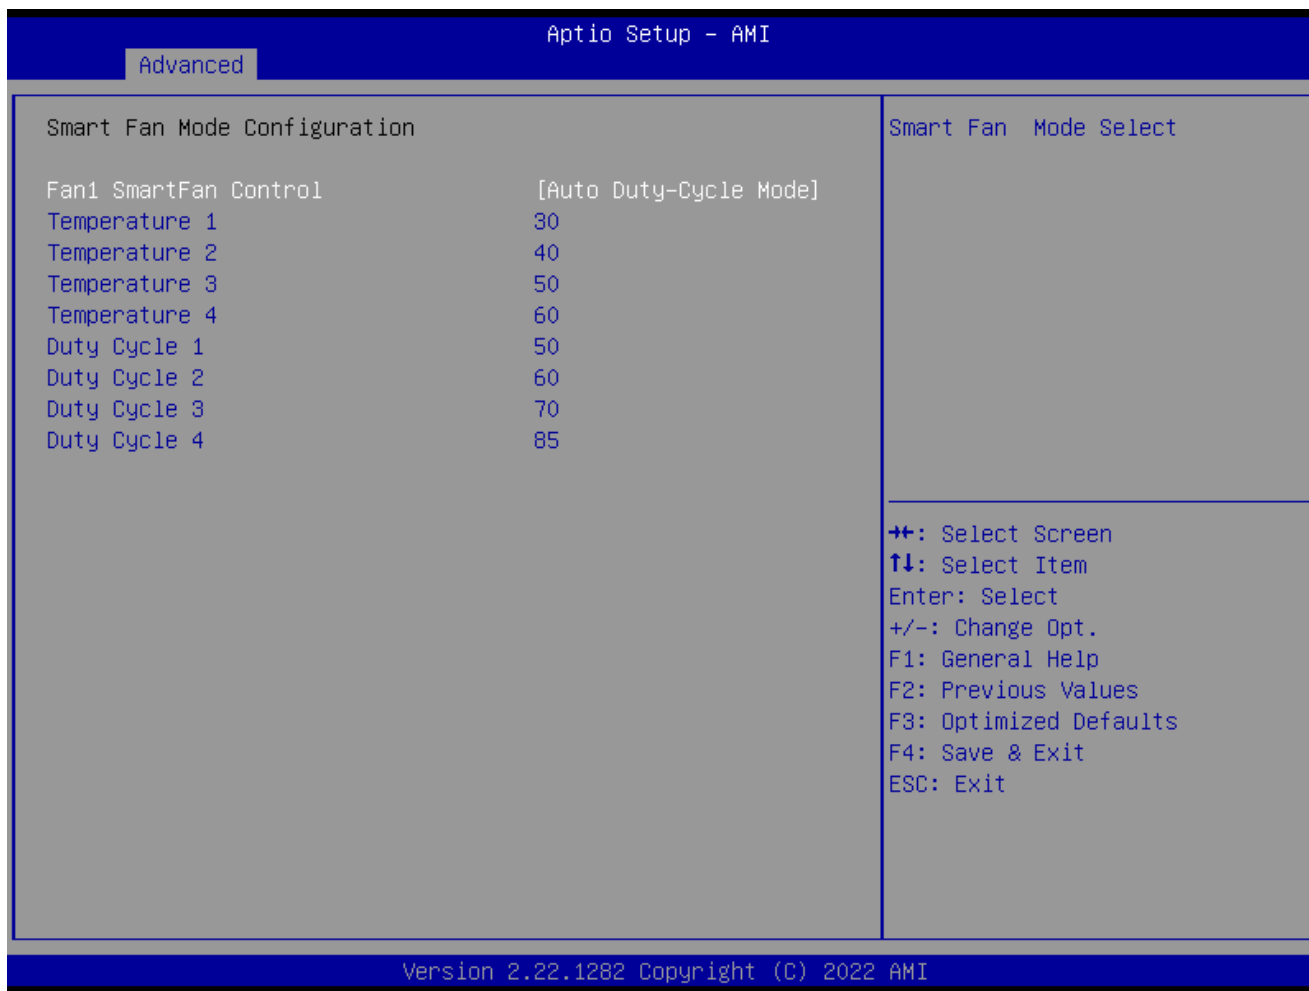


Item	Options	Description
Fan1 SmartFan Control	Manual Duty Mode, Auto Duty-Cycle Mode[Default],	Smart Fan Mode Select
Temperature 1~4	1~100	Auto fan speed control. SMART FAN IV
Duty Cycle 1~4	20~100	Auto fan speed control. SMART FAN IV

4.3.8 Power IGN Mode

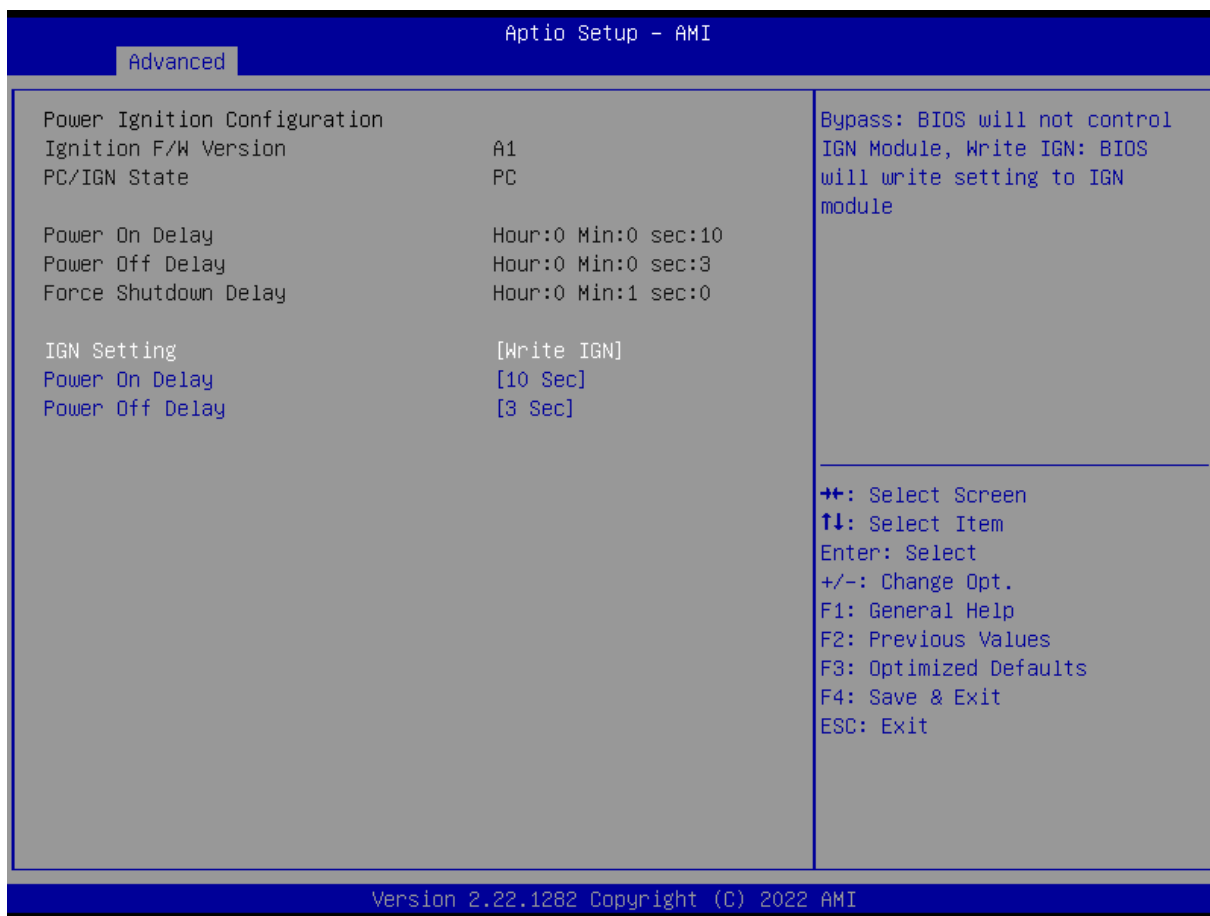


Item	Options	Description
IGN Setting	Read mode[Default] Write IGN	Read IGN: BIOS will only read settings from IGN module. Write IGN: BIOS will overwrite settings in IGN module.
Power On Delay	10 Sec[Default] 20 Sec 30 Sec 40 Sec 50 Sec 1 Min Manual Mode	Power On Delay Select
Manual Mode	10 Sec[Default]	10~60 Sec
Power Off Delay	3 Sec[Default] , 1 Min, 5 Min, 10 Min, 30 Min, 1 Hour, 2 Hour, Manual Mode	Power Off Delay Select
Manual Mode	3 Sec[Default]	3~7200 Sec

4.3.9 S5 RTC Wake Settings

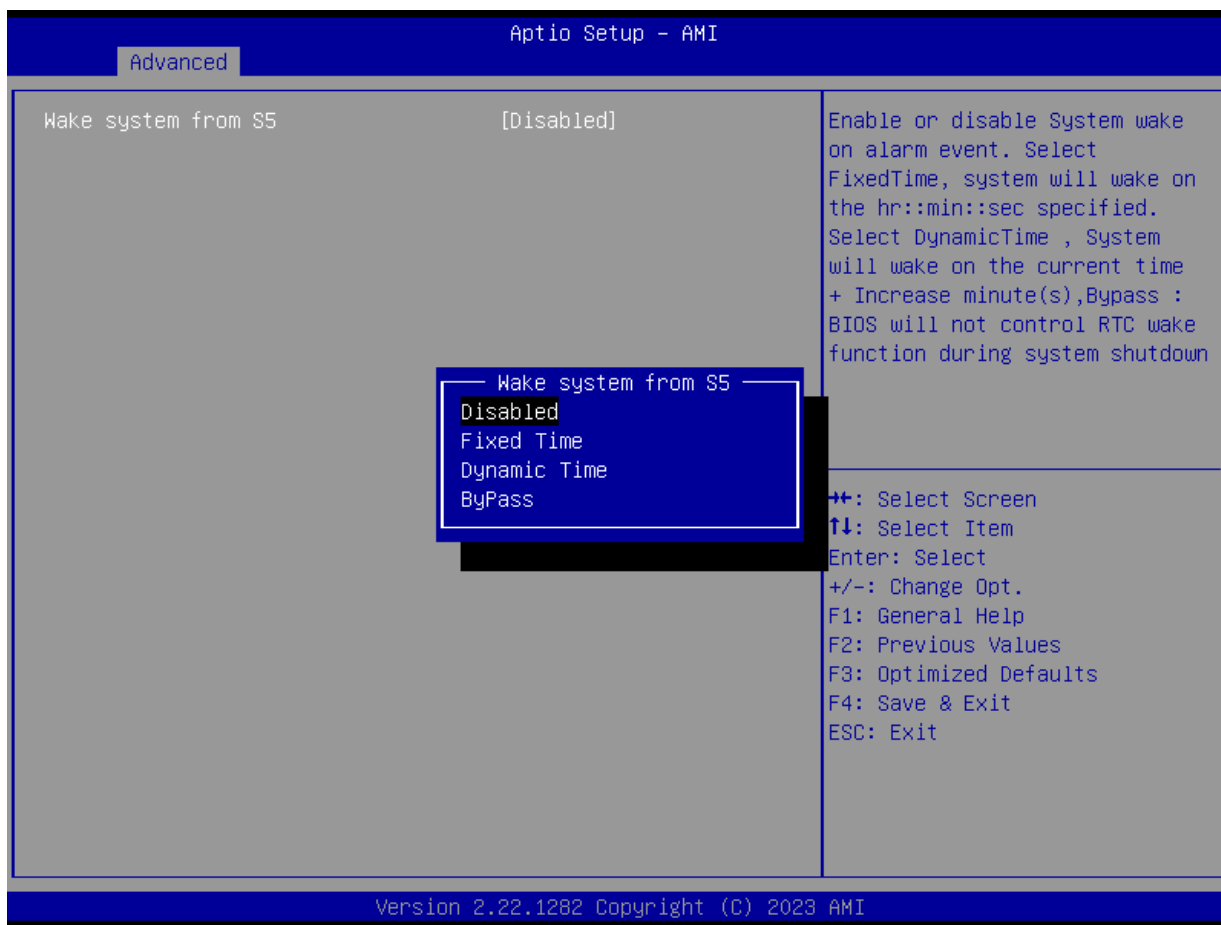

Item	Options	Description
Wake system from S5	Disabled[Default] Fixed Time Dynamic Time Bypass	Enable or disable System wake on alarm event. Select FixedTime, system will wake on the hr::min::sec specified. Select DynamicTime, System will wake on the current time + Increase minute(s), Select Bypass: BIOS will not control RTC wake function during system shutdown

4.3.10 Serial Port Console Redirection

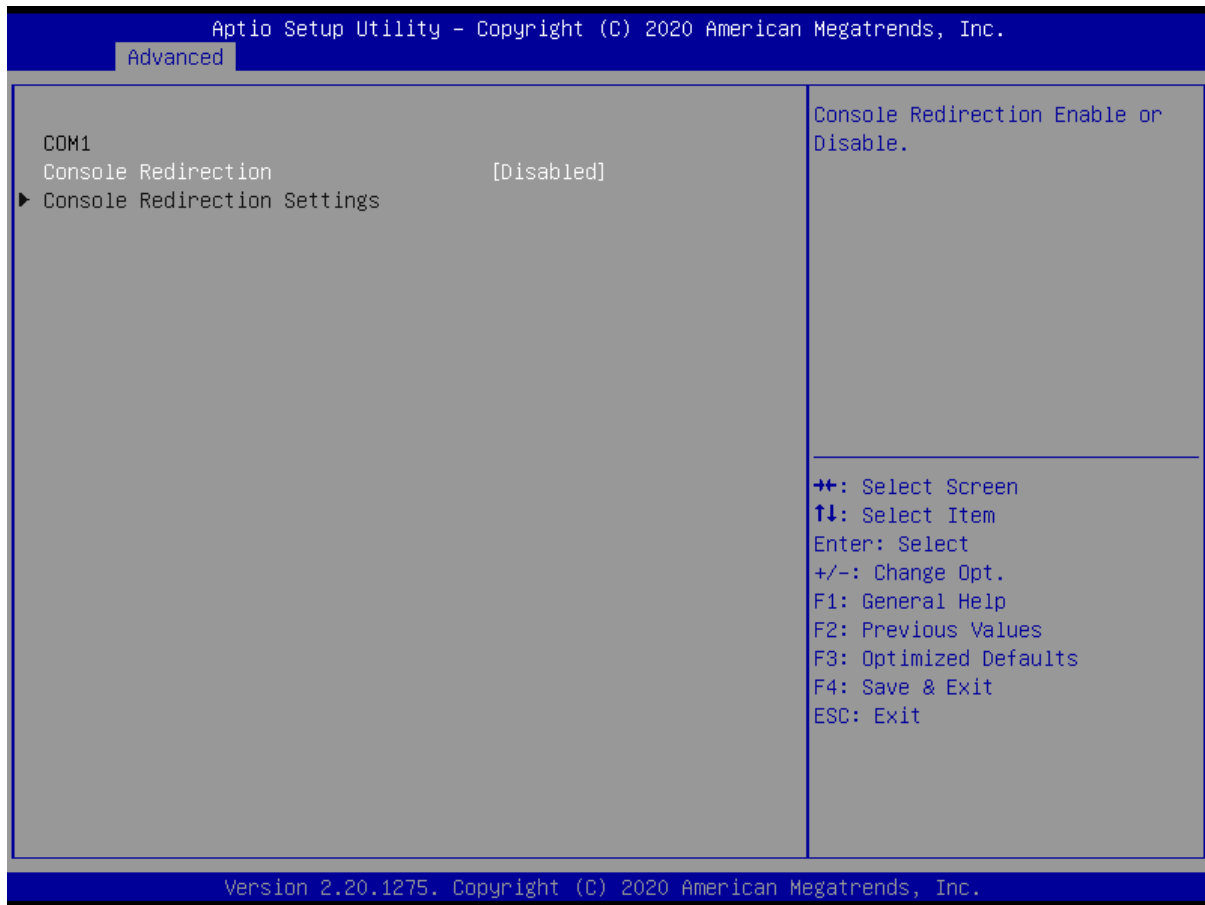


Item	Options	Description
Console Redirection	Disabled[Default], Enabled	These items allows you to enable or disable COM1 console redirection

4.3.11 USB Configuration




Item	Options	Description
Legacy USB Support	Enabled[Default] Disabled Auto	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
XHCI Hand-off	Enabled[Default] Disabled	This is a workaround for OSeW without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	Disabled Enabled[Default]	Enable/Disable USB Mass Storage Driver Support.
USB transfer time-out	1 sec , 5 sec , 10 sec , 20 sec[Default]	The time-out value for Control, Bulk, and Interrupt transfers.
Device reset time-out	10 sec , 20 sec[Default] , 30 sec, 40 sec	USB mass storage device Start Unit command time-out.
Device power-up delay	Auto[Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

4.3.12 Network Stack Configuration

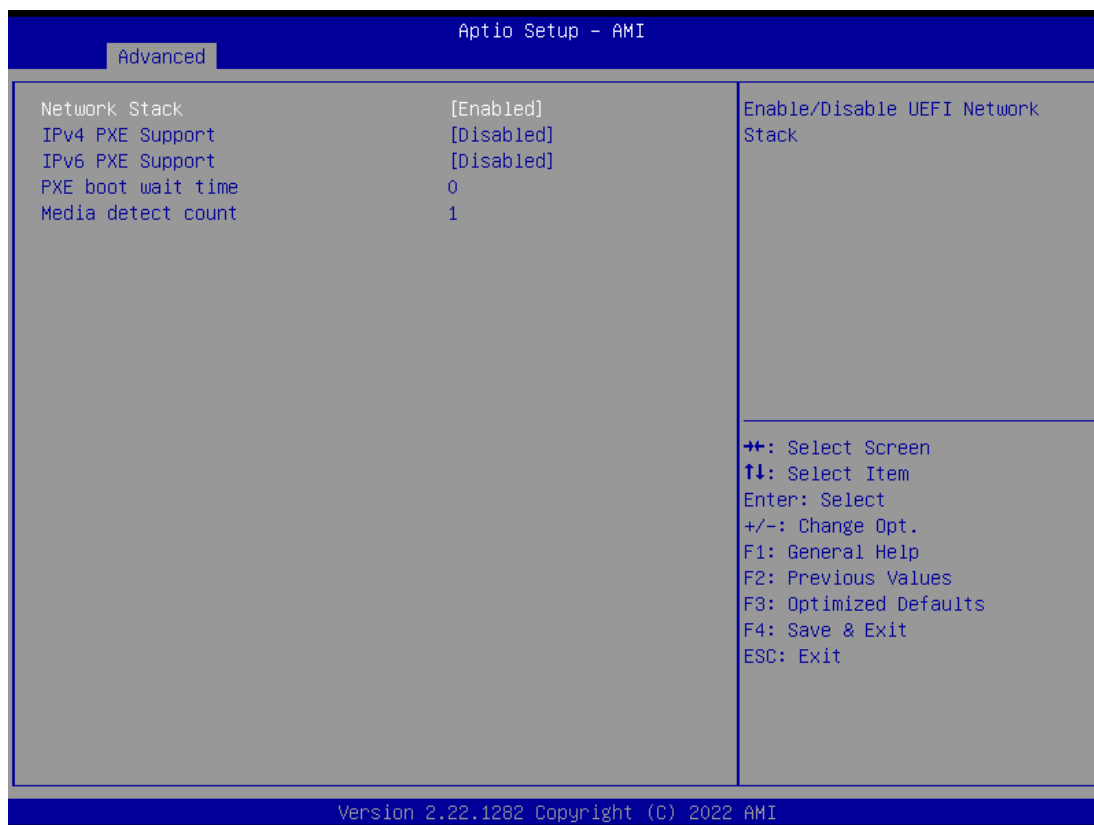

Item	Options	Description
Network Stack	Disabled[Default], Enabled	Enable/Disable UEFI Network Stack.
IPv4 PXE Support	Disabled[Default], Enabled	Enable/Disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.
IPv6 PXE Support	Disabled[Default], Enabled	Enable/Disable IPv4 PXE boot support. If disabled, IPv6 PXE boot support will not be available.
PXE boot wait time	0[Default]	Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.
Media detect count	1[Default]	Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

4.3.13 NVMe Configuration

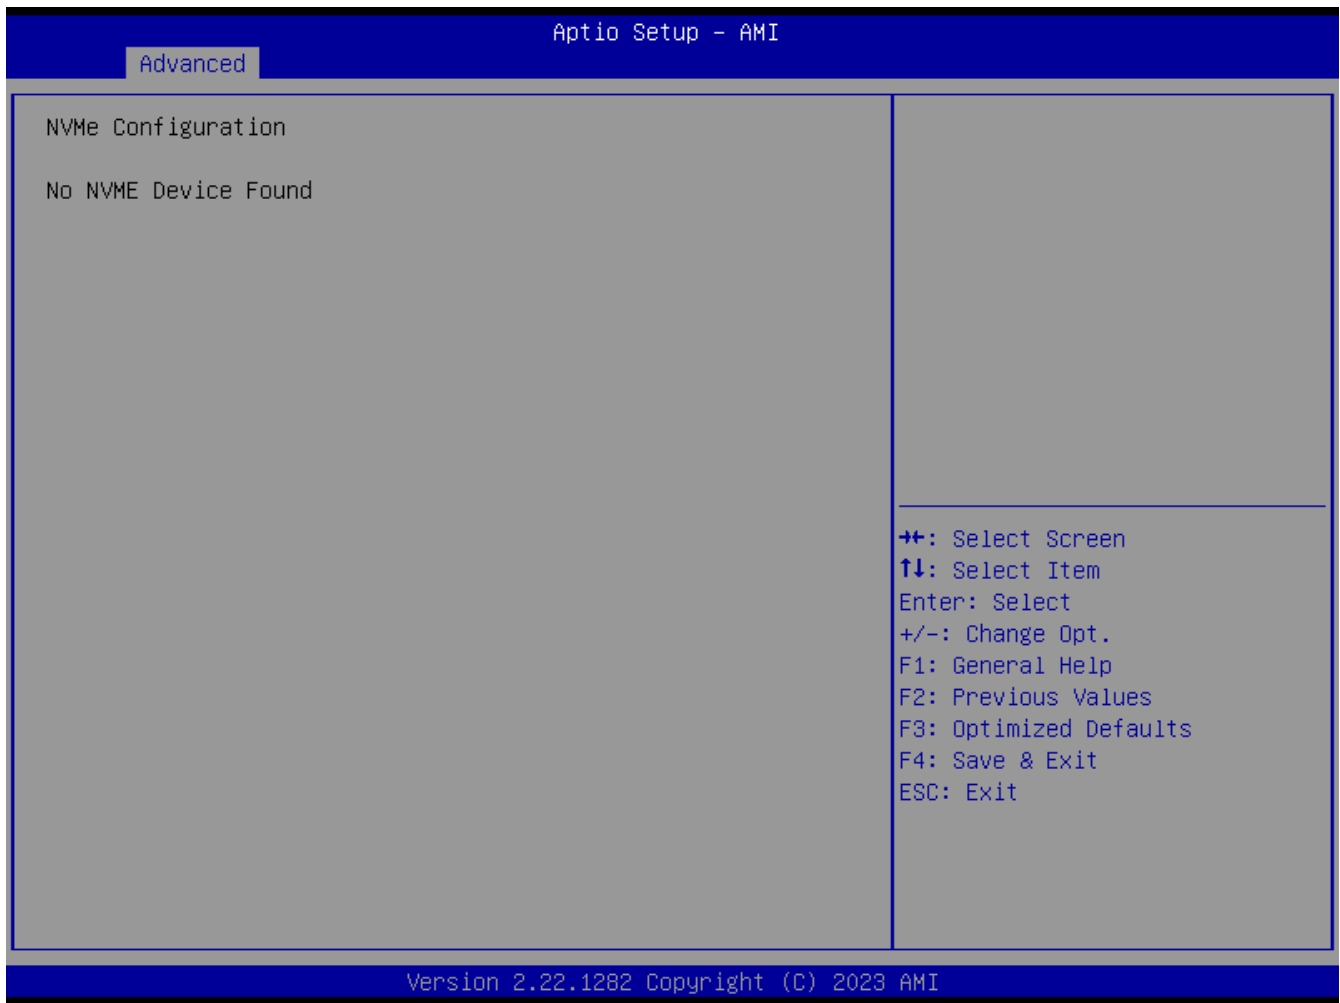


4.4 Chipset

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.




4.4.1 System Agent (SA) Configuration

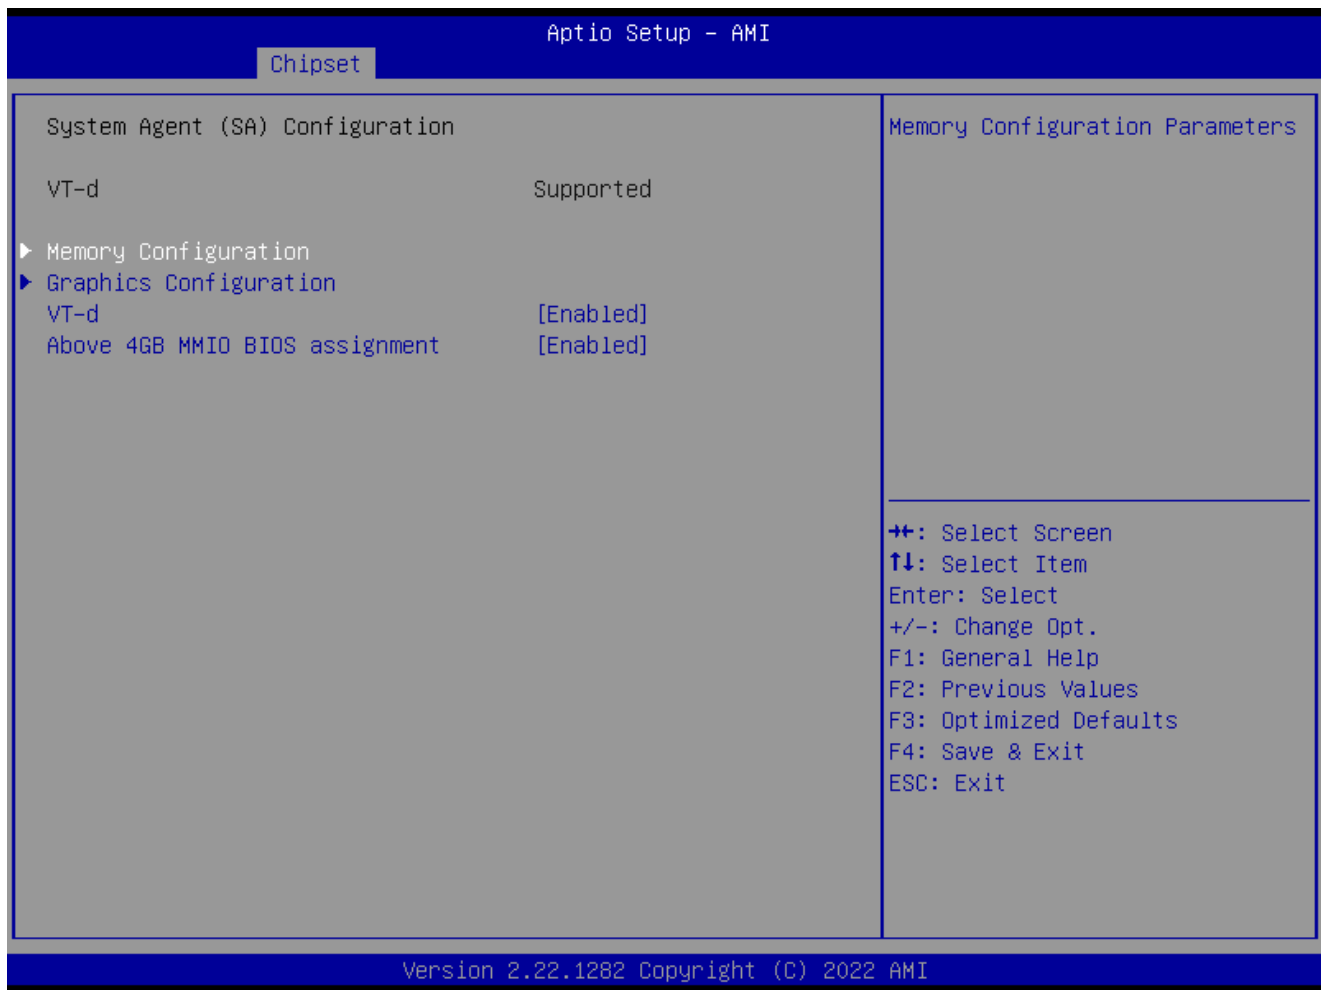


Item	Options	Description
VT-d	Disabled, Enabled [Default]	VT-d capability.
Above 4GB MMIO BIOS assignment	Enabled [Default] , Disabled	Enable/Disable above 4GB MemoryMappedIO BIOS assignment This is enabled automatically when Aperture Size is set to 2048MB.

■ Memory Configuration

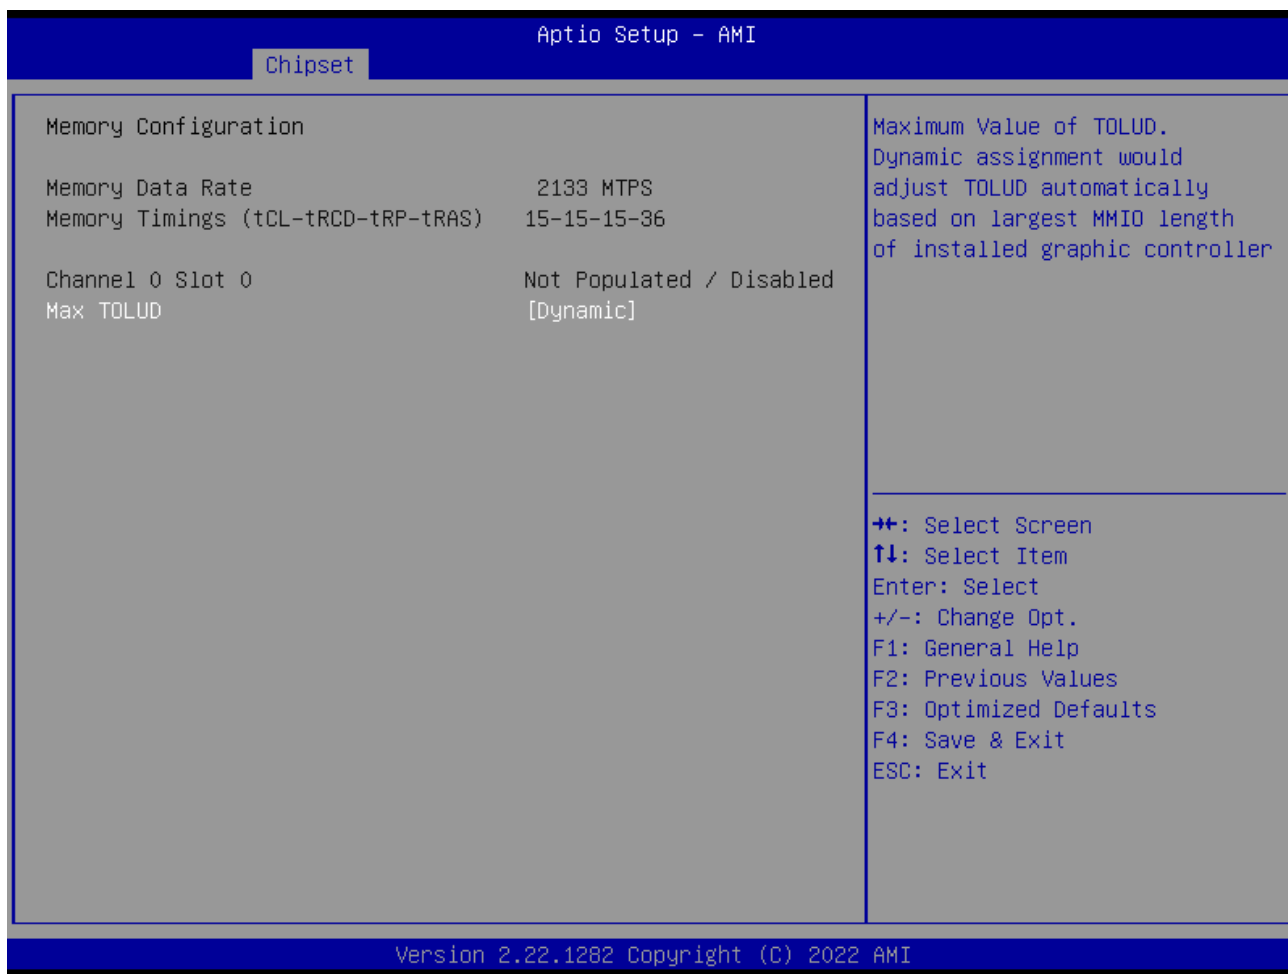


Item	Options	Description
Max TOLUD	Dynamic[Default], 1GB, 1.25GB, 1.5 GB, 1.75 GB, 2 GB, 2.25 GB, 2.5 GB,	Maximum Value of TOLUD. Dynamic assignment would adjust TOLUD automatically based on largest MMIO length of installed graphic controller

■ Graphic Configuration

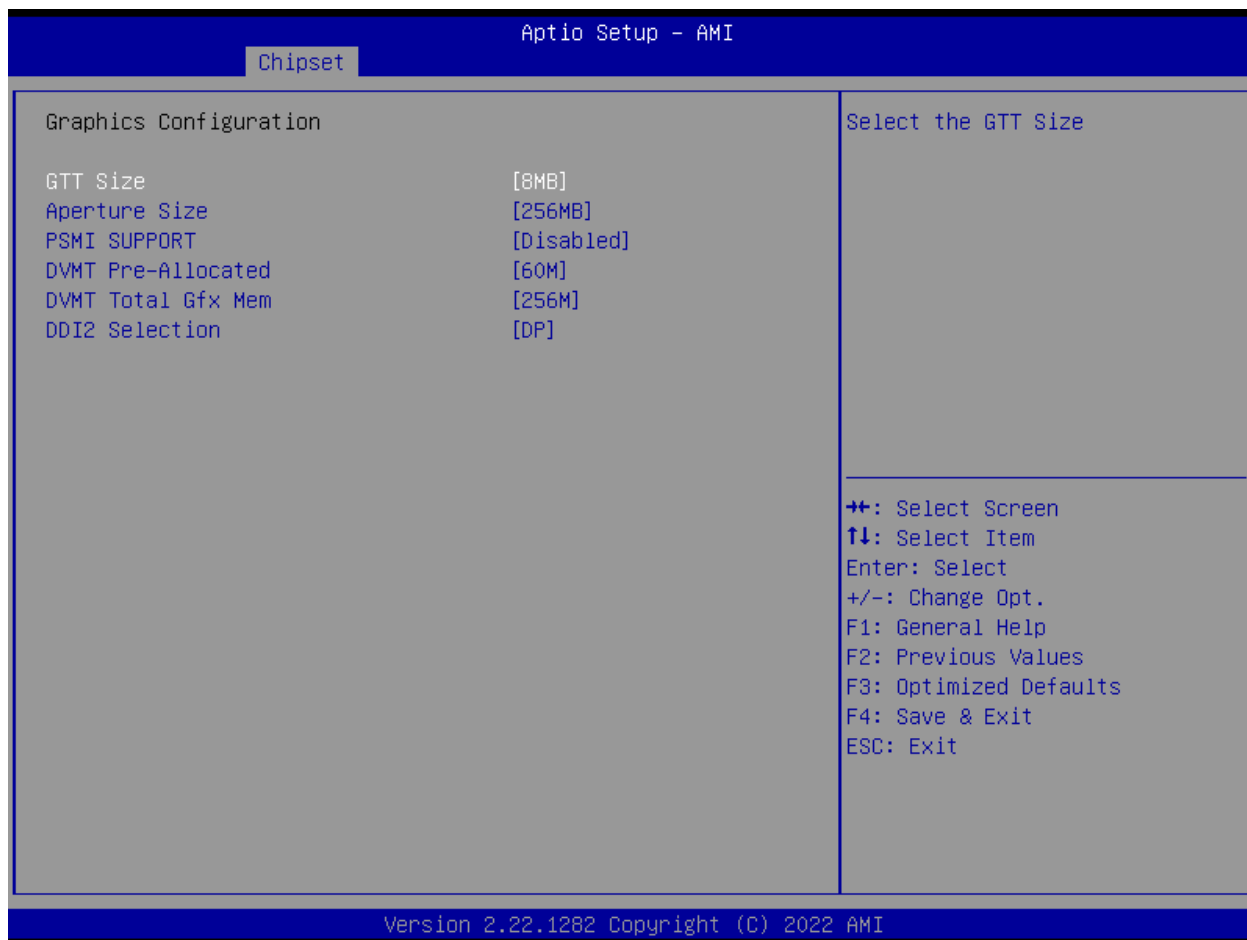

Item	Options	Description
GTT Size	2MB, 4MB, 8MB[Default]	Select the GTT Size .
Aperture Size	128MB, 256MB[Default] , 512MB, 1024MB	Select the Aperture Size. Note : Above 4GB MMIO BIOS assignment is automatically enabled when selecting 2048MB aperture. To use this feature, please disable CSM Support.
PSMI SUPPORT	Disabled [Default] , Enabled	PSMI Enable/Disable.
DVMT Pre-Allocated	32M,64M,96M,128M, 160M,4M, 8M,12M, 16M,20M,24M, 28M, 32M/F7,36M, 40M,44M, 48M,52M,56M, 60M[Default]	Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.
DVMT Total Gfx Mem	128M, 256M[Default] , MAX	Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.
DDI2 Selection	DP[Default] , HDMI	Selects DDI2 function: DP or HDMI

4.4.2 PCH-IO Configuration

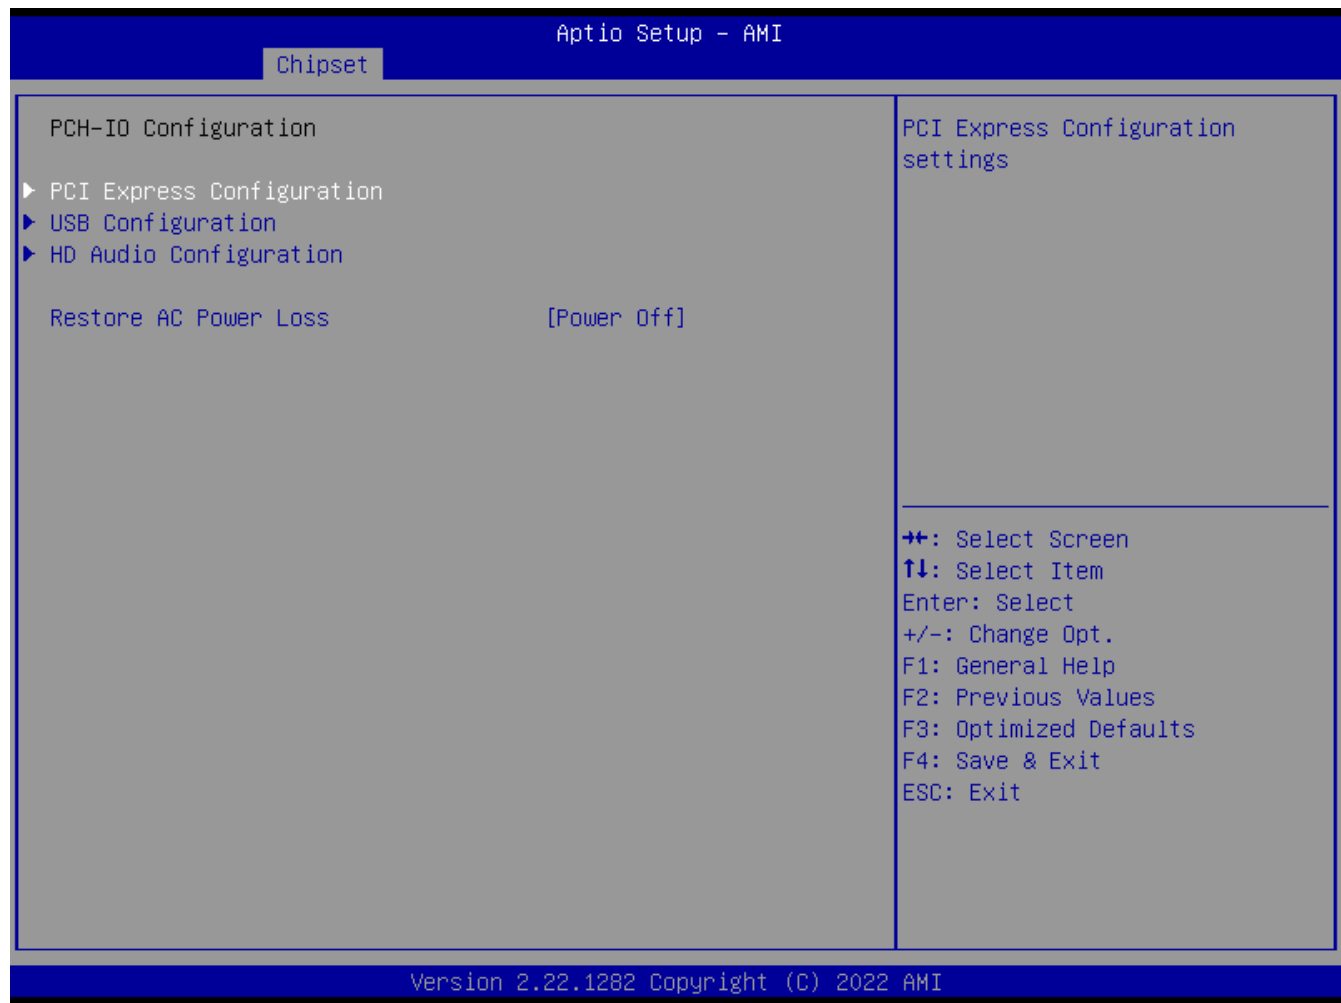

Item	Options	Description
Restore AC Power Loss	Power On, Power Off [Default] , Lase State	Specify what state to go to when power is re-applied after a power failure (G3 state).

■ PCI Express Configuration




• PCI Express Root Port 3 /4 /5 /7




Item	Options	Description
PCI Express Root Port 3 /4 /5 /7	Disabled, Enabled [Default]	Control the PCI Express Root Port.
ASPM	Disabled [Default] , L0s, L1, L0sL1, Auto	Set the ASPM Level: Force L0s - Force all links to L0s State, AUTO - BIOS auto configure, DISABLE - Disables ASPM,
PCIe Speed	Auto [Default] , Gen1, Gen2, Gen3	Configure PCIe speed.
Detect Non-Compliance Device	Disabled [Default] , Enabled	Detect Non-Compliance PCI Express Device. If enable, it will take more time at POST time.

■ USB Configuration

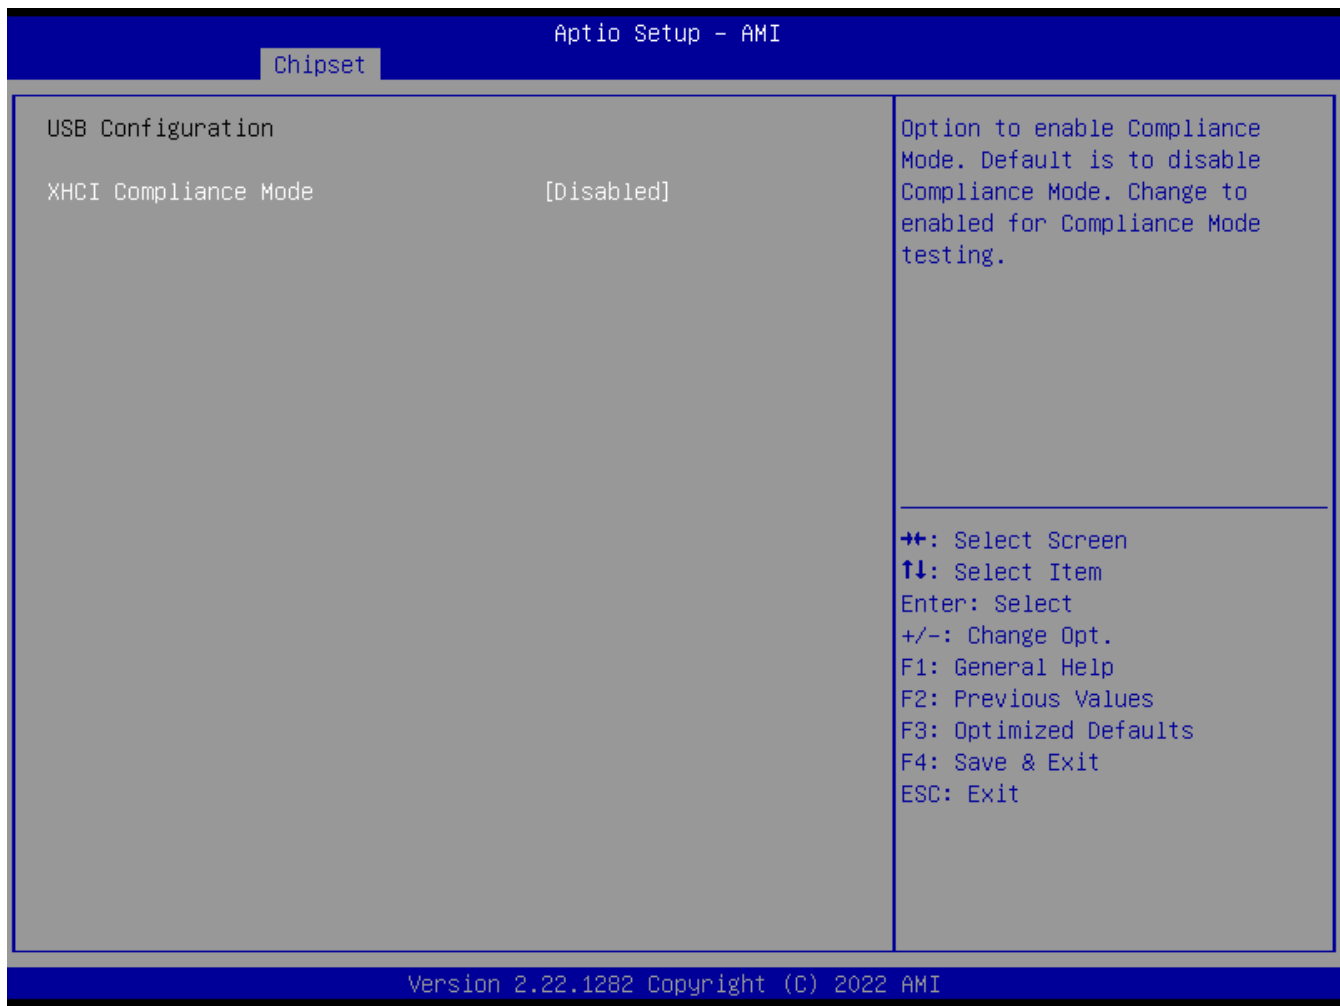

Item	Options	Description
XHCI Compliance mode	Disabled [Default] , Enabled	Option to enable Compliance Mode. Default is to disable Compliance Mode. Change to enabled for Compliance Mode testing.


■ HD Audio Configuration

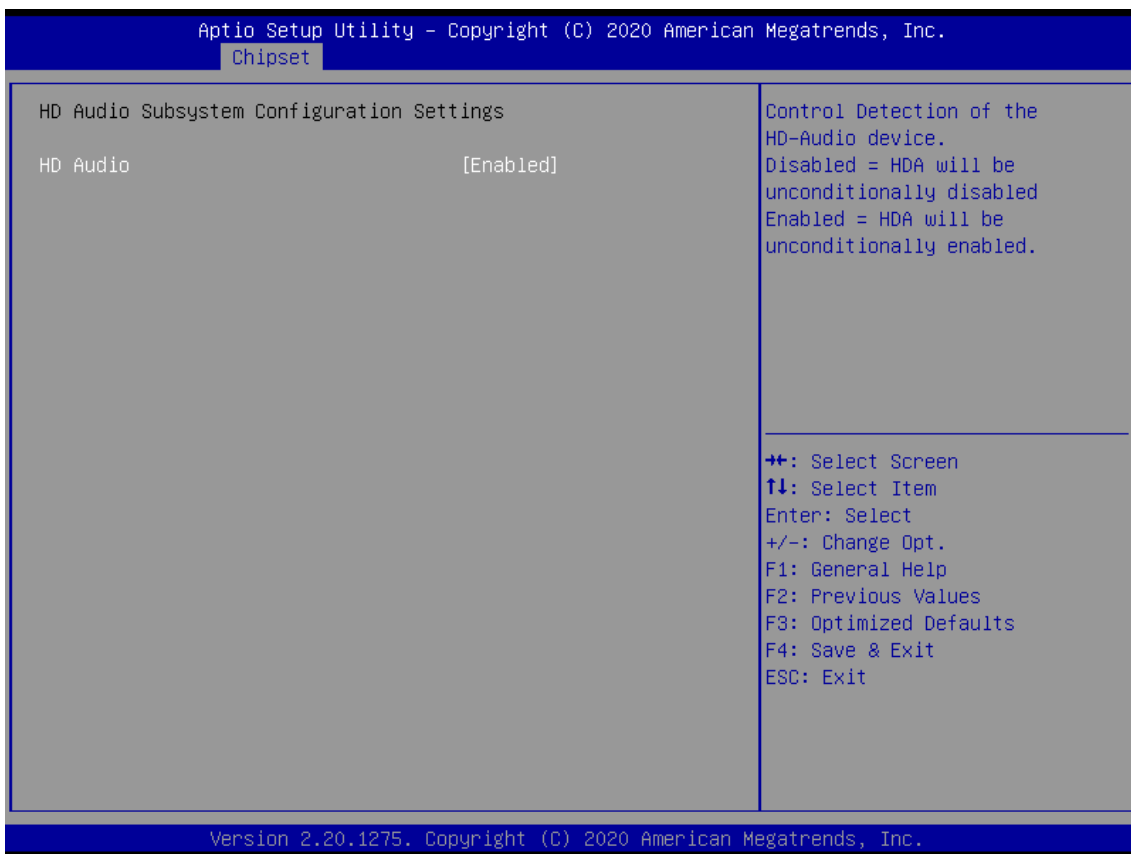

Item	Options	Description
HD Audio	Disabled, Enabled [Default]	Control Detection of the HD-Audio device. Disabled = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled.

4.5 Security

Security menu allow users to change administrator password and user password settings.

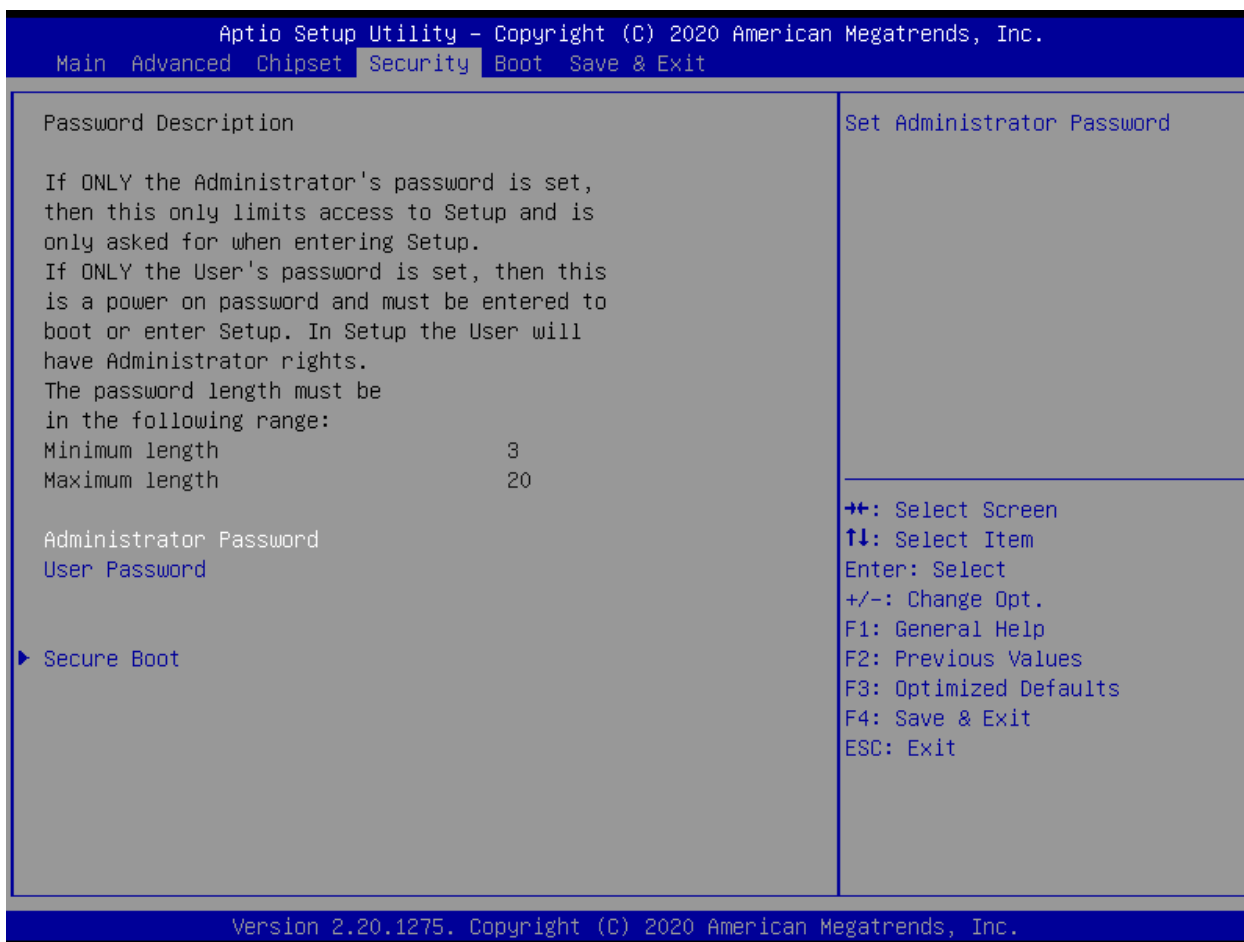

■ Administrator Password

This item allows you to set Administrator Password.

■ User Password


This item allows you to set User Password.

■ Security Boot



Item	Options	Description
Secure Boot	Disabled [Default] , Enabled	Secure Boot feature is Active if Secure Boot is Enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset
Secure Boot Mode	Standard, Custom [Default]	Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication


■ Key Management

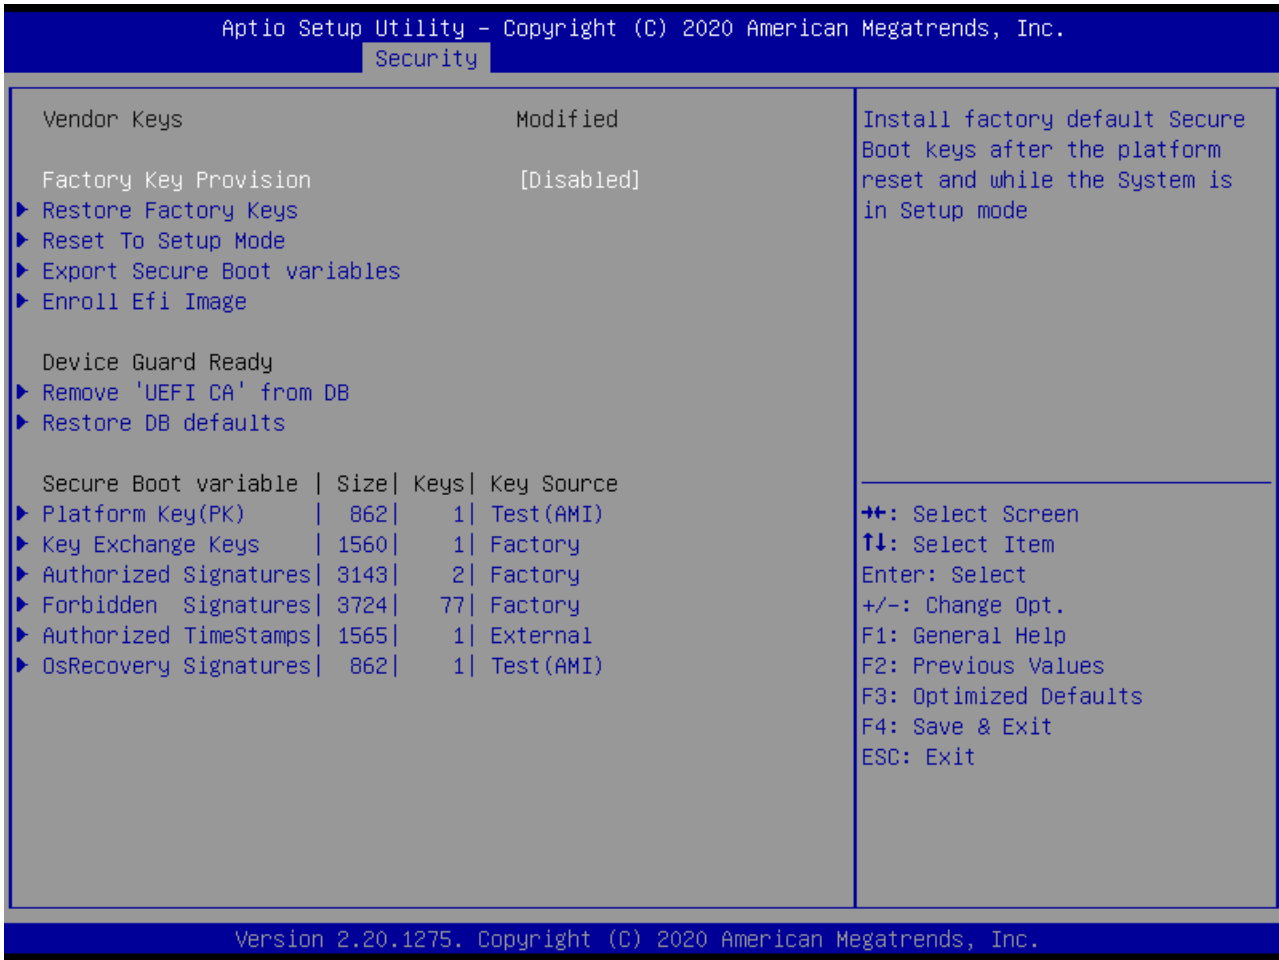

Item	Options	Description
Factory Key Provision	Disabled [Default] , Enabled	Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode

4.6 Boot


This menu allows you to setup the system boot options.

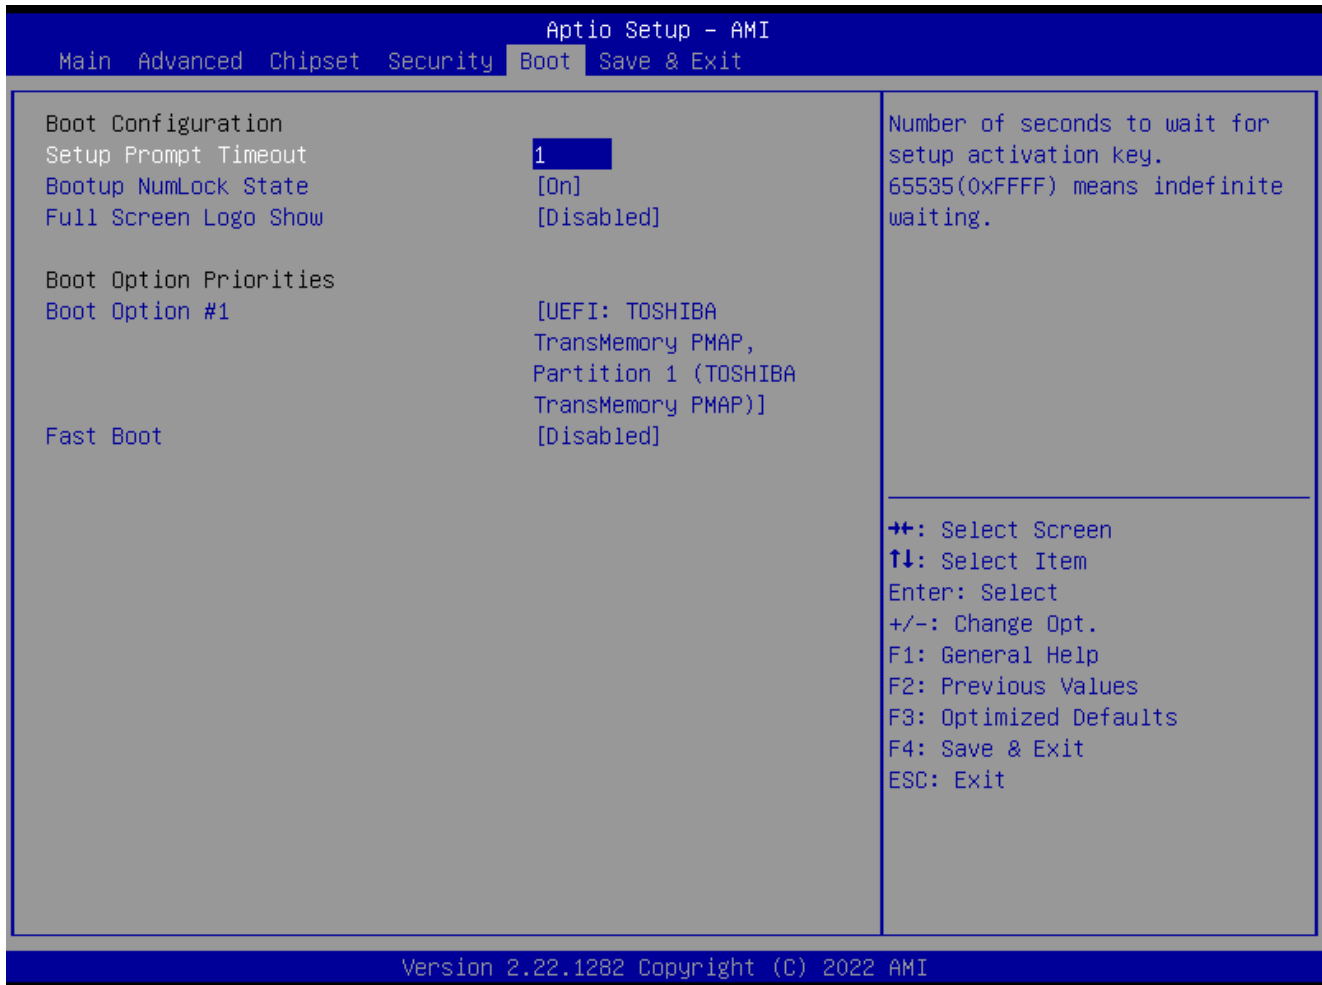

Item	Options	Description
Setup Prompt Timeout	1[Default]	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On[Default], Off	Select the Keyboard NumLock state.
Full Screen Logo Show	Disabled[Default], Enabled	Enables or disables Full Screen Logo Show option.
Fast Boot	Disabled[Default], Enabled	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
Boot Option #1		Set the system boot order.

4.7 Save & Exit

This setting allows users to configure the boot settings.

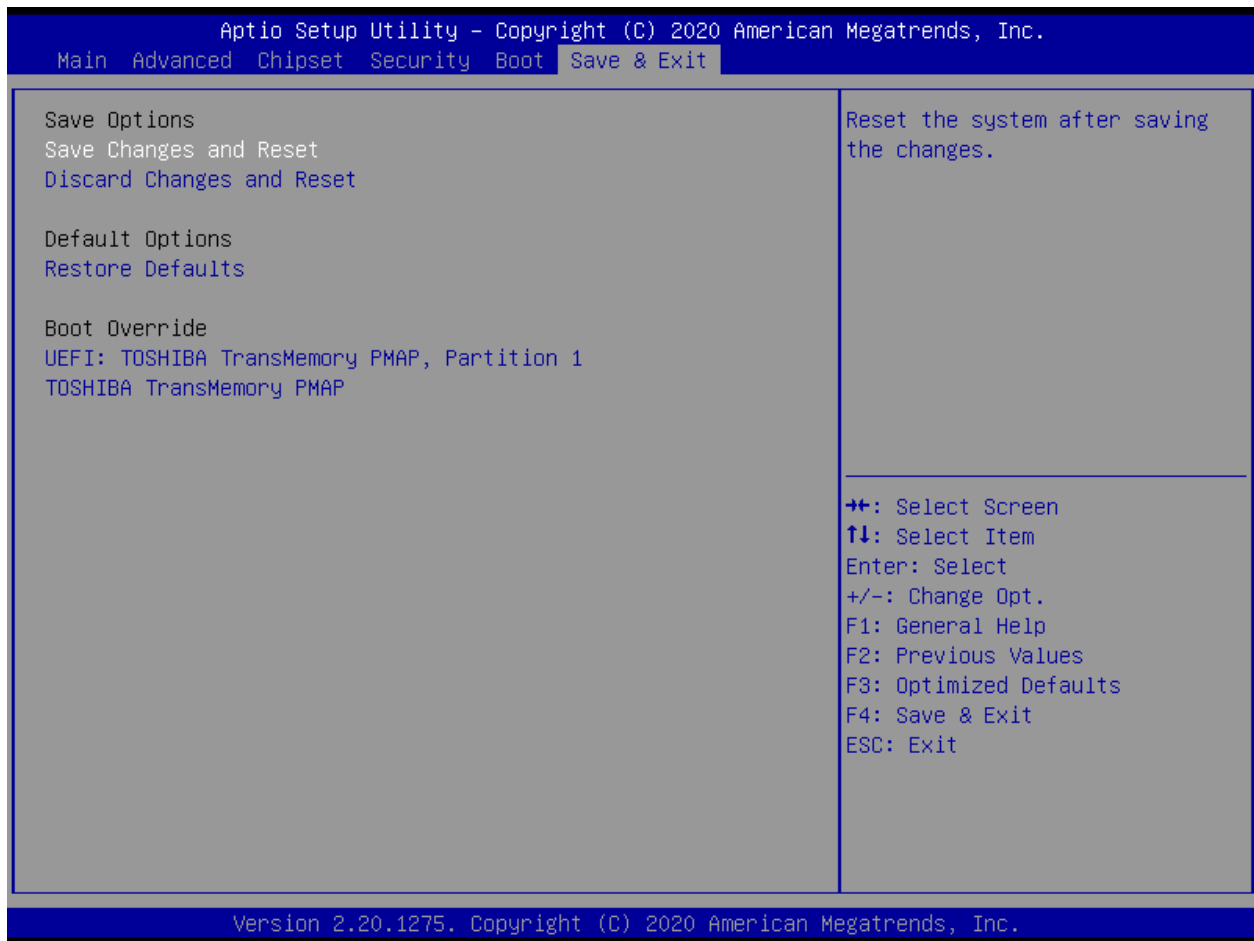

■ Save Changes and Reset

This item allows user to reset the system after saving the changes. This item allows user to reset the system after saving the changes.

■ Discard Changes and Reset

This item allows user to reset the system without saving any changes.

■ Restore Defaults

Use this item to restore /load default values for all the setup options.

Appendix

WDT & GPIO

This appendix provides the sample codes of WDT (Watch Dog Timer) and GPIO (General Purpose Input/ Output).

WDT Sample Code

WDT Setting

Pseudo Code

// IO Address 0xA16 is time value(second)
 // IO Address 0xA15 is WDT enable and configuration
 Example, Set 0xA16=0x02, 0xA15=0x31, it will reset after 2 seconds

```
#define TimePort      0xA16
#define TimeEnablePort 0xA15
```

//Set WDT Time Unit

```
buf1 = ReadByte(TimeEnablePort) & 0xf7; //Clear WDT mode.
// buf1 |= 0x08; //Bit3 :(1:Minute Mode/0:Second Mode)
WriteByte(TimeEnablePort, buf1);
```

//Set WDT Time Value

```
WriteByte (TimePort , 0x02); // Set 2 seconds
```

//Enable WDT

```
buf1 = ReadByte(TimeEnablePort);
buf1 |= 0x31;
//Bit5 :WD_EN,If this bit is set to 1, the counting of watchdog time is enabled.
//Bit4 :WD_PULSE ,Select output mode (0: level, 1: pulse) of WDTRST# by setting this bit.
//Bit1~0: Select output pulse width of WDTRST#. 0: 1 ms, 1: 25 ms, 2: 125 ms, 3: 5 sec.
WriteByte(TimeEnablePort, buf1);
```

// Disable WDT

```
buf1 = ReadByte(TimeEnablePort); // Read current WDT setting
buf1 = buf1 & 0xDF; // Disable WDT by set WD_EN (bit 5) to 0.
WriteByte(TimeEnablePort, buf1); // Write back WDT setting.
```


GPIO Sample Code

GPIO Setting

IO_DO4	I/O 0xA02h Bit3
IO_DO3	I/O 0xA02h Bit2
IO_DO2	I/O 0xA02h Bit1
IO_DO1	I/O 0xA02h Bit0
IO_DI4	I/O 0xA03h Bit7
IO_DI3	I/O 0xA03h Bit6
IO_DI2	I/O 0xA03h Bit5
IO_DI1	I/O 0xA03h Bit4

The GPIO function is provided by SIO, and it can be accessed through its GPIO port. To access the GPIO register, write value to data port. The configuration on the WCO-3000-EHL is described as below.

Psuedo Code

```
#define GPI_ADDR 0xA03h
```

```
#define GPO_ADDR 0xA02h
```

```
// 0xA03h is Pin Status(default 0xF5 )(at IO_DI1(Bit4) ~ IO_DI4(Bit7))
```

```
ByteData = ReadByte (GPI_ADDR) //Read current Pin Status
```

```
//Offset 0xA02h default setting is 0x5F (output pin set to output high) (at IO_DO1(Bit0) ~ IO_DO4(Bit3))
```

```
ByteData = 0x0F //set IO_DO1~ IO_DO4 to high
```

```
WriteByte (GPO_ADDR, ByteData)
```

